




1-800-477-6655
buyritebeauty.com

KEATON STYLING CHAIR NIN-6635


INSTRUCTION MANUAL




List of Parts & Tools

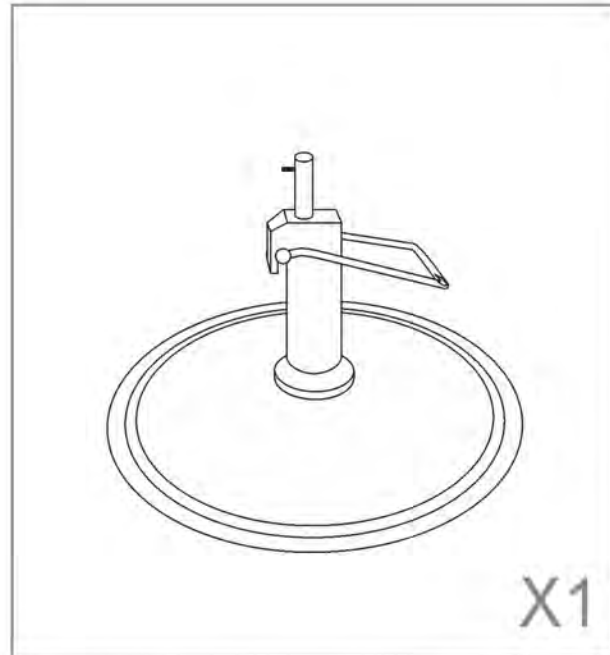

Hydraulic Base
and Pump

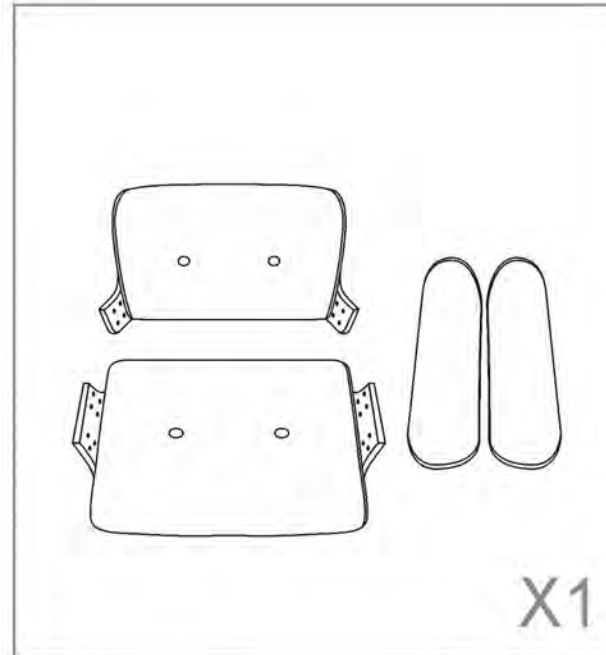


Chair Components

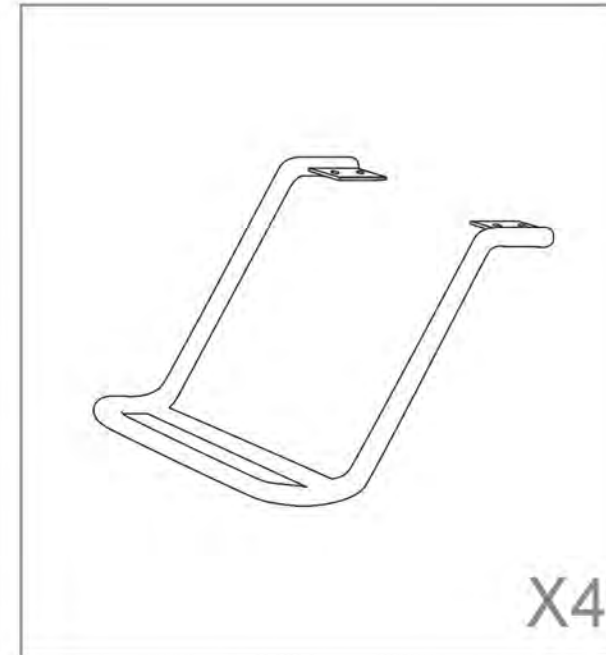


Footrest




14mm

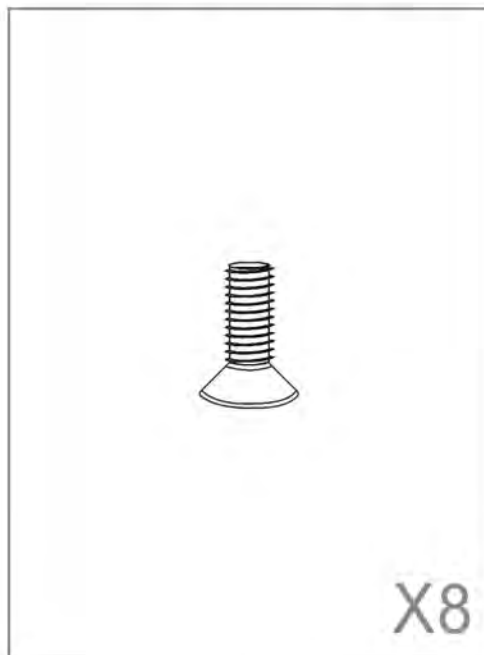


Black M6x14mm

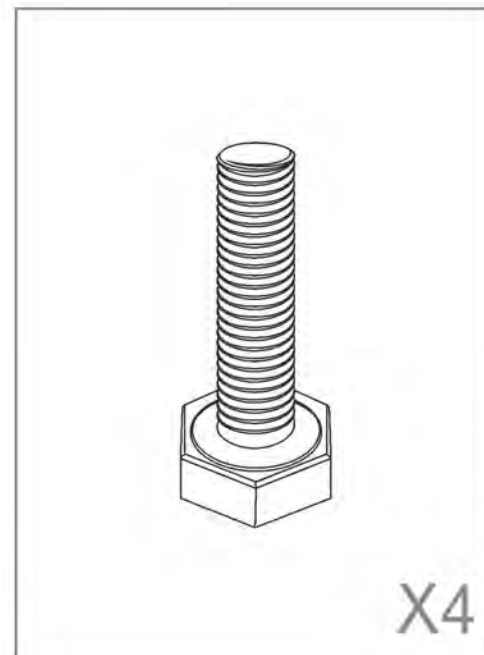


Armrest Screws
M8x40mm

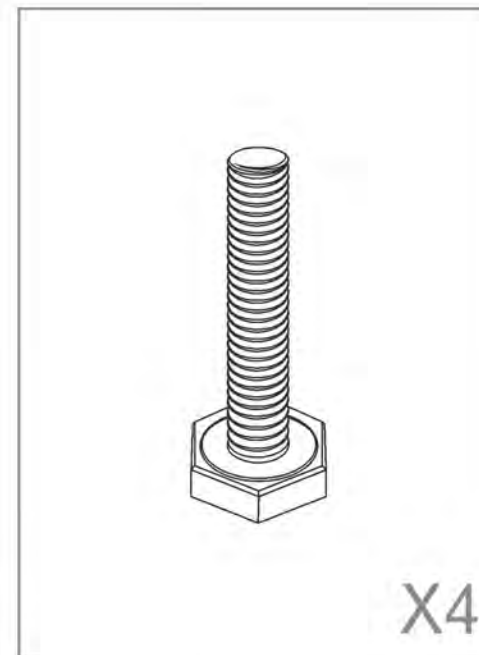

Silver M8x25mm

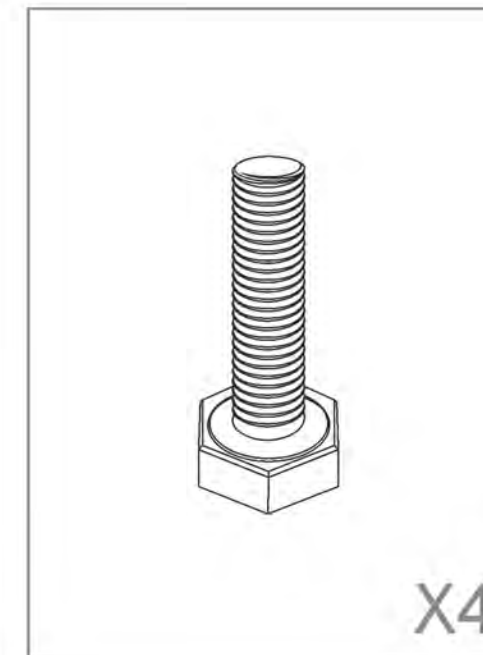


M8x30mm
Footrest Screws
Pre-Installed

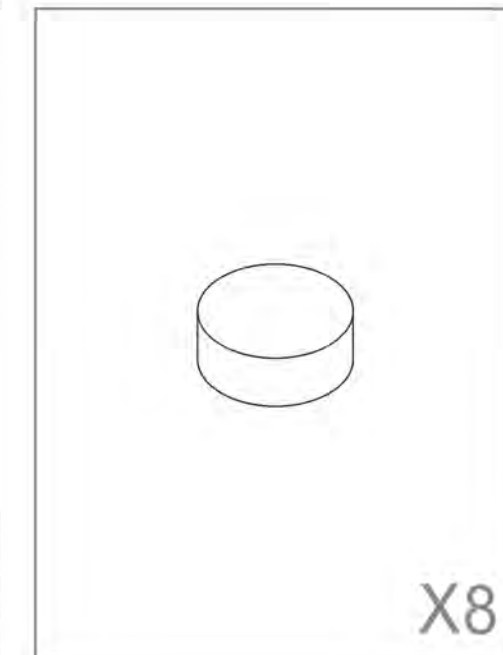


Screw Covers

Step 1

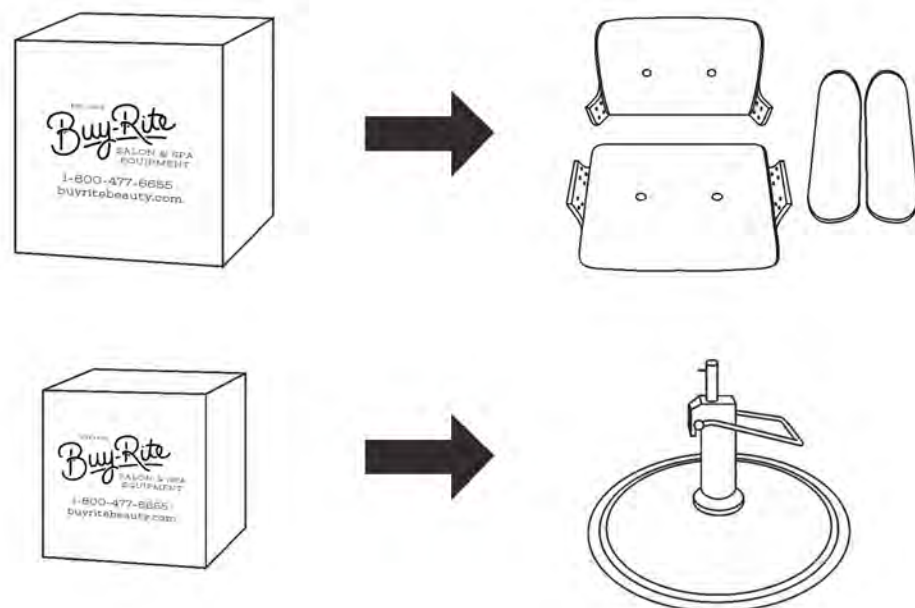


1. Carefully remove the chair components and hydraulic base from their respective shipping cartons.

Step 2

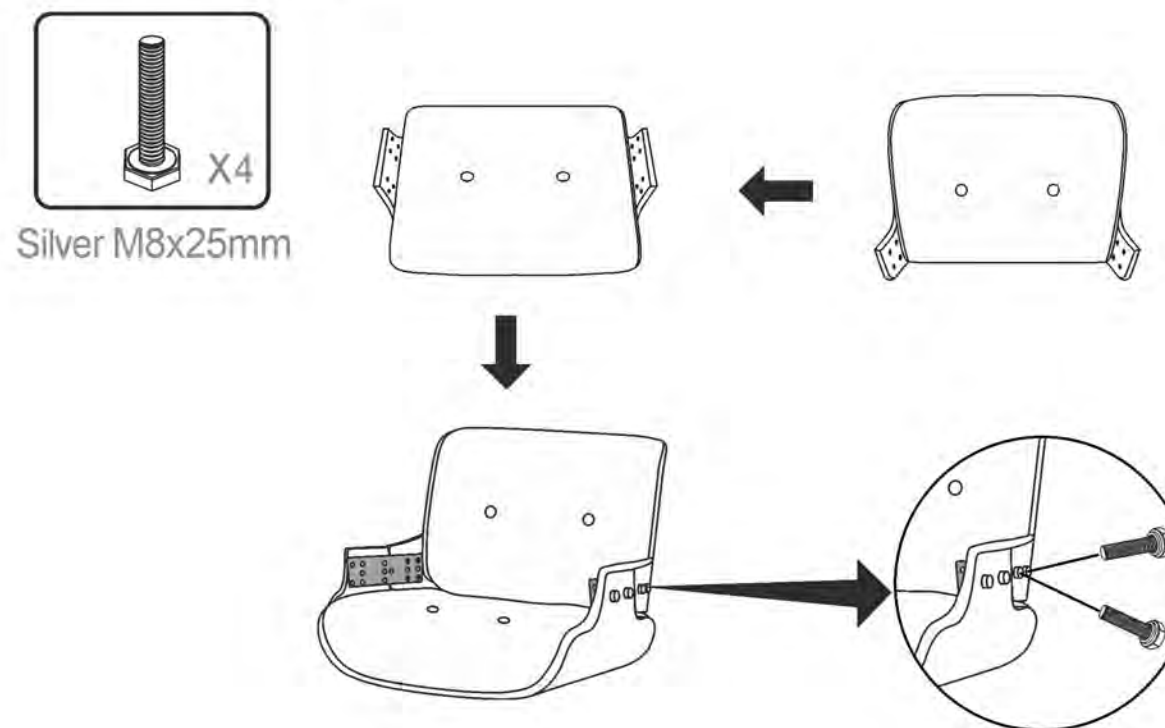


1. Align the holes in the backrest with the brackets on the chair seat. Fasten the backrest by inserting two (M8x25mm) screws through the outer side of each bracket.

Step 3

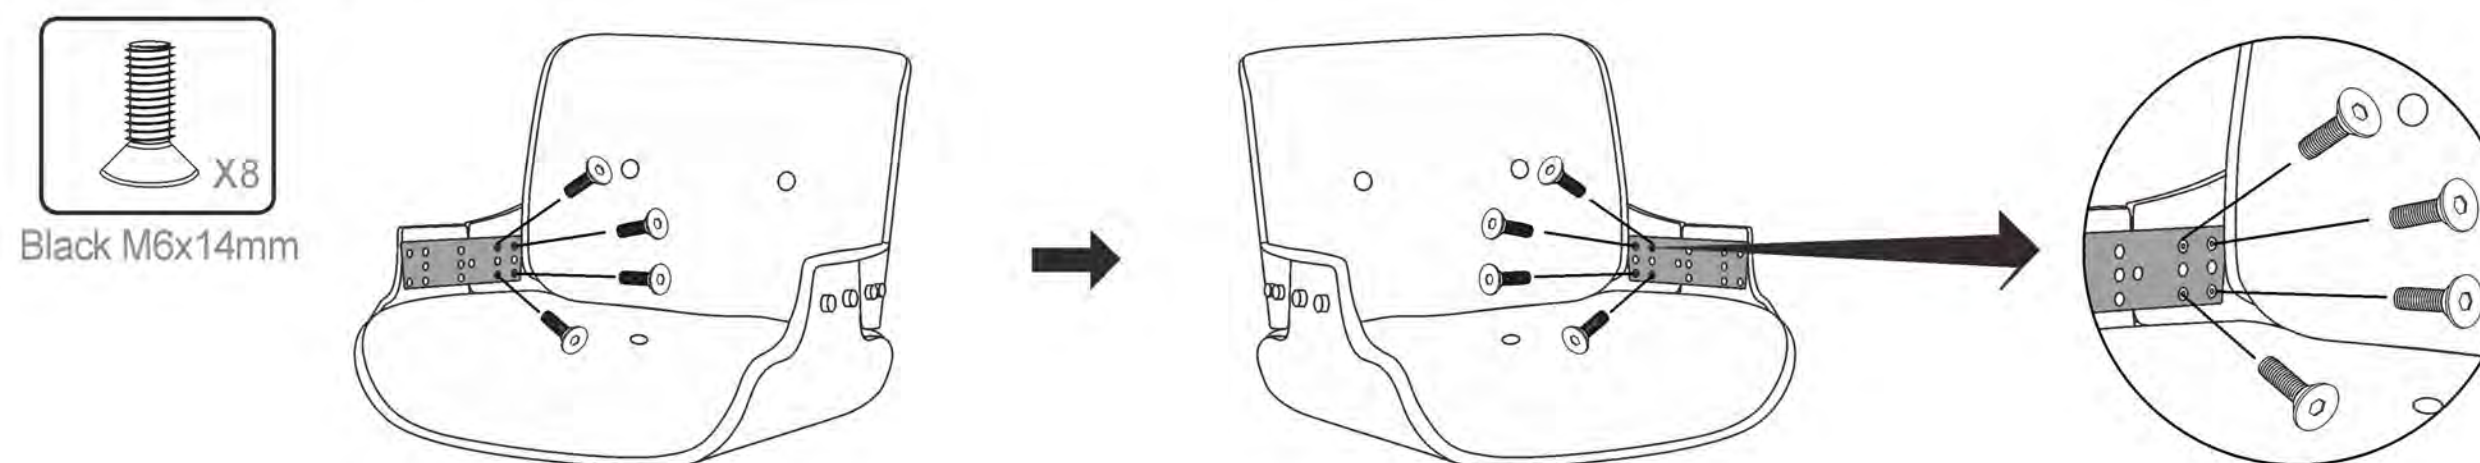


1. From the inside of the chair insert four (M6x14mm) screws on both sides of the chair. Please see illustration above.

Step 4

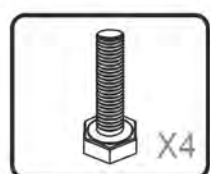


Armrest Screws
M8x40mm

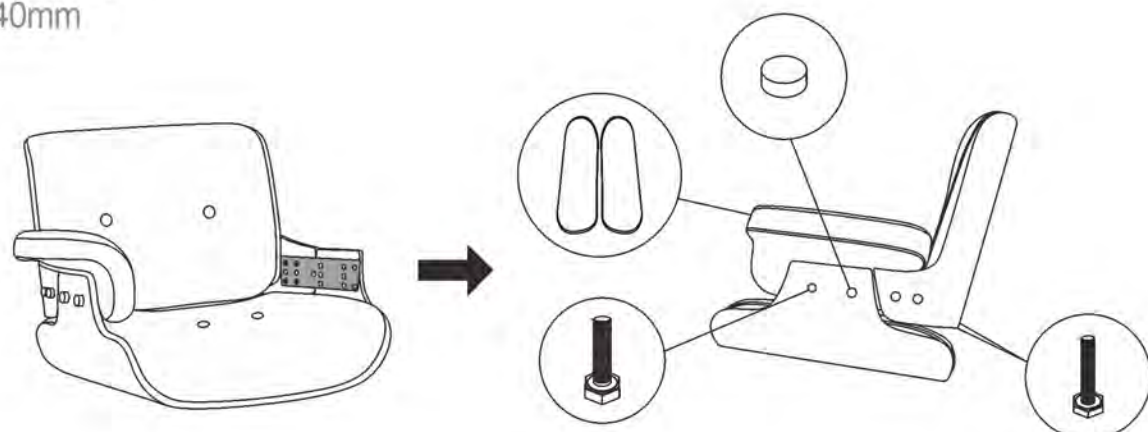


1. Install the left and right armrests on their respective sides, securing each with two (M8x40mm) screws inserted from the outer side of the armrest.

Step 5

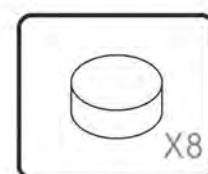


Screw Covers

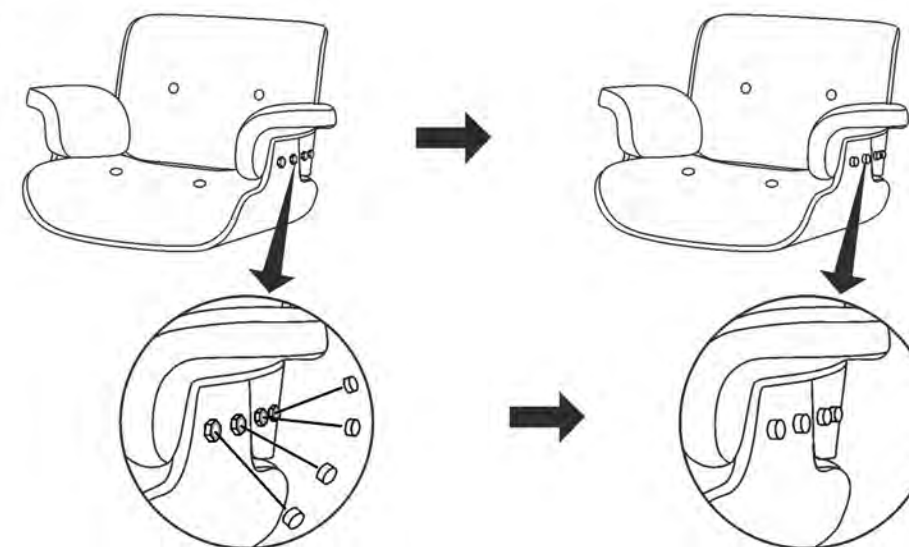


1. Before use, confirm that all screws are fully tightened, taking care not to overtighten. Then place the eight screw covers over the exposed exterior screws.

Step 6

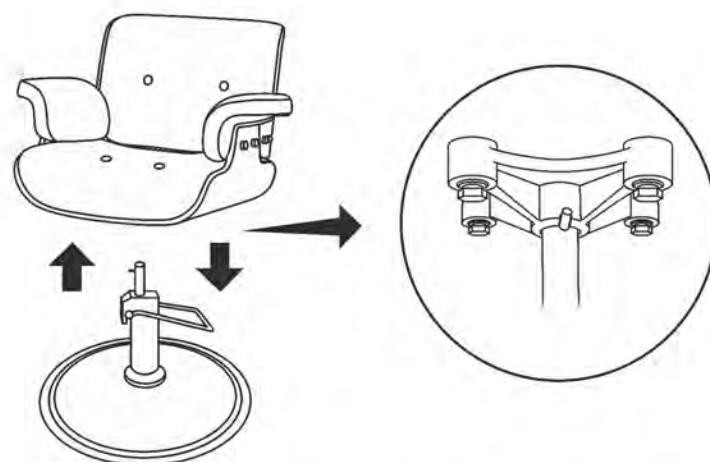

1. To securely attach the chair top to the hydraulic base, align the notch in the seat bracket that is located on the bottom of the chair with the pin on the metal shaft of the hydraulic and place the chair top on the base. Ensure the pin on the metal shaft and the notch in the seat bracket align for proper installation.
2. Carefully sit in the chair to ensure the metal shaft is fully secured into the seat bracket. Note the pin will not slide fully into the top of the seat bracket.
3. If the chair top is not stable, repeat steps 1 and 2 above. Additionally, check the screws on the bottom of the hydraulic base that secure the pump to the base plate to confirm they are securely tightened.

Step 7

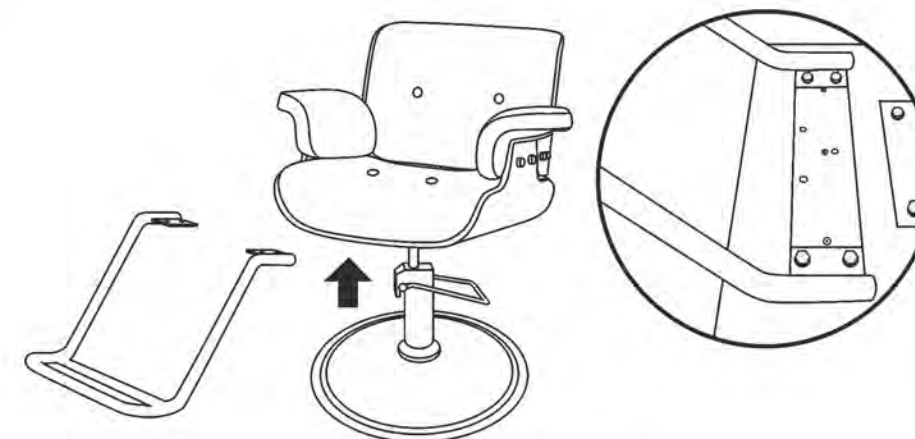

1. Locate the 2 screws on each side of the bottom of the chair top. Using the 14mm wrench provided, remove the screws from the chair top. Align the holes on the footrest with the holes in the chair top and insert one screw on each side to ensure the footrest does not fall. Then apply the other two screws on each side and tighten all four screws.
2. Ensure all screws are tight and secure prior to use but be careful not to overtighten.


Product care




Brush away excess hair



Clean surface with damp cloth or
use simple soap & water solution

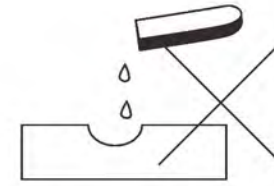

Avoid using corrosive cleaning
agents such as bleaches

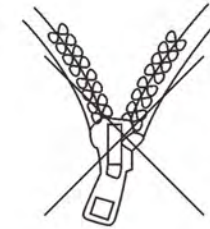

Do not remove upholstery for
cleaning

Product Information

1. Enjoy your new chair!
2. Remember to always keep the hydraulic base in the upright position and never stand solely on the footrest as it will tip.
3. After assembly and before use, we suggest pumping the hydraulic to full height and back down several times to prime the hydraulic fluid. This will keep the pump smooth and responsive.
4. Note that short quick pumping is more effective for adjustments than pressing the lever all the way down each time.
5. If you have any questions or concerns, please contact our customer experience team at 912-335-4445.