



The Allegro Styling Station Assembly Instructions

Key -

M – Mirror + Mirror Backboard

J – Large Panel that mirror will attach to

B1 – Top Board of Station

B2 – Bottom Board of Station

E1 – Upper Permanent Shelf (Directly underneath B1)

E2 – Lower Permanent Shelf (Directly underneath the Appliance Drawer H)

H – Appliance Drawer

F – Shelves

D - Door

1. Unpack all boxes. Confirm that package contents are complete.
2. Detach mirror from Panel J. This will be done by removing the two screws from the backside of the Panel J that are screwed into the backside of the mirror backboard. This will be done by using a using the supplied Allen Wrench / Hex 4mm. Refer to Appendix A, Picture 1 that references from where to detach the mirror. Please take note or mark which side Place mirror very carefully to the side in a safe position until later steps.
3. Place Panel C on one of its long edges.
4. Attach B1 (Top Board of Station) and B2 (Bottom Board of Station) to the top and bottom edges of Panel C as shown in Appendix A, Picture 2a and 2b. B1 and B2 are the top and bottom boards of the station. Panel C is the center divider of the station. Use provided screws to attach B1 and B2 to Panel C by screwing in to the bottom and top edges of Panel C.
5. Attach Panel A (the backside panel of the complete station – the larger panel that did not have the mirror attached to it) to Panel C, B1, B2. Panel A will have the hinge plates pre-attached to the inside of the panel and will also have plastic feet at the bottom. This will be done by using the provided screws to screw into the pre-dilled screw holes on the edges of Panel C, B1, and B2 from the backside of Panel A (the side without the hinges). Refer to Pictures 3a, 3b, and 3c in Appendix A.



6. Place structure on its side so that Panel A is on its longest edge and B1/B2 are both laying on its shorter edges (refer to Picture 4a and 4b).
7. Attach permanent Shelf's E1 and E2 to the middle of Panel A. This will be done by using provided screws to screw into the pre-drilled screw holes on the edges of permanent Shelf E1 and E2 from the backside of Panel A (the side that will go against the wall). Please refer to pictures 4a, 4b, 4c, and 4d.
8. Turn Station over to where the backside of Panel A is on the floor and the inside of the station is facing to the air. Refer to Pictures 5a and 5b.
9. Place Panel J on top of the station so that the inside of the station (as was shown in pictures 5a and 5b) is now covered up by Panel J as shown in Picture 6a. Attach Panel J by using the provided screws to screw into the pre-drilled screw holes on the edges of B1, B2, Panel C, E1, and E2 from the front-side of Panel J (where the mirror will later be attached). Make sure the plastic feet on Panel J are on the same side as the plastic feet on Panel A. Refer to Picture 6a.
10. While Panel A is still flat on the ground, re-attach the mirror to the front-side of Panel J. Please note, as shown in Picture 7c, the bottom of the mirror is the side which measure approximately 12" from the edge of the mirror to the pre-drilled hole on the backside of the mirror. To attach the mirror to Panel J, place mirror on top of Panel J. Using the screws that were taken out earlier in Step 2, attach mirror by screwing provided screws into pre-drilled holes on the back-side of the mirror board from the backside of Panel J. One screw will be screwed in from the backside of Panel J which is located in between B1 and E1. The bottom screw will be screwed into pre-drilled holes on the back-side of the mirror board from the backside of Panel J, which is located in between E2 and B2. Make sure to tighten securely before releasing. Please refer to Pictures 7a and 7b. Note, we highly advise completing this step while Panel A is flat on the ground rather than standing straight up (in our pictures we show this step completed while the station is standing, but we highly suggest completing this while station is flat on the ground as shown in Picture 6a).
11. Stand station up so that the plastic feet or against the floor.
12. Attach Door D to hinges on the inside of Panel A. Loosen the screws that are already attached to hinges on Panel A. Proceed, by sliding in the hinges on Door D into hinges on Panel A. Once hinges on Door D and hinges on Panel A are correctly positioned together, tighten screws on hinges attached to Panel A. Refer to Picture 8a.



13. Attach Half-Moon shelf to the front-side of Panel J. To do this, remove the bolts from the Half-Moon Shelf by using a 14mm wrench. In order to attach the Half-Moon shelf, you will need to place bolts through the back-side of Panel J to line up with the backside of the half-moon shelf. Fasten bolts into half-moon shelf by using a 14mm wrench. Refer to Pictures 9a and 9b.
14. Install remaining shelves by placing on top of shelf pins through the interior of the station.

Appendix A

Picture 1 -



Picture 2a -



Picture 2b -



Picture 3a –



Picture 3b –



Picture 3c –



Picture 4a –



Picture 4b –



Picture 4c –



Picture 4d –



Picture 5a




Picture 5b –



Picture 6a –



Picture 7a –

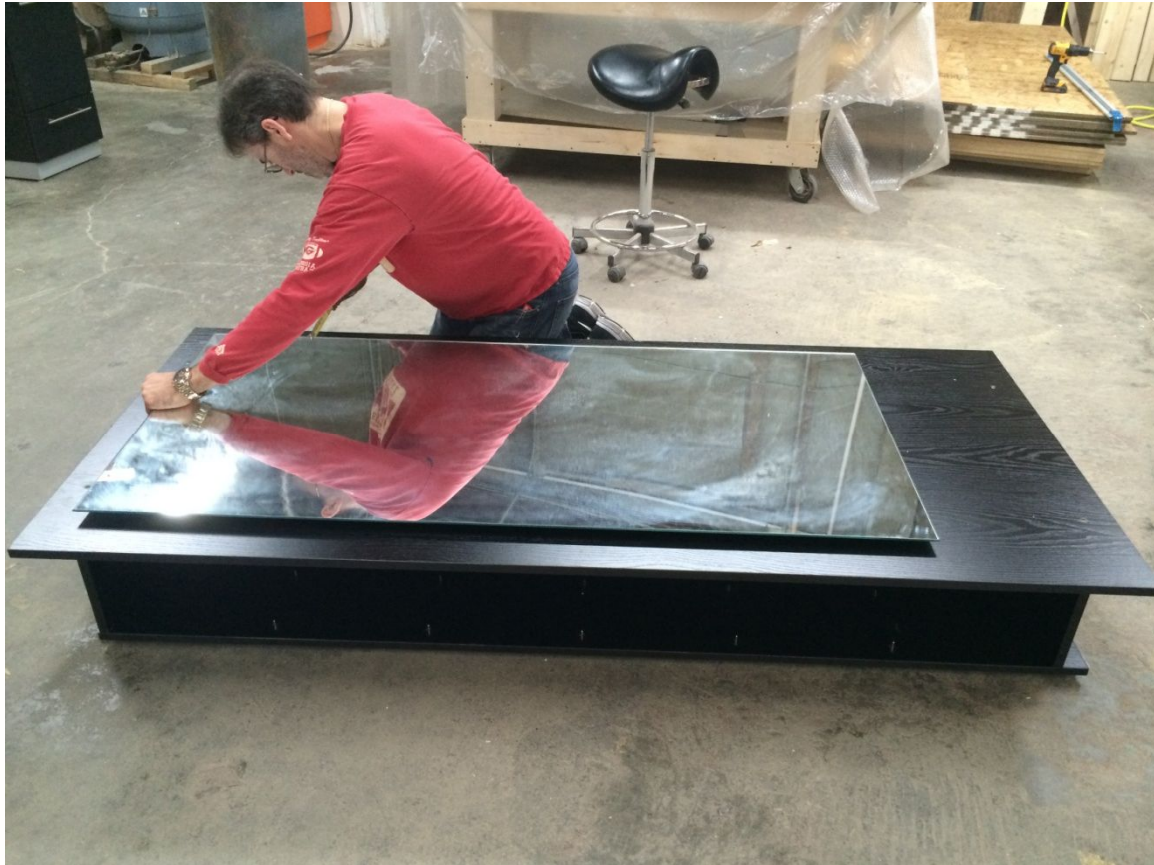

Picture 7b –



Picture 7c –



Picture 8a –



Picture 8b –



Picture 9a –



Picture 9b –

