

IMPORTANT: Please read through all instructions before assembly. Assembly should only be carried out by qualified persons. Improper assembly may lead to product damage and/or injury.

Fasten a screw on one side of each bar until almost snug [do not tighten].

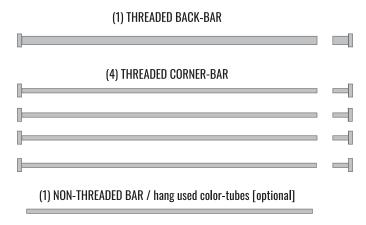

2. Slide the BACK-BAR all the way through the left side panel until it reaches the attached screw. Place the other end through the right side panel and fasten the screw loosley.

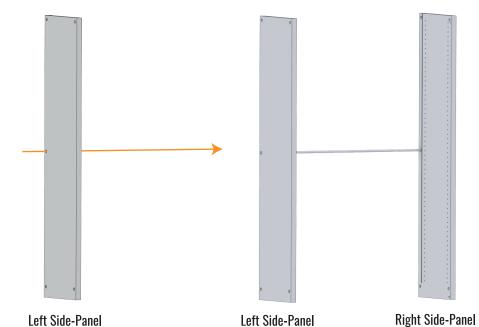

3. Slide the CORNER-BAR all the way through the LEFT SIDE PANEL until it reaches the attached screw.

Place the other end through the RIGHT SIDE PANEL and fasten the screw loosley. Repeat for all 4 corners.





 $oldsymbol{3C}_{ullet}$ Fasten all the screws down. [DO NOT TIGHTEN].

4. Place the BOTTOM PANEL over the Bottom Rods. Make sure they encapture both rods fully.




Unfold the BACKBOARD and place the label in the middle of the crease [keeps the board stiff].

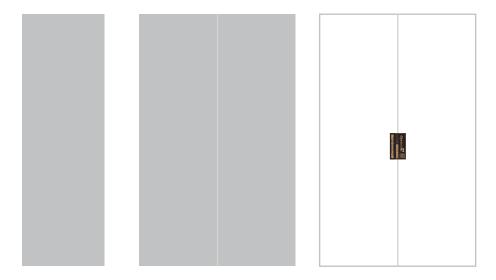


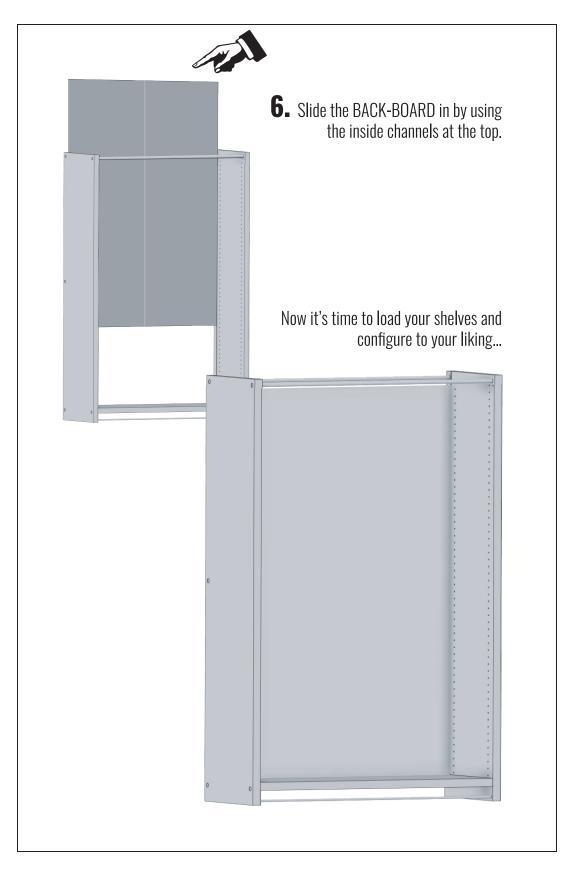

INSTALLING THE SHELVES

Align the back of the shelf on the rear pin. (A) As the shelf is rotated upwards, slide the front pin into the curled lip on the front of the shelf. (B) Next, slide a SHELF-PIN (C) to lock and secure the TOP PAN into place.

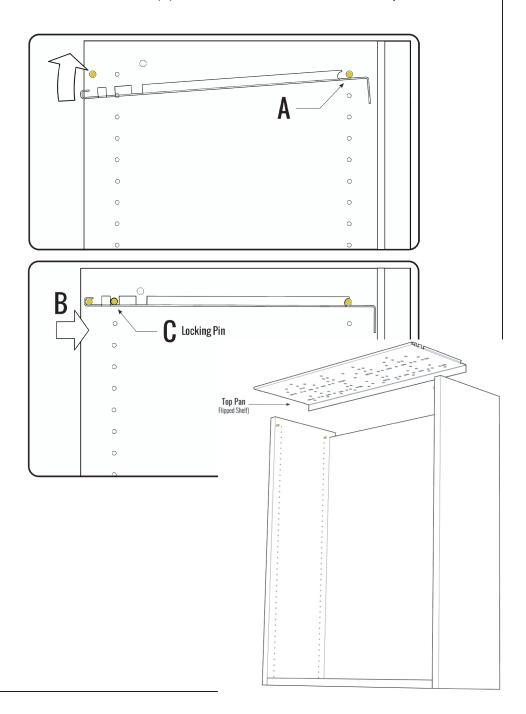

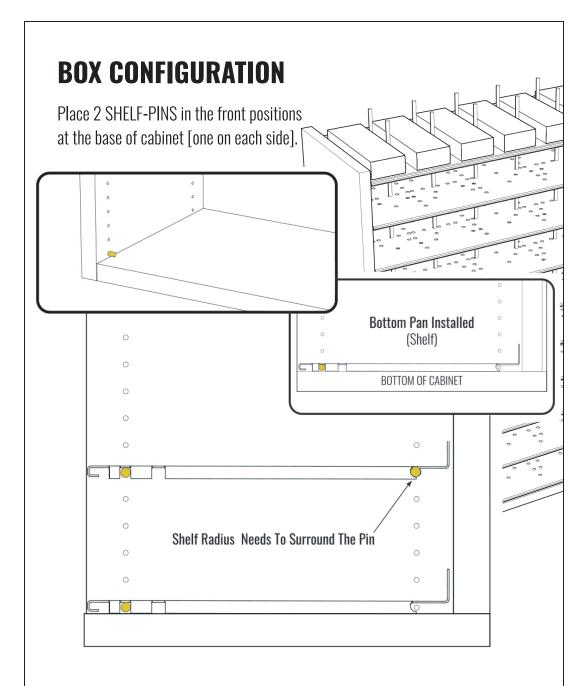

SHELF PLACEMENT


To determine how many boxes you want per subsection, just stack your boxes and place SHELF-PINS in the exposed holes above your stack. Make sure you place the shelf's radius around the rear SHELF-PIN.

NOTE: We recommend no more than six boxes per shelf depending on color-line.

BOTTLE CONFIGURATION


You need 4 open shelf-pin locations between each SHELF-PIN. You need to start at the second hole in the back, so that the shelf will pitch; to move the bottles forward.

NOTE: The top shelf will have 4 open shelf-pin locations in the back and 5 shelf-pin locations in the front.

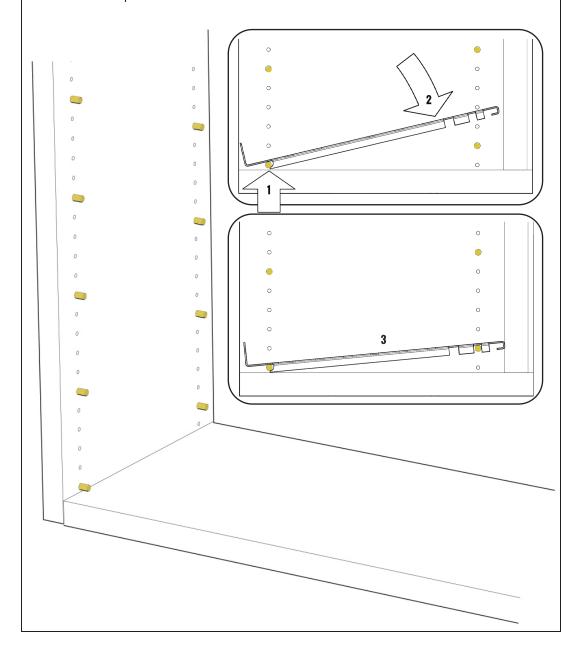


MULTIPLE HEIGHT CONFIGURATIONS


There are almost endless configuations* for your boxed tubes. However, for the BOTTLE and GOLDWELL CANISTER, there is only one configuration.

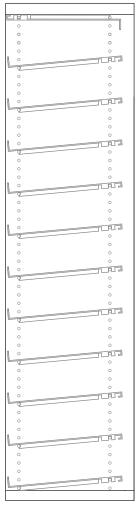

BOTTLE CONFIGURATION

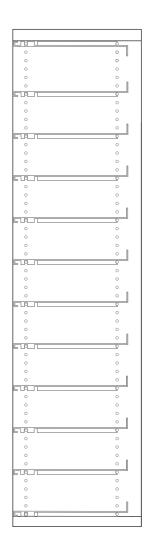

BOX CONFIGURATION

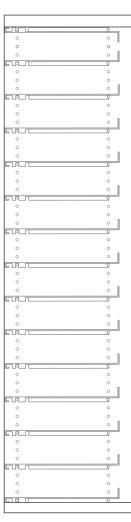


GOLDWELL CANISTER CONFIGURATION


NOTE: You must purchase 3PK shelves to achieve the GOLDWELL CANISTER CONFIGURATION shown.

^{*}Shelves move up and down to tailor-fit your salon's unique work-flow. We recommend no more than six boxes per subsection [depending on the color-line].


Make sure the rods go all the way to the bottom.



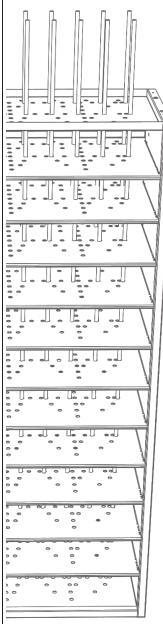





BOTTLE CONFIG.




1.25" W BOX CONFIG.




1.5" W BOX CONFIG.



1.75" W BOX CONFIG.



2" W BOX CONFIG.



2.5" W BOX CONFIG.





7. Place the TOP-PANEL over the Top Rods. Make sure they encapture both rods fully. Tighten all screws [don't over tighten].

Attach EZ Hang Rail system to your wall. Please read warning before proceeding.



WARNING:

Improper assembly or wall mounting may lead to damage and/or injury. Hardware for attaching this product to a wall is not included, for advice on suitable mounting hardware, contact a local hardware specialist.

8. Hang your unit onto the rail by utilizing the BACK BAR.

