




1-800-477-6655
buyritebeauty.com


FOLDABLE FOOTREST

NB-C-031B

INSTRUCTION MANUAL

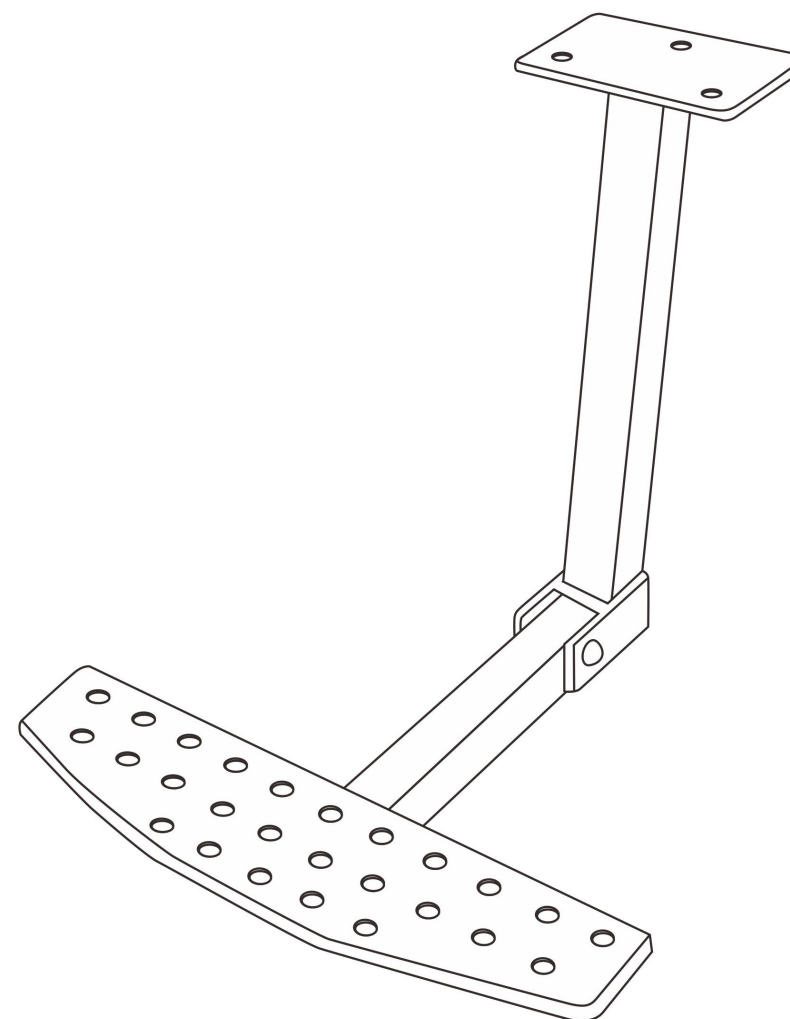


List of Parts & Tools

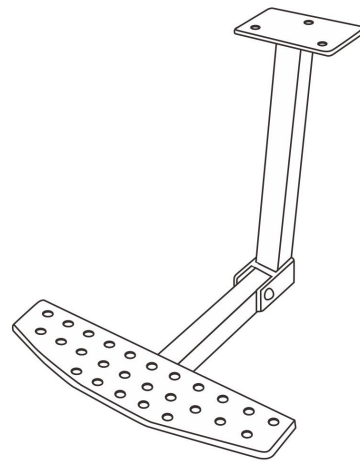


x1

Foldable Footrest

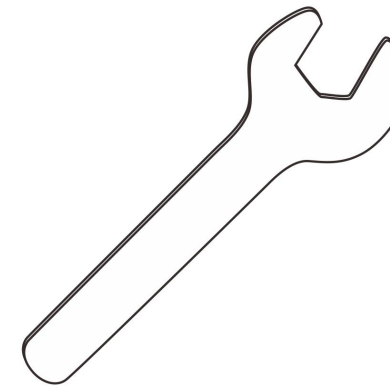


x1

14mm

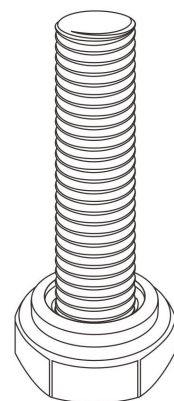

x3






M8x30mm

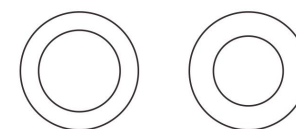

x 6

Washers





Step 1

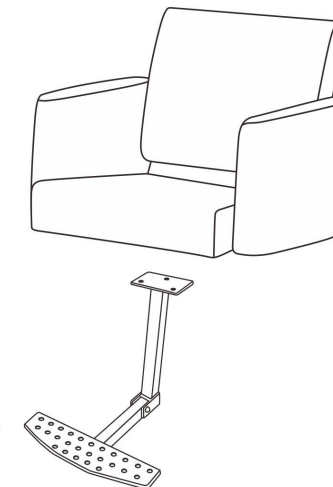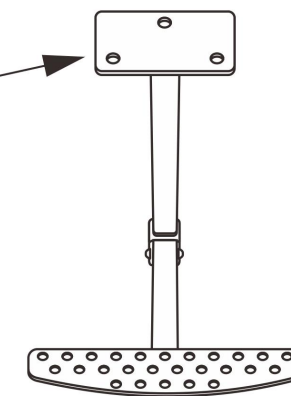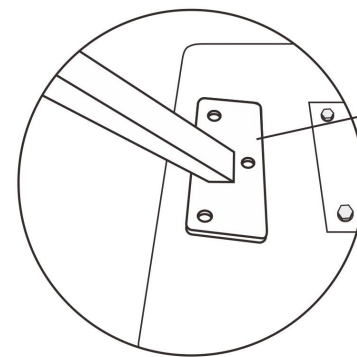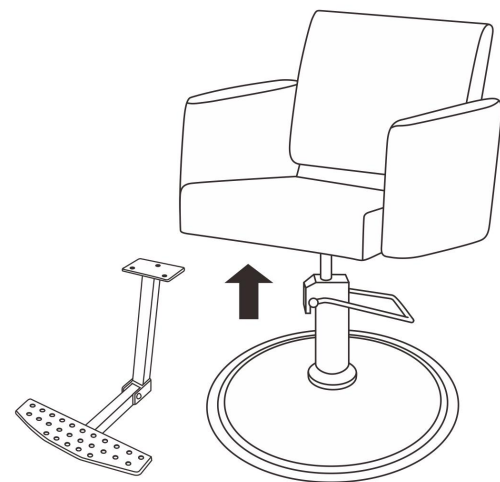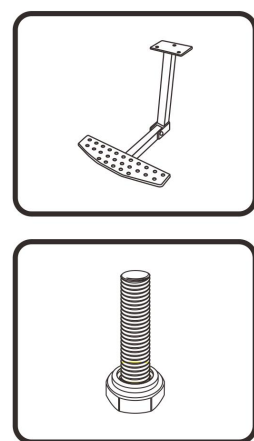

1. Align the holes on the foldable footrest with the middle mounting holes on the chair top. Insert one screw and washer into the center hole to hold the footrest securely in place. Then, install the remaining two screws and washers, tighten all three screws securely using the provided 14 mm wrench.

Step 2

With U-Footrest Pre-Installed

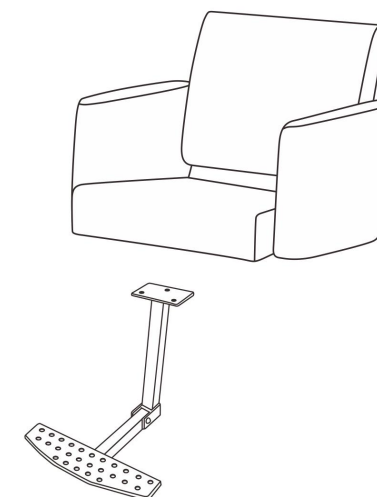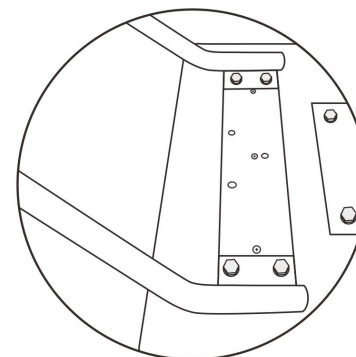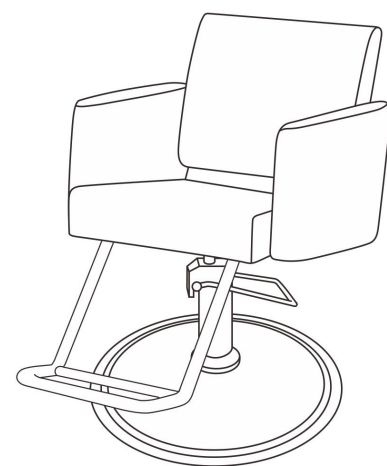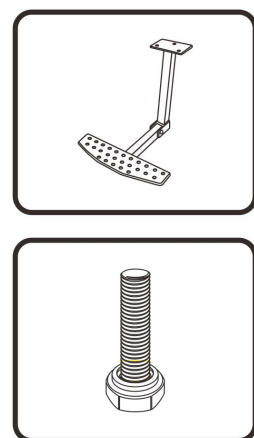

1. Locate the two screws on each side of the bottom of the chair top. Using the provided 14 mm wrench, remove all four screws. Then, carefully remove the W-type footrest from the chair top.
2. Align the holes on the foldable footrest with the middle mounting holes on the chair top. Insert one screw and washer into the center hole to hold the footrest securely in place. Then, install the remaining two screws and washers, tighten all three screws securely using the provided 14 mm wrench.