


EST.1936

**Buy-Rite**  
SALON & SPA  
EQUIPMENT


1-800-477-6655  
buyritebeauty.com

# OBSIDIAN STYLING CHAIR NIN-5502

## INSTRUCTION MANUAL

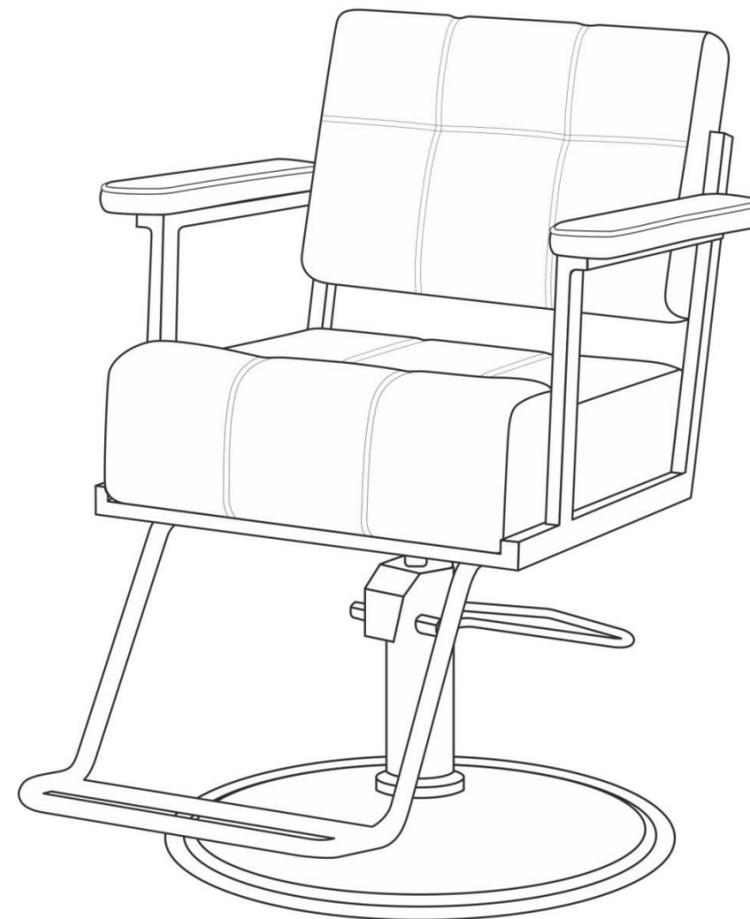


## List of Parts & Tools

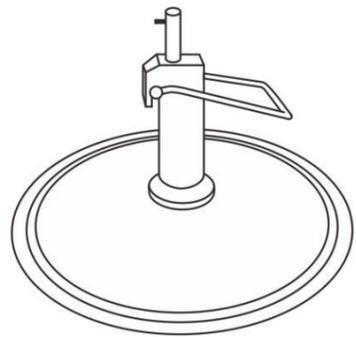


x1

Hydraulic Base and Pump

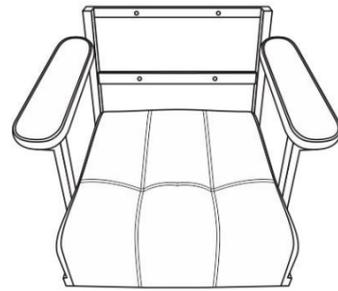


x1

Chair Top

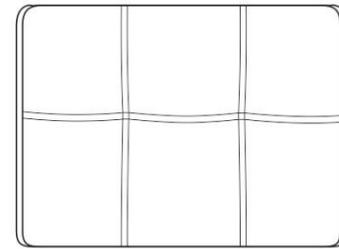


x1

Backrest

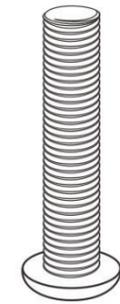


x4

M8x40mm  
Backrest Screws  
Pre-Installed

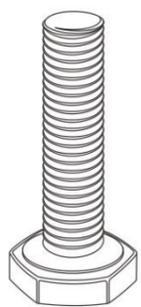

x4

M8x45mm  
Footrest Screws  
Pre-Installed

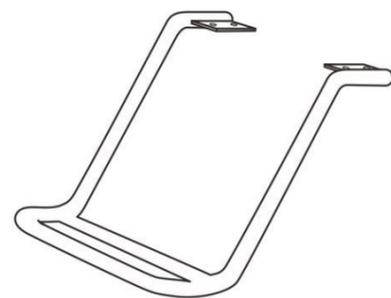


x1

Footrest



x1


Footrest- 14mm Wrench

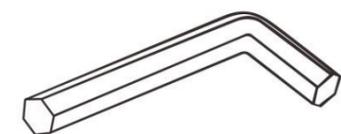

x1


Backrest- 5mm  
Allen Wrench

### Step 1

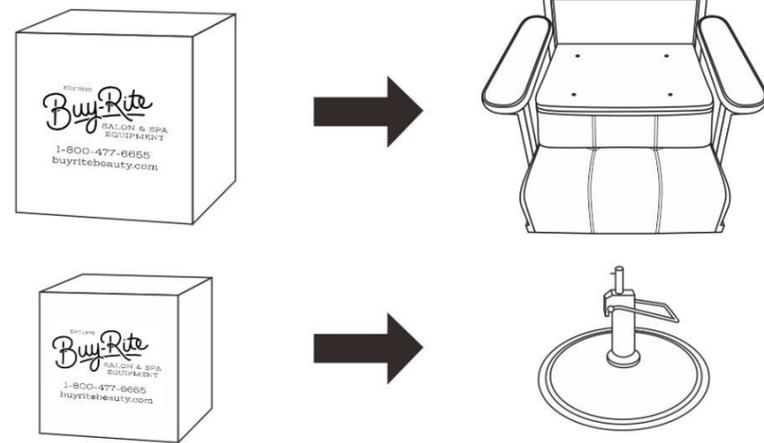


1. Carefully remove the chair top and hydraulic base from their respective shipping cartons.

### Step 2

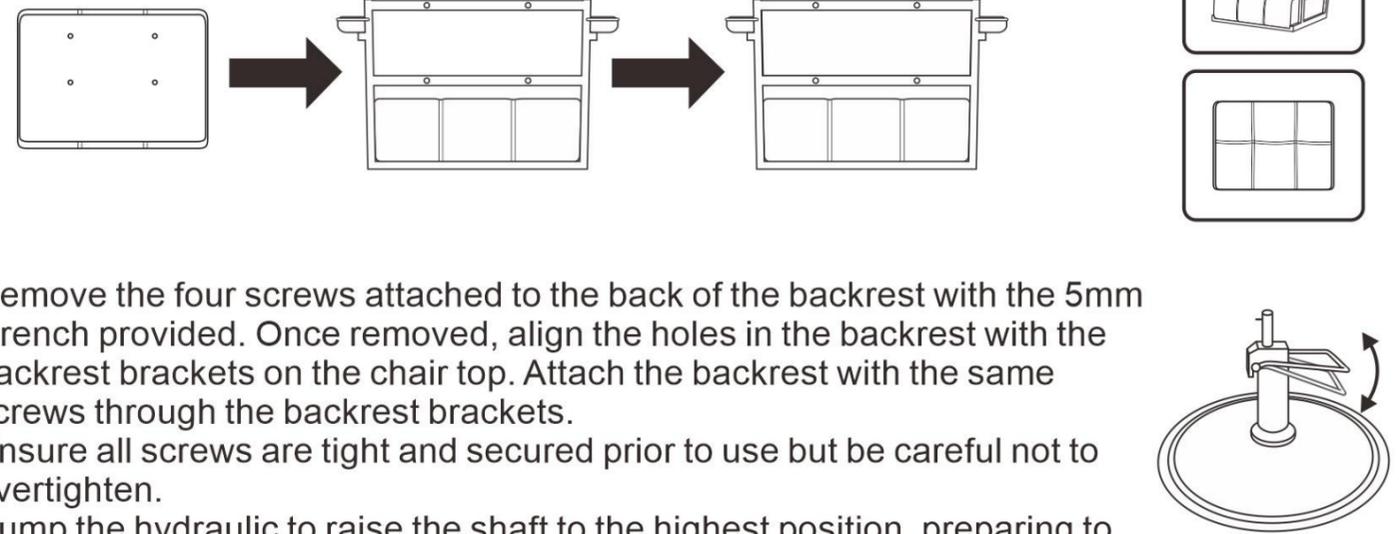


1. Remove the four screws attached to the back of the backrest with the 5mm wrench provided. Once removed, align the holes in the backrest with the backrest brackets on the chair top. Attach the backrest with the same screws through the backrest brackets.
2. Ensure all screws are tight and secured prior to use but be careful not to overtighten.
3. Pump the hydraulic to raise the shaft to the highest position, preparing to install the chair top on the hydraulic base.

### Step 3

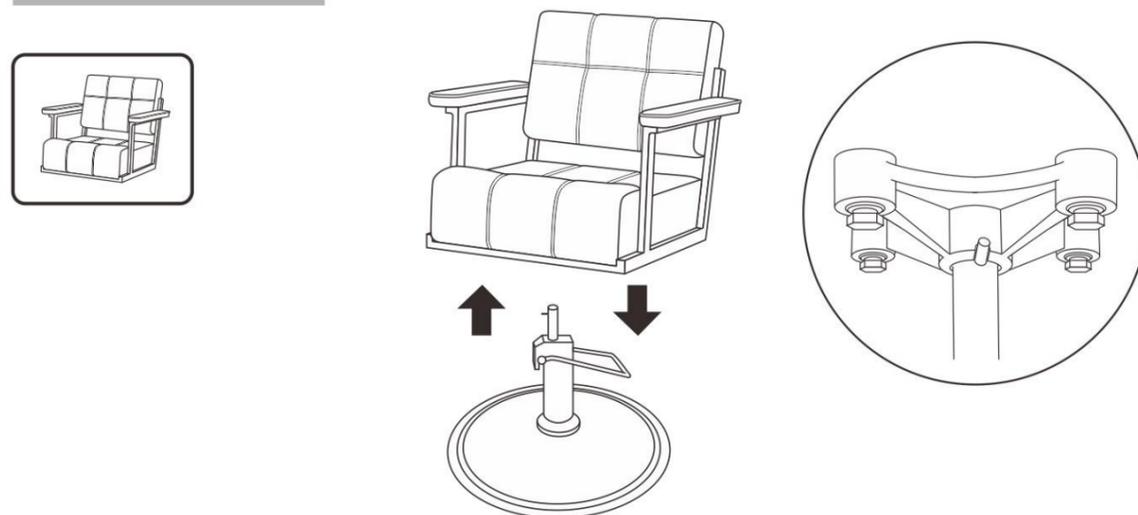

1. To securely attach the chair top to the hydraulic base, align the notch in the seat bracket that is located on the bottom of the chair with the pin on the metal shaft of the hydraulic and place the chair top on the base, Ensure the pin on the metal shaft and the notch in the seat bracket align for proper installation.
2. Carefully sit in the chair to ensure the metal shaft is fully secured into the seat bracket. Note the pin will not slide fully into the top of the seat bracket.
3. If the chair top is not stable, repeat steps 1 and 2 above. Additionally, check the screws on the bottom of the hydraulic base that secure the pump to the base plate to confirm they are securely tightened.

### Step 4

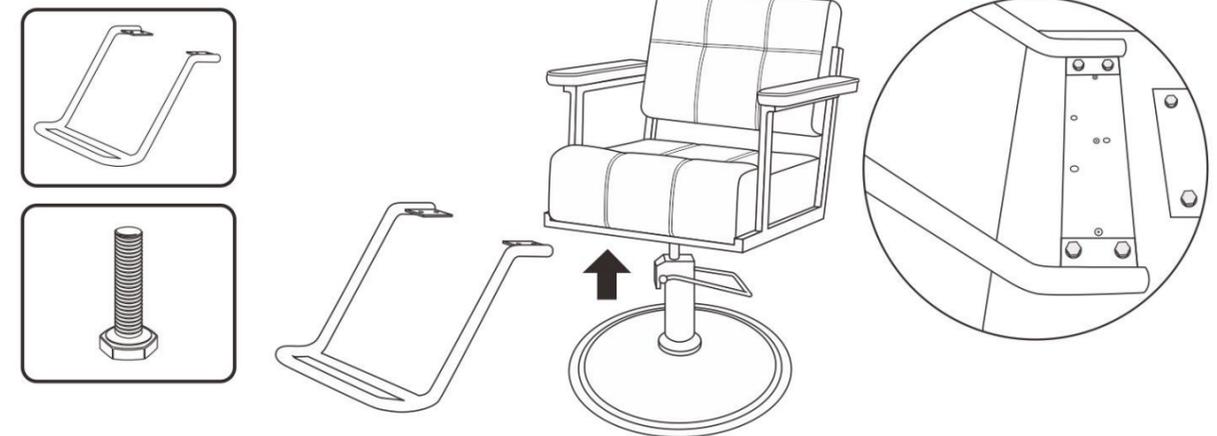


1. Locate the 2 screws on each side of the bottom of the chair top. Using the 14mm wrench provided, remove the screws from the chair top. Align the holes on the footrest with the holes in the chair top and insert one screw on each side to ensure the footrest does not fall. Then apply the other two screws on each side and tighten all four screws.
2. Ensure all screws are tight and secure prior to use but be careful not to overtighten.


## Product care




Brush away excess hair

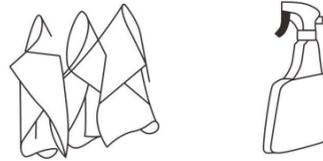

Clean surface with damp cloth or use simple soap & water solution

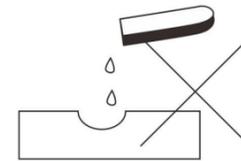

Avoid using corrosive cleaning agents such as bleaches

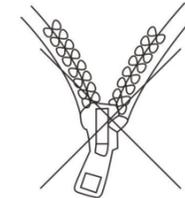

Do not remove upholstery for cleaning

## Product Information

1. Enjoy your new chair!
2. Remember to always keep the hydraulic base in the upright position and never stand solely on the footrest as it will tip.
3. After assembly and before use, we suggest pumping the hydraulic to full height and back down several times to prime the hydraulic fluid. This will keep the pump smooth and responsive.
4. Note that short quick pumping is more effective for adjustments than pressing the lever all the way down each time.
5. If you have any questions or concerns, please contact our customer experience team at 912-335-4445.