

1-800-477-6655 buyritebeauty.com


Maddox Barber Chair OD-31126 INSTRUCTION MANUAL



List of Parts & Tools






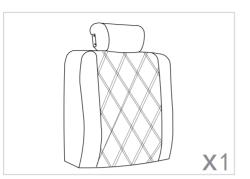

Backrest




Footrest Peg Extension

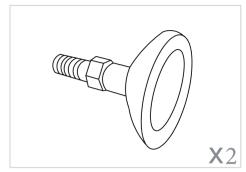


Footrest Peg



Footrest Bolt (Pre-installed)

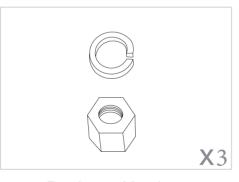


Backrest Hardware (Pre-installed)

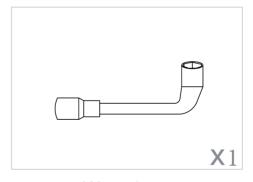



Wrench




Allen Wrench

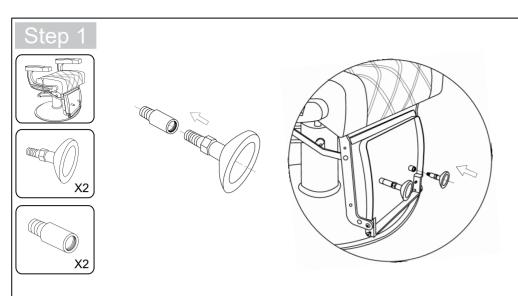





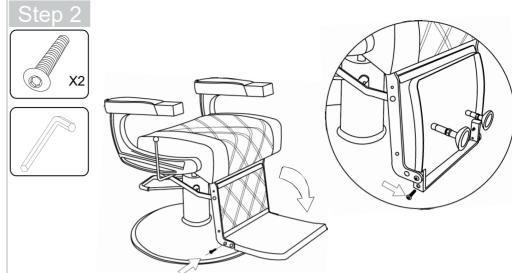

- 1. Remove the bottom screw from both sides of the footrest, slide the footrest into alignment with the corresponding mounting holes on the calf rest bars.
- 2. Insert the previously removed screws through the aligned holes. Use the wrench to tighten the bolt clockwise, ensuring it's fully secured. Avoid over tightening to prevent damage.

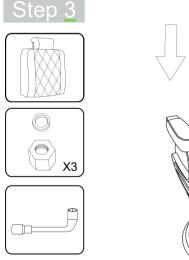

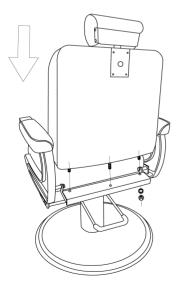


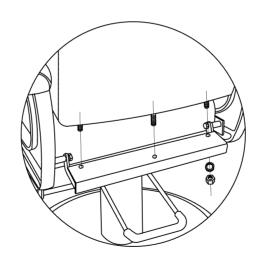





- 1. Locate the three nuts at the bottom of the backrest bolts. Remove the nuts and washers and set them aside.
- 2. Fit the backrest bolts into the matching holes on the backside of the chair frame. Align them so the backrest sits flush against the frame.
- 3. From the underside thread the nuts and washers back onto each backrest bolt by hand. Once all are hand-tightened, use a wrench to secure. Alternating sides to keep even pressure.
- 4. Apply steady force until they're secure but don't over tighten to avoid stripping the bolt or damaging the frame.



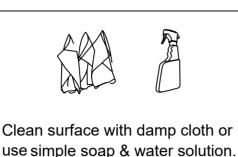

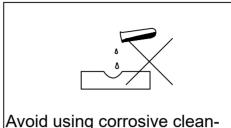



- **Enjoy your Maddox Barber Chair!**
- Remember to always keep the hydraulic base in the upright position and never stand solely on the footrest as it will tip.
- After assembly and before use, we suggest pumping the hydraulic to full height and back down several times to prime the hydraulic fluid. This will keep the pump smooth and responsive.
- Note that short quick pumping is more effective for adjustments than pressing the lever all the way down each time.
- If you have any questions or concerns, please contact our customer experience team at 912-335-4445