


# ROUND MIRROR


## TOOLS & MATERIALS REQUIRED



Screwdriver

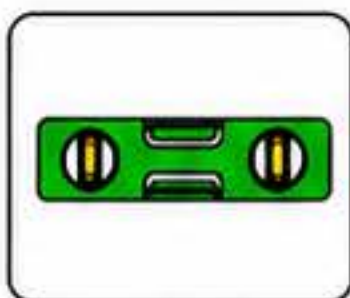

Spirit Level

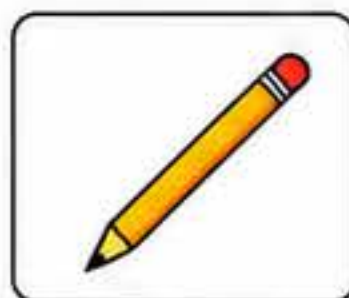

Pencil




Tape Measure



Drill


## INSTALLATION

### 1 MEASURE MOUNTING DISTANCE

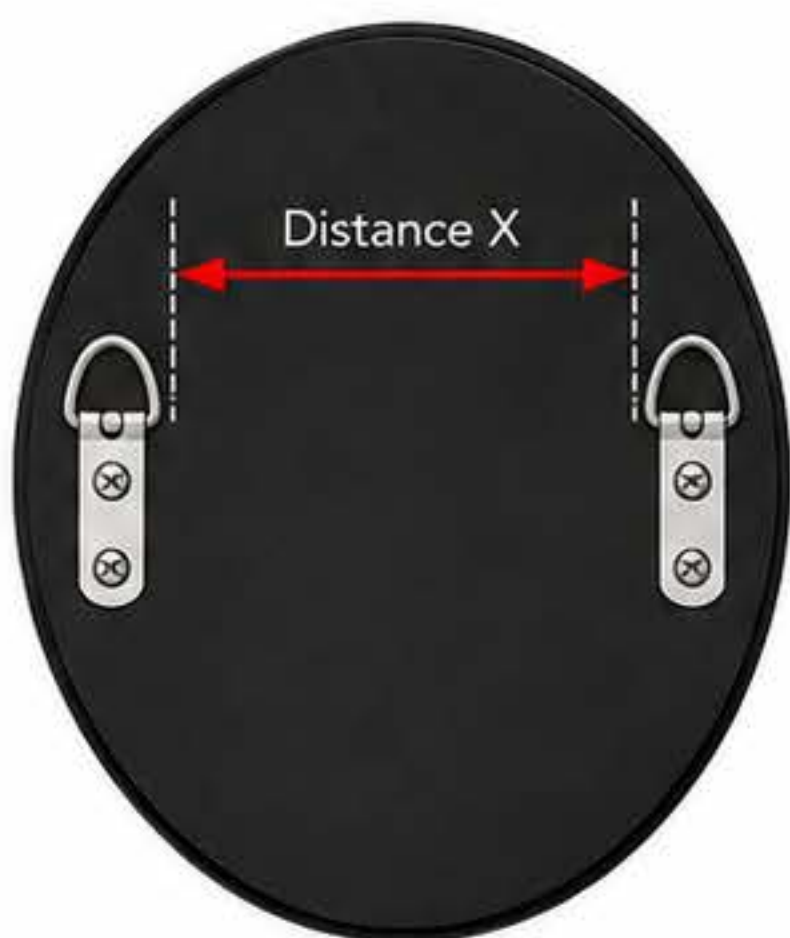

Measure and record the distance (X) between the centers of the mounting holes located on the back of the mirror.

### 2 MARK THE MOUNTING LOCATION

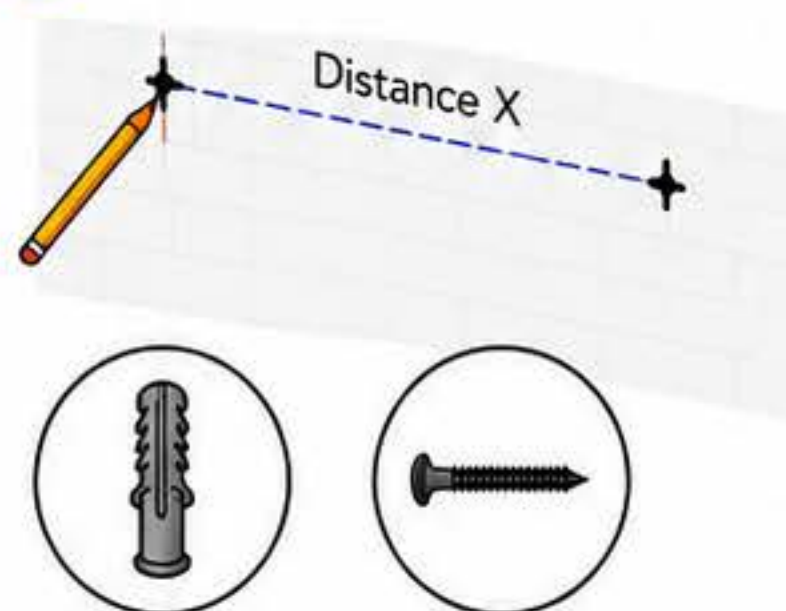

1. Using the Distance X measurement recorded in Step 1, transfer that measurement to the desired location on the mounting surface.
2. Use a spirit level to ensure the two marks are perfectly level.
3. Mark the locations for the mounting screws.
4. Drill pilot holes at the marked locations.
5. Insert the supplied wall anchors (if required for your mounting surface).
6. Install the mounting screws, leaving approximately 5 mm (3/16 in.) of each screw head exposed to allow the mirror to hang securely.

### 3 MOUNT THE MIRROR



Carefully hang the mirror onto the screws by aligning the D rings on the back of the mirror with the screw heads. Ensure the mirror is secured and level.

## IMPORTANT SAFETY NOTES

- ✓ Always install on a solid, leveled surface.
- ✓ Do not overtighten screws.
- ✓ Ensure all hardware is securely tightened.
- ✓ For indoor use only.



### BEFORE YOU BEGIN

Please read all instructions carefully before installation.  
Retain this guide for future reference.

