




1-800-477-6655 buyritebeauty.com


K.O.BARBER CHAIR SY-31307 INSTRUCTION MANUAL

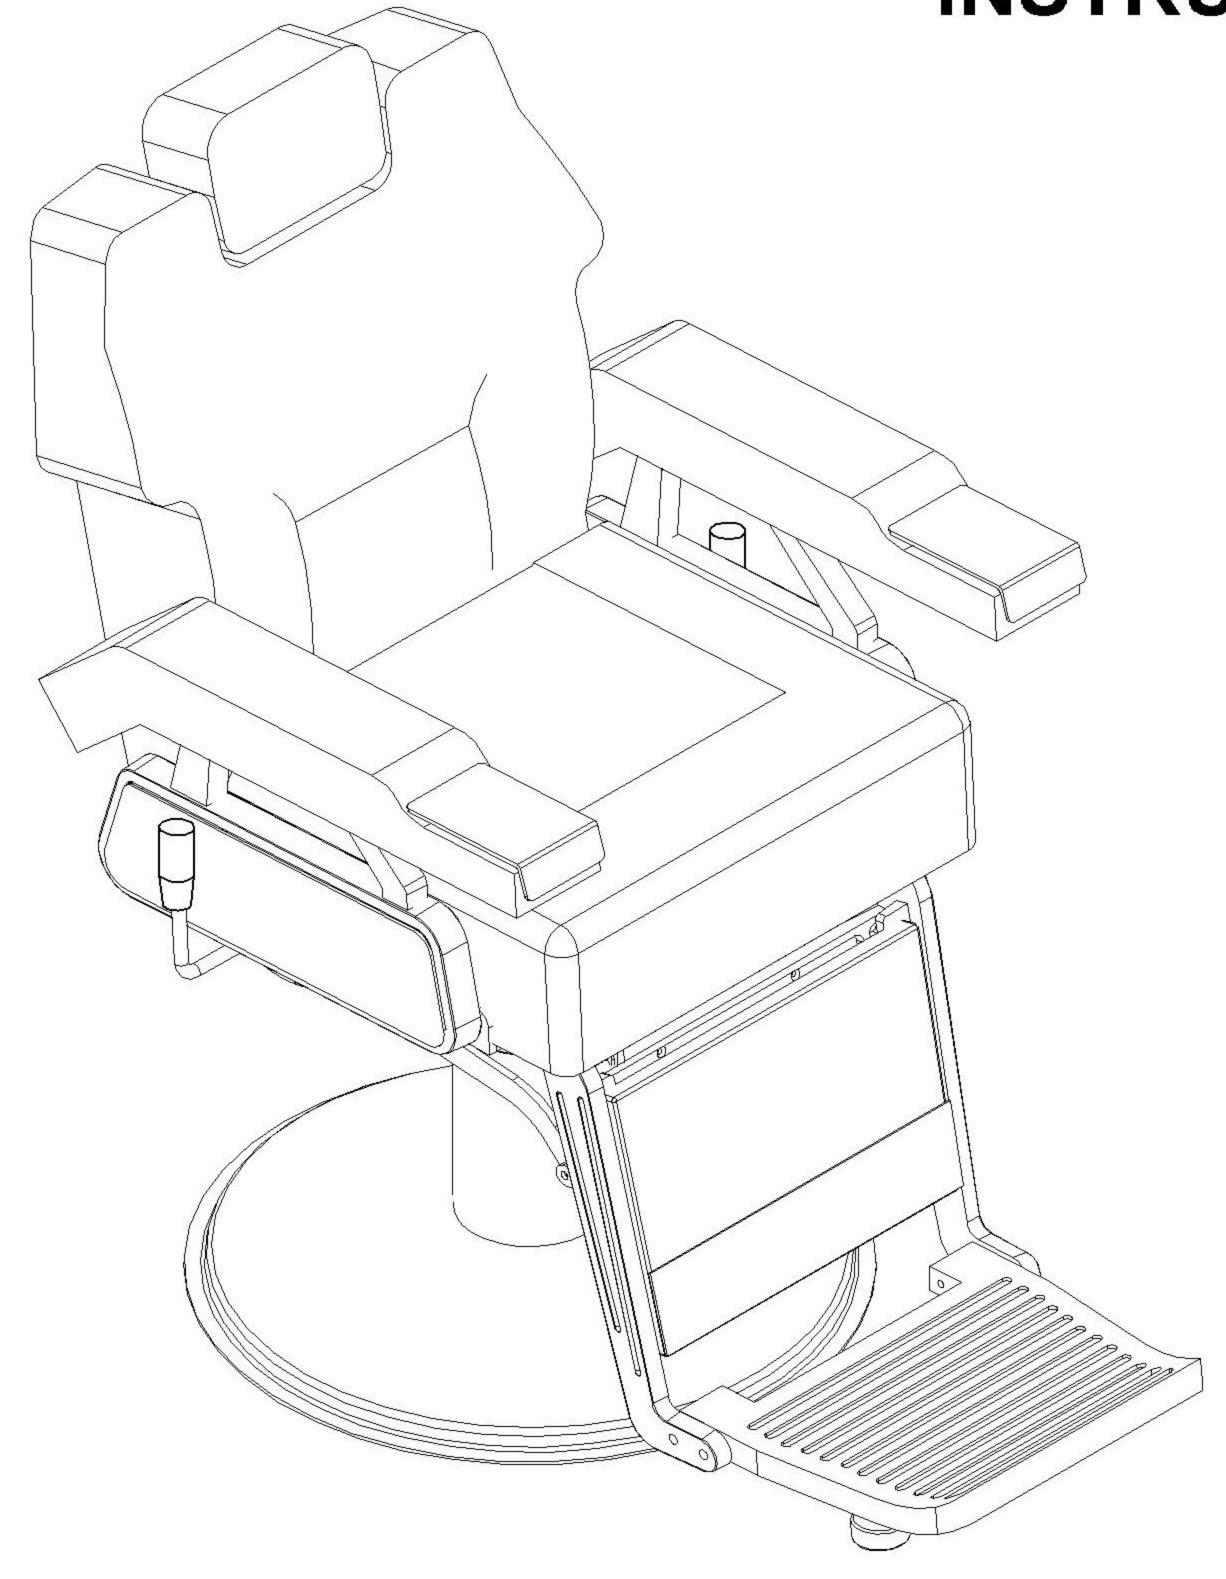



List of Parts & Tools

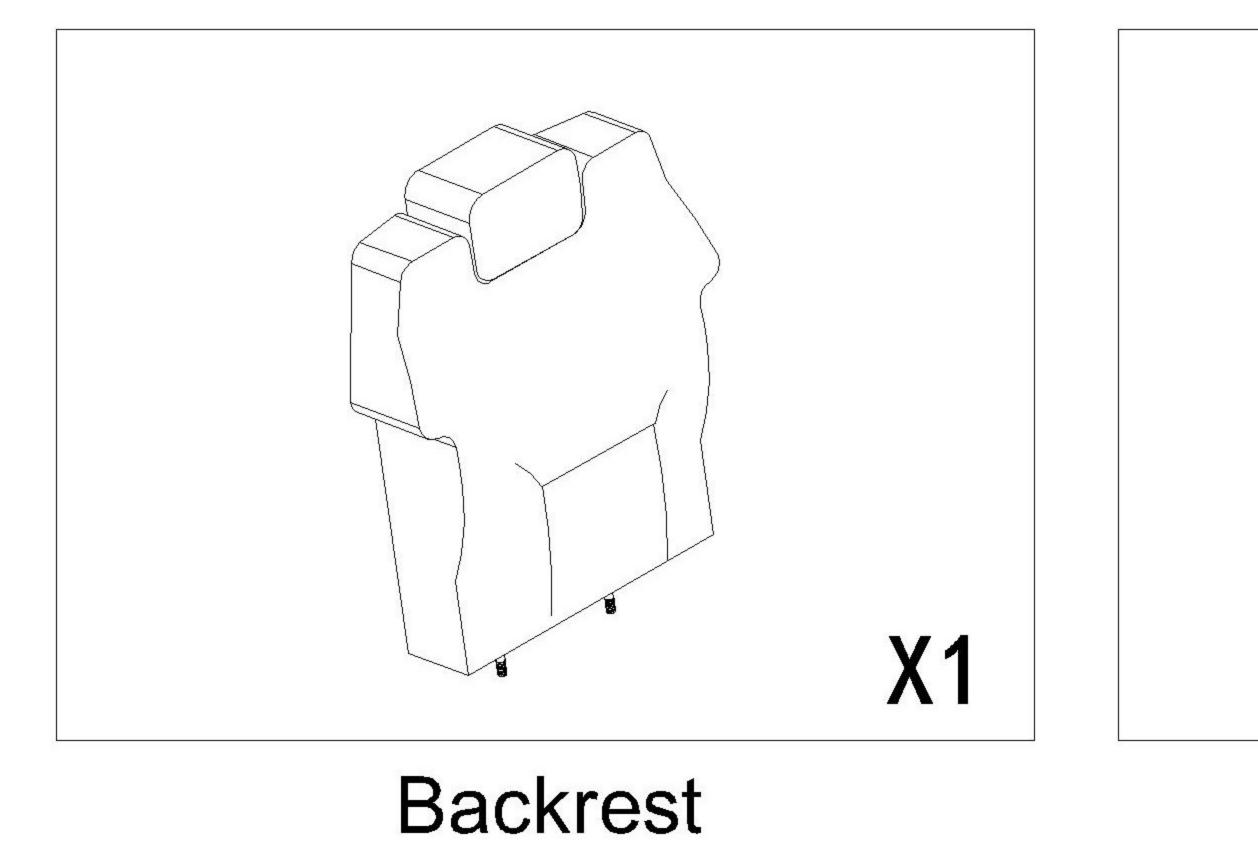


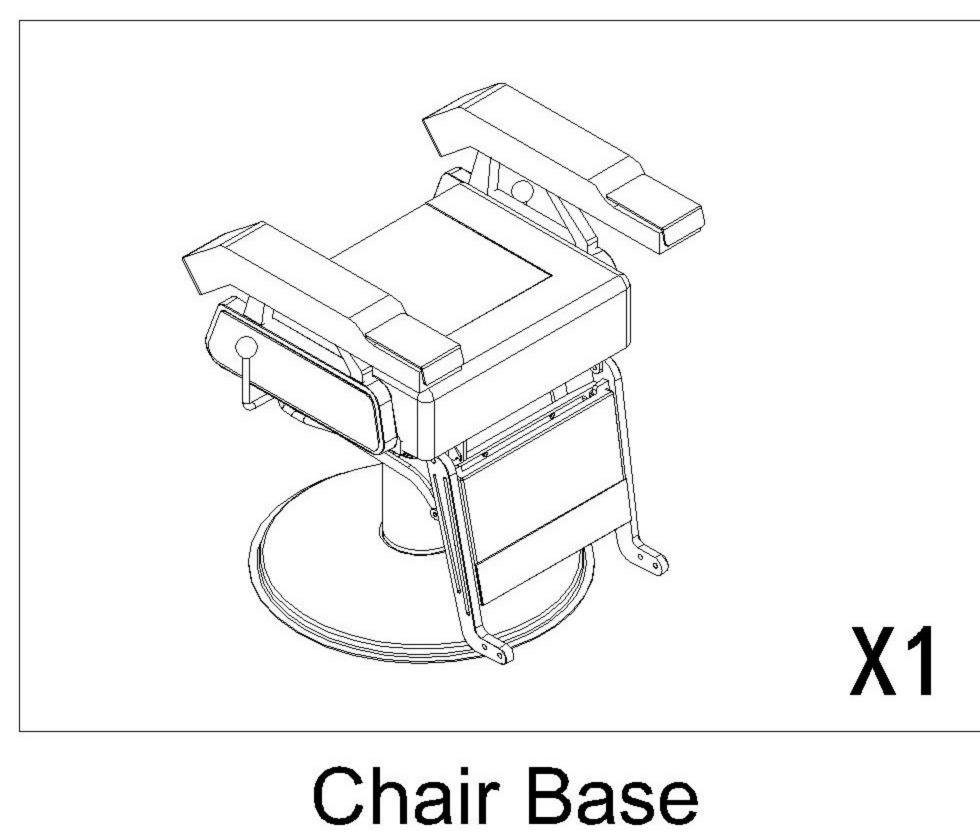

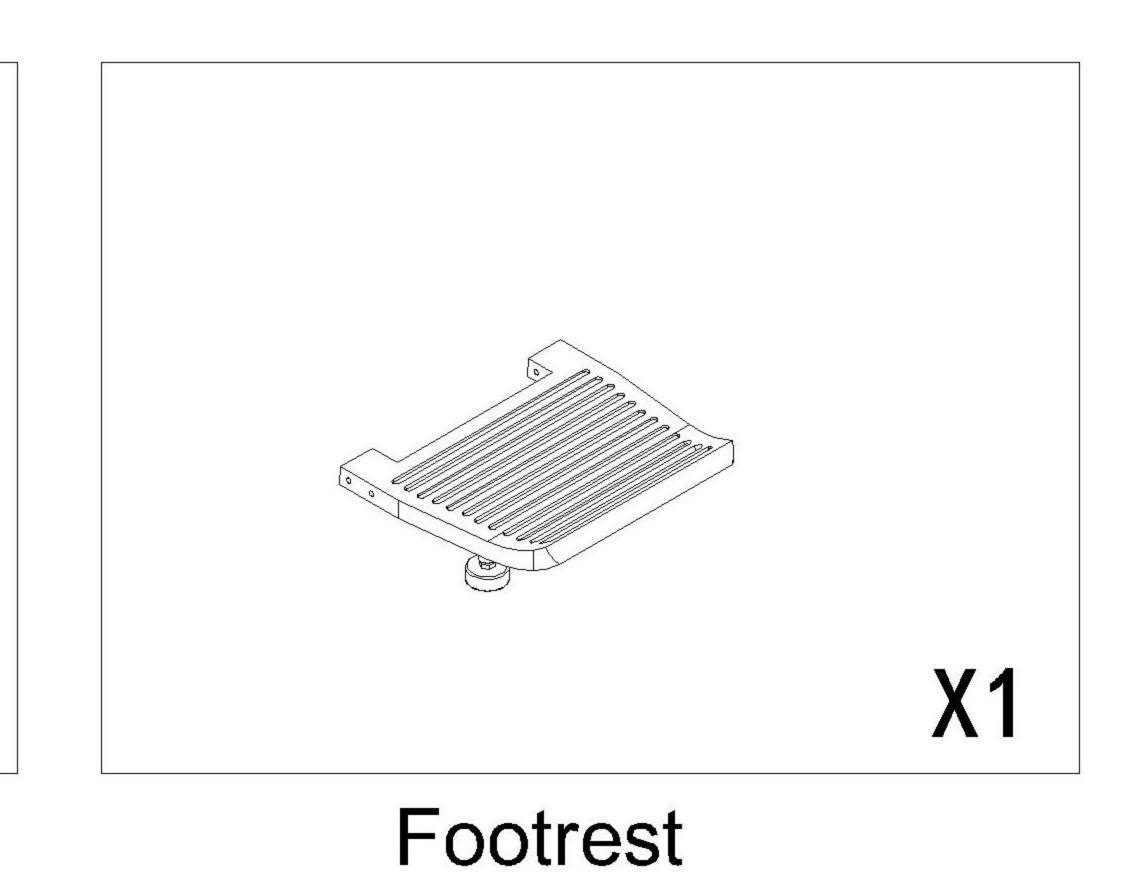

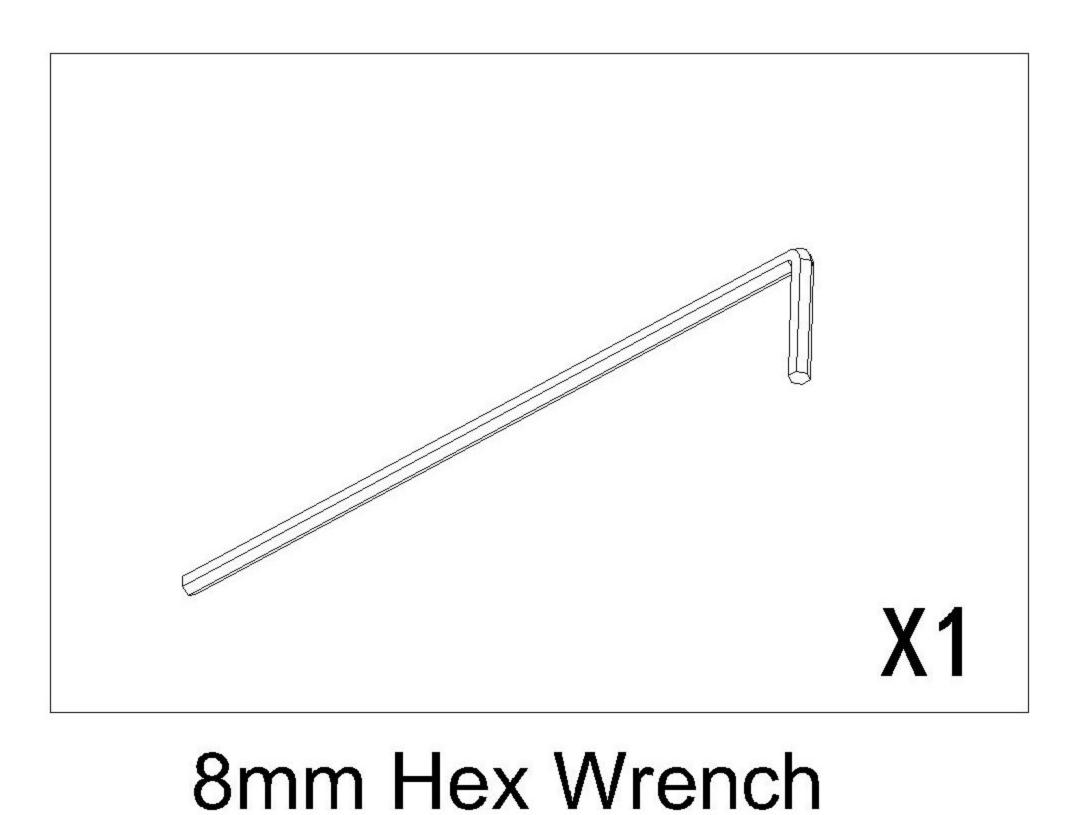

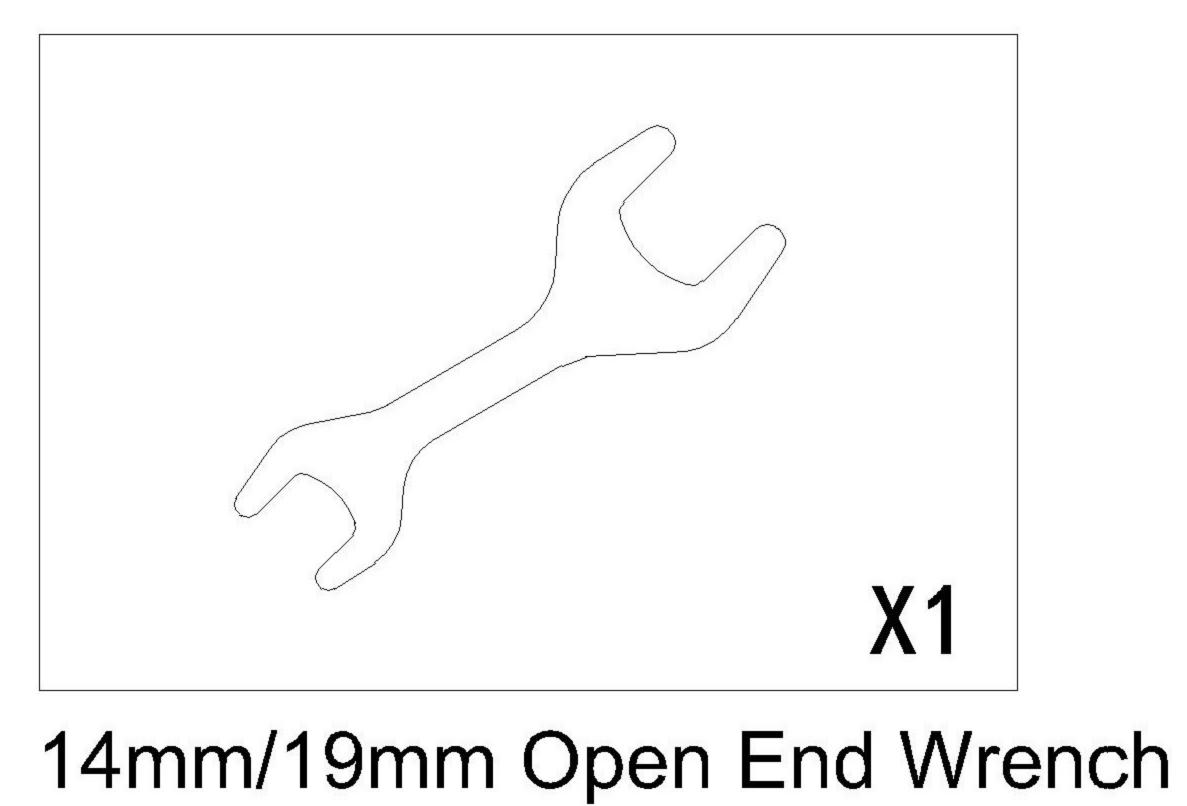

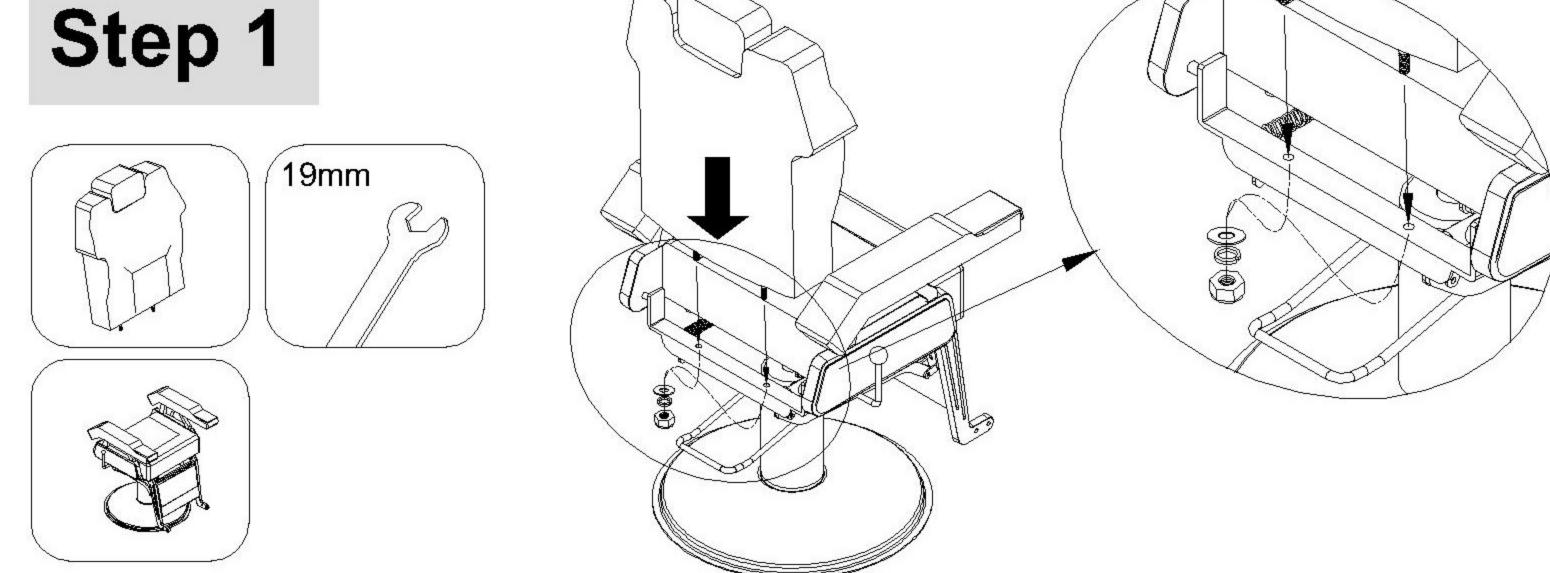


- 1.Locate the two nuts at the bottom of the backrest posts. Remove the nuts and washers and set them aside.
- 2. Fit the backrest posts into the matching holes on the backside of the chair frame. Align them so the backrest sits flush against the frame.
- 3. From the underside thread the nuts and washers back onto each backrest bolt by hand. Once both are hand-tightened, use a wrench to secure. Alternating sides to keep even pressure.
- 4. Apply steady force until they're secure but don't overtighten to avoid stripping the bolt or damaging the frame.









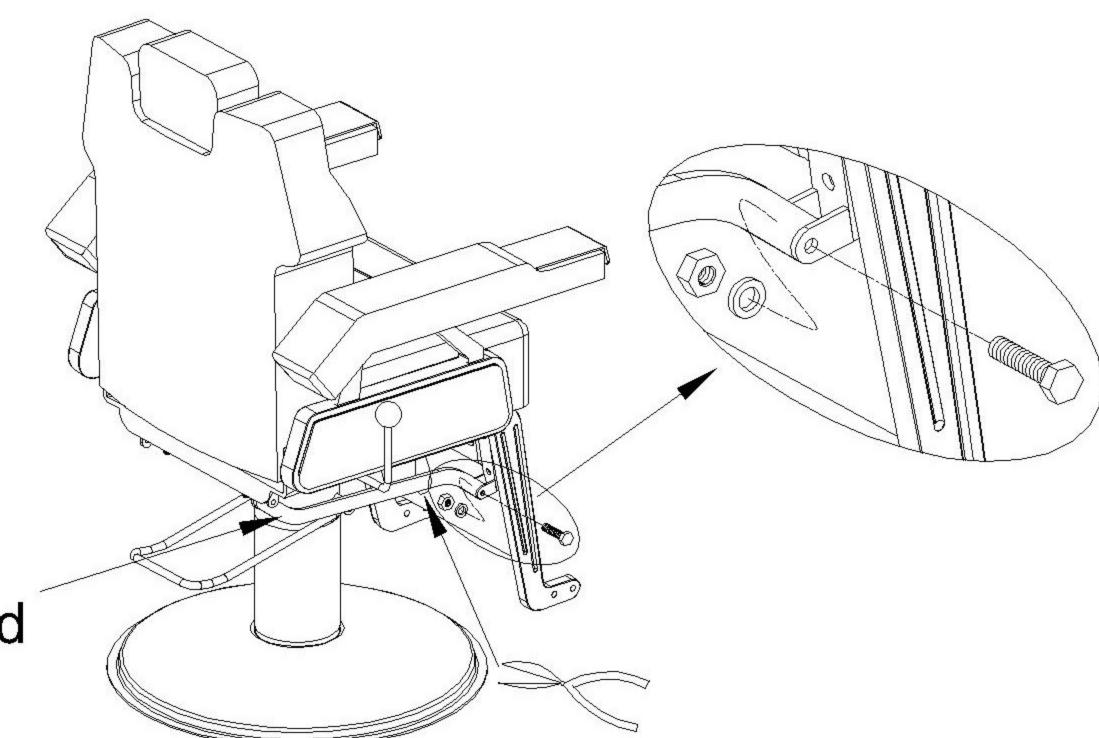

- 1.Remove the zip tie that is holding the recline bar for shipping protection.
- 2.Remove the bolt from the recline bar, slide the recline bar and slide the bar into alignment with the corresponding mounting holes on the metal chair frame.
- 3. Insert the previously removed bolt through the aligned holes. Use the wrench to tighten the bolt clockwise, ensuring it's fully secured. Avoid overtightening to prevent damage.

Step 3

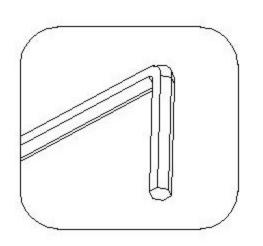

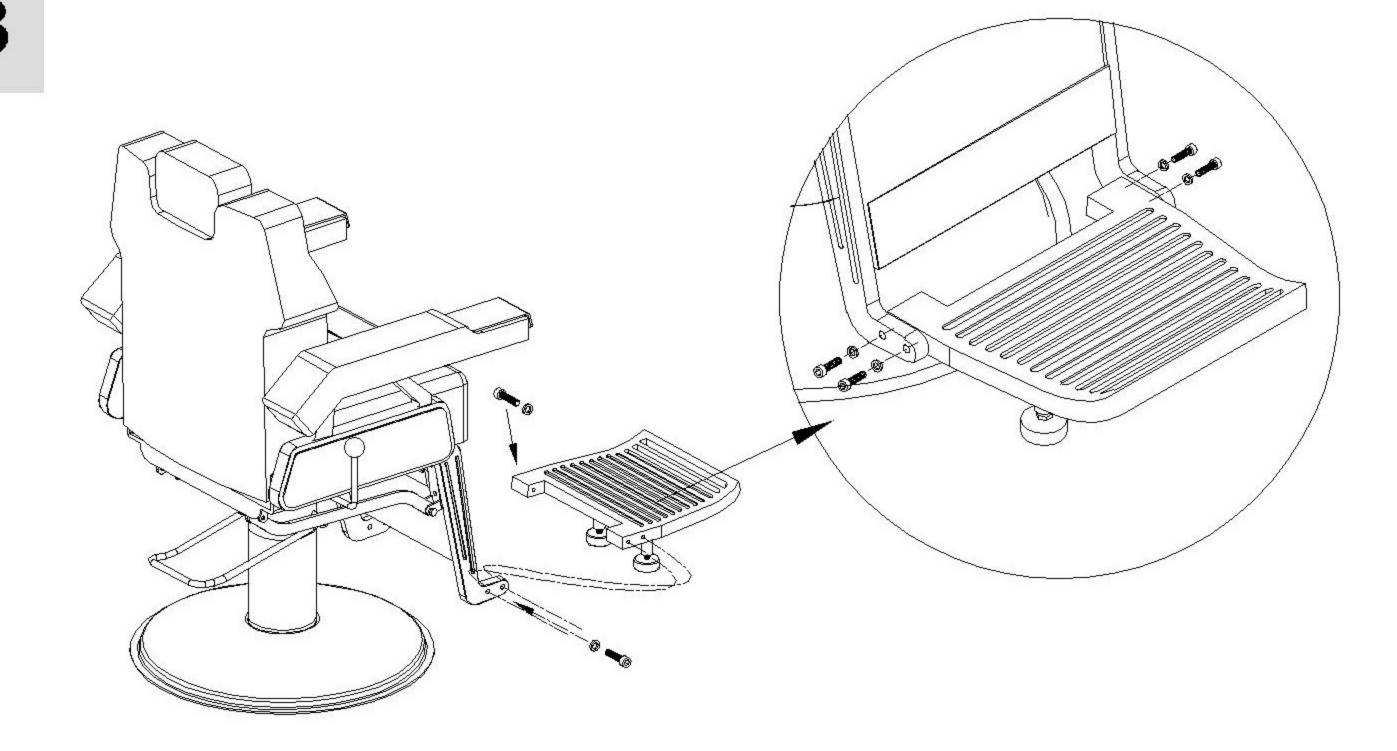


- 1. Locate the two hex-head screws—one on each side of the black footrest. Use the hex wrench that came with your chair to remove both hex-head screws and washers.
- 2. Align the holes in the black footrest with the corresponding holes in the metal calf rest bars. Take one screw and insert it through the footrest into the hole on the calf rest. Begin threading it by hand, turning it clockwise just a couple of turns is enough for now. Repeat the same process on the other side.
- 3. Once both screws are hand-threaded and aligned, switch to the provided Hex wrench and tighten each screw just enough to hold securely. Do not overtighten, to avoid stripping or binding.

Product care





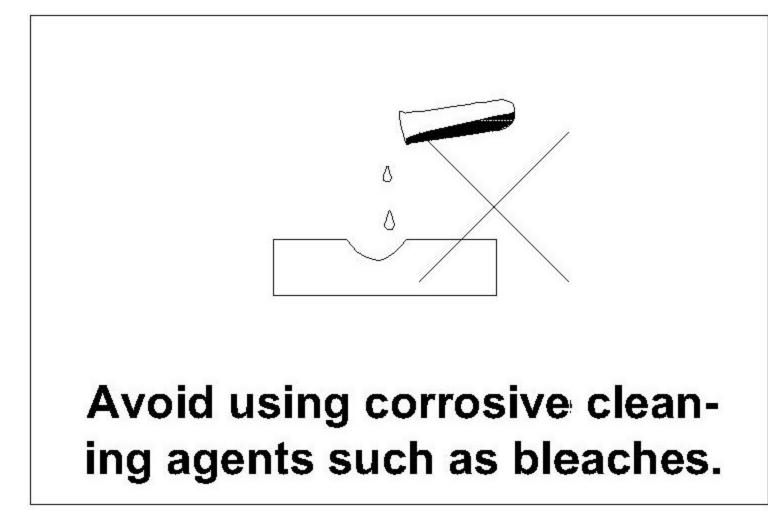



Product Information

- 1. Enjoy your new chair!
- 2. Remember to always keep the hydraulic base in the upright position and never stand solely on the footrest as it will tip.
- 3. After assembly and before use, we suggest pumping the hydraulic to full height and back down several times to prime the hydraulic fluid. This will keep the pump smooth and responsive.
- 4. Note that short quick pumping is more effective for adjustments than pressing the lever all the way down each time.
- 5. If you have any questions or concerns, please contact our customer experience team at 912-335-4445.