


1-800-477-6655 buyritebeauty.com

FUTURA BARBER CHAIR YLG-8781-2 INSTRUCTION MANUAL



List of Parts & Tools

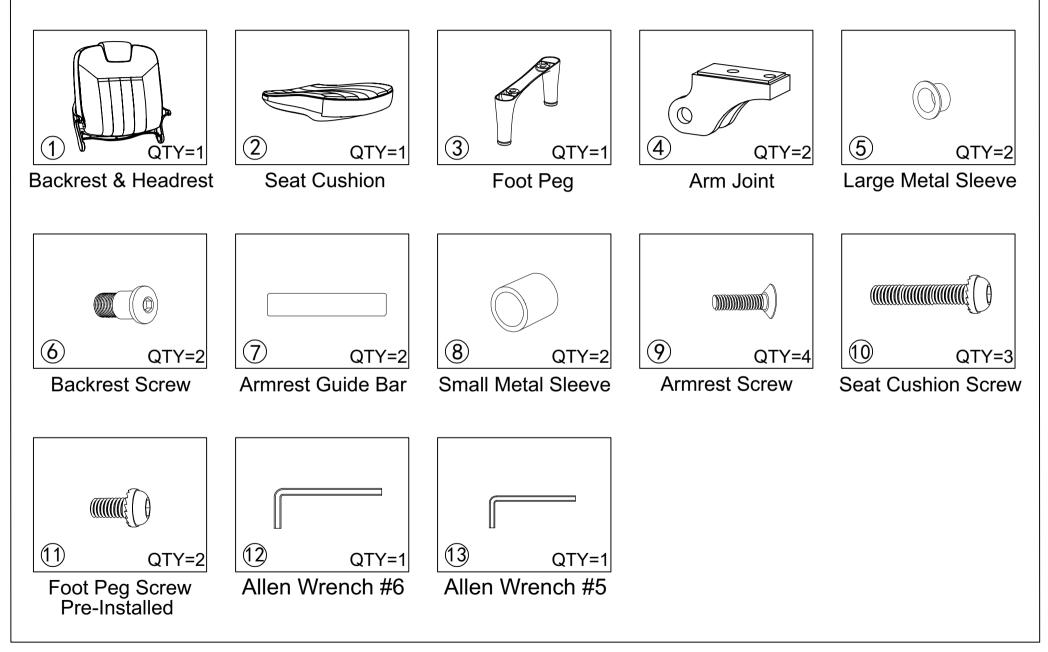


Step 1

The necessary hardware for this step can be found in the plastic bag marked 'Step 1'







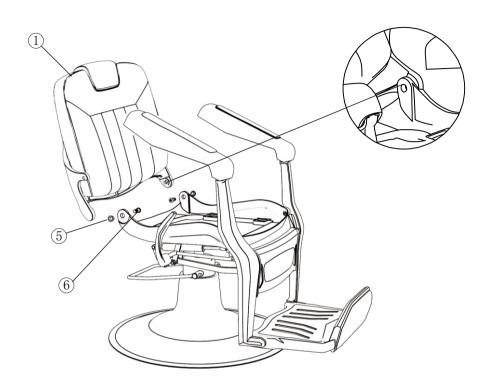


- 1. Take the Large Metal Sleeves (#5) and carefully insert them into the holes on both sides of the chair frame, making sure the sleeve is positioned on the outside of the frame.
- 2. Align the Backrest (#1) so that its mounting holes match the holes on the chair frame
- 3. From inside the frame, insert one Backrest Screw(#6) into the Backrest (#1), then repeat on the opposite side. Do not fully tighten yet.
- 4. After both screws are in place, use the provided Wrench (#12) to tighten them gradually. Start each screw evenly to maintain proper alignment. Do not overtighten, as this may damage the threads or the chair frame.

The necessary hardware for this step can be found in the plastic bag marked 'Step 2'








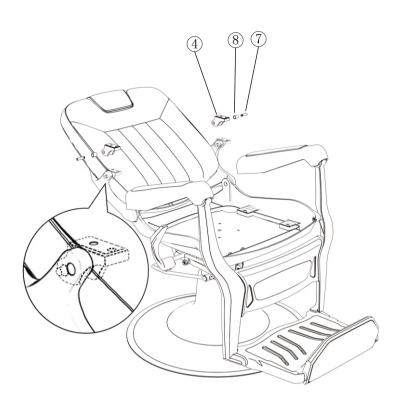


- 1. Place the Small Metal Sleeves (#8) into the holes on both sides of the Backrest Arm Frame, making sure each sleeve is inserted fully and sits flush with the surface.
- 2. Align the Arm Joint (#4) with the Backrest Arm Frame as shown in the diagram. Carefully slide the Armrest Guide Bar (#7) through the center hole. Repeat on the opposite side.

Step 3

The necessary hardware for this step can be found in the plastic bag marked 'Step 3'

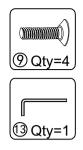


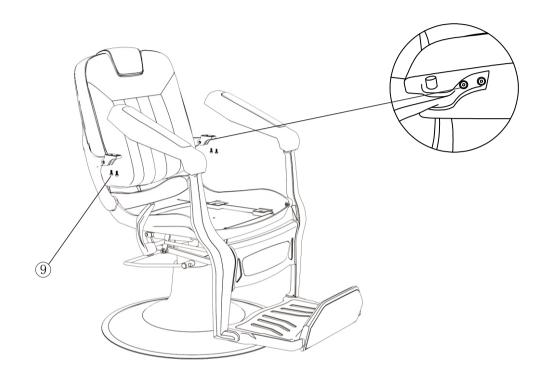


- 1. Lift the arms and place them onto the Arm Joints (#4), holding the joints steady to prevent the arms from slipping.
- 2. Using the provided screws (#9), insert two screws into the underside of each arm as shown in the diagram above. Tighten both sets of screws securely using the included wrench (#13). Do not over tighten, as this may damage the threads.

Step 4

The necessary hardware for this step can be found in the plastic bag marked 'Step 4'

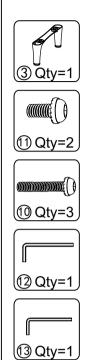


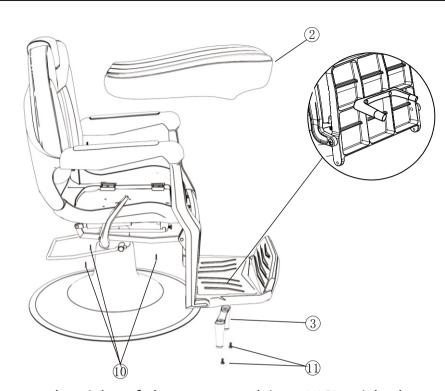



- 1. Line up the pre-drilled holes on the underside of the seat cushion (#2) with the matching holes on the chair.
- 2. From underneath the chair, hand-thread all three Screws (#10) through the frame into the seat cushion. Once all screws are in position, use the provided Wrench (#12) to gradually tighten them. Begin by turning each screw a few times to ensure even alignment. Avoid overtightening, as this could strip the threads or cause damage.
- 3. Remove the two screws (#11) from the underside of the metal footrest and set them aside.
- 4. Align the holes in the foot peg (#3) with the matching holes on the footrest.
- 5. Reinsert the screws (#11) and hand-tighten to hold the foot peg in place.
- 6. Use the provided wrench to fully tighten the screws. Do not overtighten, as this may damage the threads or mounting surface.

Product care



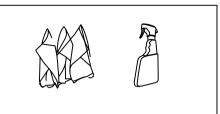

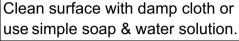

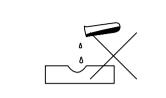

Avoid using corrosive cleaning agents such as bleaches.



Do not remove upholstery for cleaning

Product Information

- 1. Enjoy your new chair!
- 2. Remember to always keep the hydraulic base in the upright position and never stand solely on the footrest as it will tip.
- 3. After assembly and before use, we suggest pumping the hydraulic to full height and back down several times to prime the hydraulic fluid. This will keep the pump smooth and responsive.
- 4. Note that short quick pumping is more effective for adjustments than pressing the lever all the way down each time.
- 5. If you have any questions or concerns, please contact our customer experience team at 912-335-4445.