

1-800-477-6655 buyritebeauty.com

PHANTOM BARBER CHAIR YLG-9751-1C INSTRUCTION MANUAL



List of Parts & Tools



Chair




Backrest & Headrest




Foot Peg



M8 x 16mm Pre-Installed

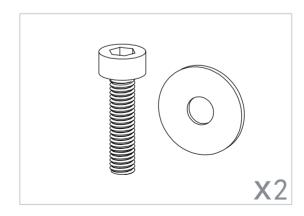

M10 x 25mm Pre-Installed

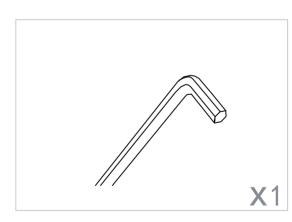

6mm


Step 1









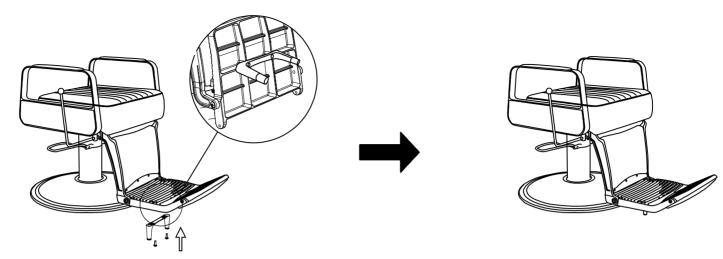

- Remove the two M8 screws from the underside of the metal footrest and set them aside.
- Align the holes in the foot peg with the matching holes on the footrest.
- 3. Reinsert the M8 screws and hand-tighten to hold the foot peg in place.
- 4. Use the provided wrench to fully tighten the screws. Do not overtighten, as this may damage the threads or mounting surface.


Step 2










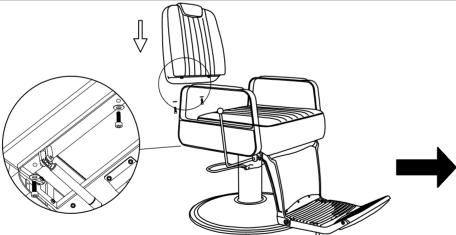


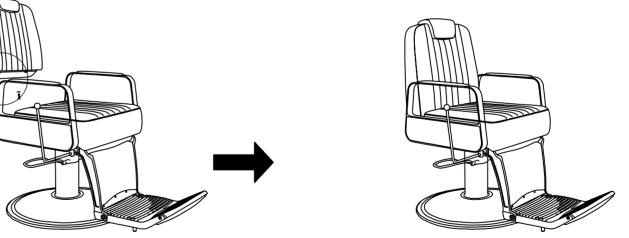


- Locate the two M10 screws on the bottom of the backrest. Remove the screws and set them aside.
- Align the holes on the bottom of the backrest with the corresponding holes on the back of the chair frame. Make sure the backrest sits flush against the frame.
- From the underside thread the M10 screws through the chair frame into the backrest. Once both are hand-tightened, use a wrench to secure. Alternating sides to keep even pressure.
- 4. Apply steady force until they're secure but don't over-tighten to avoid stripping the bolt or damaging the frame.

Product care



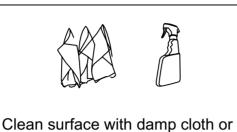







Product Information

- 1. Enjoy your new chair!
- 2. Remember to always keep the hydraulic base in the upright position and never stand solely on the footrest as it will tip.
- 3. After assembly and before use, we suggest pumping the hydraulic to full height and back down several times to prime the hydraulic fluid. This will keep the pump smooth and responsive.
- 4. Note that short quick pumping is more effective for adjustments than pressing the lever all the way down each time.
- 5. If you have any questions or concerns, please contact our customer experience team at 912-335-4445.