


**Front of bowl/chair**  
Locking threaded stops prevents the bowl from tilting [can be removed]

Spring loaded screws are for adjusting the tension of the tilt. DO NOT REMOVE for installation. Each one fits through the 2 larger holes.

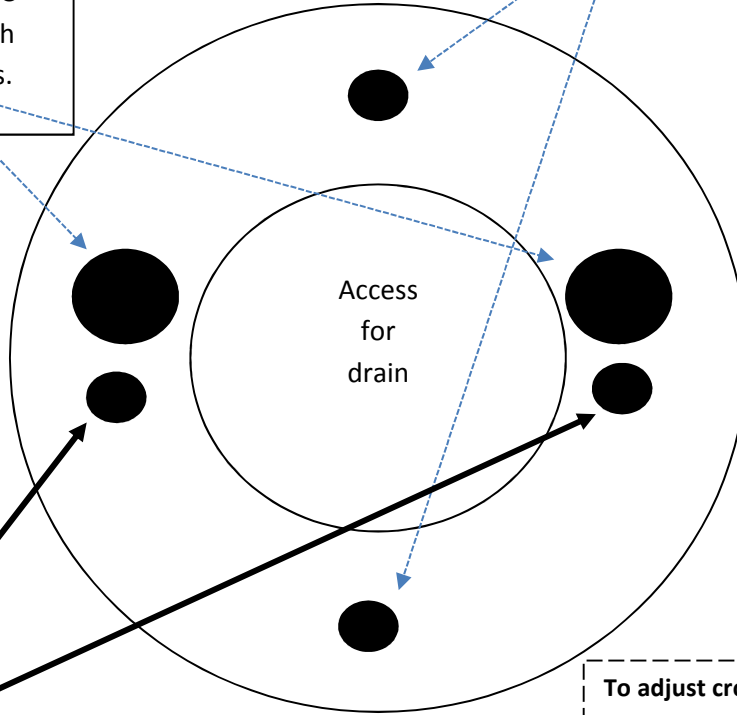

**Mounting threads:** These are what holds the tilting bracket (with bowl) to the base. Remove all locking nuts and "spacers" from both sides.

Attach drain hose to bowl.

Insert entire bowl assembly on to the base. Apply a level.

Re-attached the "spacers" and locking nut(s). Tighten in a manner to keep bowl level from right to left.

**To adjust crookedness of bowl to chair:**

Turn bowl upside down.

Loosen the 4 nuts accessing through the tilting bracket to the bowl. Do not remove.

Turn the bracket [while screws are still in the slots] until the bowl is straight. R

Re-tighten the nuts securely.

Re-mount the bowl on the base.

