



*Copyright 2017 by Empress
Printed in USA*

USER MANUAL

EMPRESS LE/SE/RTX

EMPRESS

1.631.243.3336
WWW.EMPRESSPDCHAIR.COM

SERVICE & ORDER PARTS

1.631.243.5300
WWW.PEDISPAFIX.COM

TABLE OF CONTENTS

Safety Instruction	3
User Recommendation	6
Limited Warranty	7
Maintenance and Cleaning	9
Spa Information	
Specification	12
Identification	14
Dimension	16
Drain Instruction	18
Optional Discharge Pump	20
Motors	
Standard Motor	22
Optional Motor	23
Optional Auto-Fill	25
Remote Instructions Chair Installation	26
Massage Mechanism Exposed View	27
Chair Installation	28
Operation Caution	29
Troubleshooting Guide	30
Back Flow Protection Device	31
Registration	32

EMPRESS : THE SPA THAT EMPOWERS

WELCOME

Here at EMPRESS, We're committed to making OUR VALUES come alive in the work that we do and the products we create. That said, every EMPRESS Pedicure Spa makes a striking first impression - designed to be as functional as they are beautiful. It's important to note that our pedicure spa units must be installed, handled and cared for by licensed professionals, in whichever respective field. Whether it be plumbing, electrical, and/or beauty, the pedicure spa units should in no circumstance ever be handled by an unlicensed professional. We sincerely thank you for your support.

WARNING!!

IMPORTANT USER INSTRUCTION & SAFETY NOTICE. KEEP SAFE!

- The maximum recommended weight capacity of EMPRESS is 250 LBS.
- Keep all ELECTRICAL DEVICES away from the pedicure spa.
- Enter and exit the pedicure spa with caution.
- Do not stand in the pedicure basin.
- The water temperature should NOT exceed 105 F (41 C).
- Set hot water temperature according to boiler specification.
- Always refer to state or local code to verify maximum supply temperature.

This product is in compliance with applicable UL LISTED standards and requirements for the U.S. and Canada By Underwriters Laboratories Inc.



Some of the components of this product are also in compliance with applicable safety standards of following:



IMPORTANT USER INSTRUCTION & SAFETY NOTICE.

KEEP SAFE!

ELECTRICAL NOTICE

In order to ensure proper use, a separate **120v 60HZ 15amp(per dedicated outlet)** GFCI protected grounded circuit must be used to supply power to each pedicure spa. Failure to do so renders the Limited Warranty void.

****PEDICURE SPAS** outside the US must be in accordance with the respective country's rules and regulations. For example, if installed in Canada, the pedicure spa must be in accordance with the Canadian Electrical Code Part1.

GROUNDING AND GFCI NOTICE

STOP! PLEASE READ PRIOR TO INSTALLATION AND USE!

When using electrical products, basic precautions should be followed:

1. Risk of electrical shock. Connect the pedicure spa only to a circuit protected by a ground-fault circuit-interrupter.(GFCI)
2. Every EMPRESS Pedicure Spa must be installed by your local, licensed plumber and licensed electrician to install your new spa. Installation **MUST** be in compliance with all local and state building codes.
3. Your pedicure spa cannot operate efficiently or safely unless it is provided with adequate electrical power, sufficient water pressure, and required drainage capabilities.
4. Contact your local building inspector for information and local code compliance procedure that need to be followed when having your new pedicure spa installed.
5. Subsequent inspections and approvals that may be required are the responsibility of the purchaser.

Shipment Inspection

Examine the components immediately upon arrival to make sure no damages to the pedicure spa base and chair during the shipment. It is very important that you notify the driver directly and notation should be on the face of the freight bill or bill of lading of any damage. Failure to note damage on the bill of lading may prevent any claims you may have against the carrier.

If concealed or damage is found, you **MUST** notify the carrier at once and request an inspection. **DO NOT DISCARD THE SHIPPING CARTON** If receiver sign the carrier clean receipt of goods that have been damaged in transit .Do so at your own risk and expense.

STOP! PLEASE READ PRIOR TO INSTALLATION AND USE!

TO REDUCE THE RISK OF BURNS, ELECTRIC SHOCK, FIRE OR INJURY:

1. Only licenced operators are permitted to use the pedicure spa.
2. If the pedicure spa has a damaged cord or plug, do not use.
3. Keep all electrical cords away from heated surfaces.
4. Do not operate outdoors.
5. You are responsible to ensure that all plumbing connections meet national, state and local code.
6. Utility shut-off valves are strongly recommended.
7. The water temperature should be adjusted accordingly.

Important Installation Considerations

Electrical Service

110V, 60Hz, 15Amp GFCI protected grounded circuit **MUST** be used to supply power each individual pedicure spa. And the main circuit breaker **MUST** be at 25Amp. For maximum of two units per each electrical outlet.

Water Supply

All plumbing connections must conform to local, State, Federal codes.

Water supply to the spa should be provided with adequate water pressure and water temperature.

Water Pressure

To fill the basin correctly up to level, Normal water pressure of 30 to 80 P.S.I is required.

Water temperature

Set hot water temperature according to boiler specification. For hot and cold water supply fittings and drain fittings location, see drain diagram .Carefully connect the water supply line to the appropriate fittings located on the rear of the pedicure spa.

Pressure / Temperature (Faucet Specs)

Maximum Pressure: 150 psi (10 bars)

Minimum Pressure: 10 psi (69kPa)

Working Temperature: 33F to 140F constant

Recommended Flow: 1.5gpm .

UL LISTED / CE CERTIFIED

Compliance with following Code (s): Uniform Plumbing Code, National Plumbing Code of Canada and international Plumbing Code. Also, Compliance with following Standard (s): ASME A112.18.3M / A112.18.1M, CSA B125, NSF /ANSI 61/372

All EMPRESS USA products has been investigated for compliance with the requirements for water retention for Whirlpool bathtub appliances contained in ASME / ANSI A122.19.7M(1995), CSA C22.2 No. 68-69

ANSI - American National Institute, ASME - American Society of Mechanical Engineers, CSA - Canadian Standard Association IAPMO - International Association of Plumbing and Mechanical Officials, UL - Underwriters Laboratory

***** Back flow Protection Device***

Due to Town and / or State requirement/s are varies in building code, if the Town and / or State requires specific Vacuum Breaker, As the Plumber **MUST** provide Vacuum Breaker according to building code

Drain Facilities

The pedicure spa Drain must meet local plumbing codes. **Check valve for Drain (not Provided) Must be installed by a licensed plumber.** Also Pedicure spa must be securely fasten to the floor.

Installation Summary

A licensed plumber / Electrician **MUST** install the Pedicure Spa conform and comply with local,State and Federal building code. where applicable.

Note: Failure to comply with federal, state, or local codes and ordinances will result in warranty being nullified and void.

Please print this page for your review and reminder.

User Recommendation

PLEASE READ THE MANUAL THOROUGHLY BEFORE USE TO ENSURE CORRECT OPERATION.

THOSE UNDER A DOCTOR CARE OR WHO ARE EXPERIENCING ONE OR MORE OF THE FOLLOWING CONDITION SHOULD CONSULT THEIR DOCTOR BEFORE USE.

- You are receiving medical treatment or are feeling ill.
- Your body shows any cute symptoms.
- You have heart disease.
- You are pregnant or having a menstrual period.
- Your doctor has ordered you to rest.
- You have a back disorder resulting from an accident or disease
- You have high fever.
- You have sensory disorders.
- You have medical electrical device (e.g. pacemaker).
- You have service interruption in the circulation of the legs.
- You have an open wound.
- You are diabetic.

FAILURE TO DO SO MAY RESULT IN ACCIDENTS AND HEALTH PROBLEMS.



EMPRESS PEDICURE SPAS Limited Warranty (1/2)

IMPORTANT

To validate the limited warranty, The Limited Warranty Registration Form **MUST** be filled out completely and return to EMPRESS within 30 days of original purchased date. This Limited Warranty is valid if EMPRESS USA received registration form.

EMPRESS Pedicure Spas has designed and manufactured with the highest standards and expressly warrant the pedicure spa as follows:

To the original owner of the EMPRESS Pedicure Spa may repair or replace, at its option, any pedicure spa found to be defective in material or workmanship upon inspection by a authorized representative of EMPRESS USA Inc. This limited warranty covers the following:

Base - Twenty four (24) month from date of shipment from EMPRESS facility.

Components / Parts - Twenty four (24) month from date of shipment from EMPRESS facility.

Stool - Ninety (90) days from date of shipment from EMPRESS facility.

Shipping Costs - Twenty four (24) month from date of shipment. EMPRESS will cover normal shipping costs associated with replacement parts. Expedited shipping cost will incur an additional charge.

Labor - Twelve (12) month from date of shipping, EMPRESS will cover reasonable labor costs associated with the installation of replacement parts found to be defective in material or workmanship upon inspection by authorized representative of EMPRESS.

No labor cost or replacement parts will be covered under this limited warranty if at the sole discretion of EMPRESS. It is determined a failure was caused by negligence, accident or improper use, improper installation or lack of proper maintenance as in the Owner's Manual.

NO CONSEQUENTIAL, INCIDENTAL, CONTINGENT, INDIRECT, SPECIAL OR OTHER DAMAGES WILL BE ALLOWED.

This warranty is null and void if the pedicure spa is removed from its original installation or is not installed accordance with specifications of pedicure spa or national, state or local codes, regulation and ordinances. Furthermore, this limited warranty is null and void if the pedicure spa is subjected to improper installation or maintenance, negligence, improper cleaning or any other circumstance beyond EMPRESS's control. To validate limited warranty, pedicure spa must be installed by a licensed plumber and/or electrician in accordance with local and / or State code and pedicure spa installation instructions.

Warranty Exclusion

- 1- Unauthorized repairs and/or modification or tampered in any way.
- 2- Damage due to freight, accident, natural disaster and /or abuse or misuse
- 3- Stain, fading or discoloration of seat, back cover, armrests (Upholsteries), Tray or Footrest
- 4- Fading, discoloration or staining of basin or Any portion of surface of pedicure spa caused by water additive or improper Water treatment (such calcium built up) and/or cleaning agents/s
- 5- Damage or malfunction due to improper installation including but not limited to, failure to comply with all national, state and local plumbing, electrical and building codes.
- 6- Damage drain pump due to residue built up in drain pipe and / or due to the lack of maintenance.

EMPRESS PEDICURE SPAS Limited Warranty (2/2)

Parts for which labor / Service is **NOT COVERED** - Following components are simple to replace and DO NOT require a service technician. Therefore, though the part is covered under the guidelines of the warranty agreement.

- 1- Panel
- 2- Jet cover, impeller and / or jet assembly
- 3- Faucet Cartridge, Shower Head
- 4- Footrest
- 5- Air actuate On/Off Button
- 6- Drain Plug
- 7- Remote control

During the Limited Warranty period, EMPRESS will, at its sole discretion, repair or replace any defective component. All component parts removed under this Limited Warranty become property of EMPRESS. And all replacement component/s MUST be return to EMPRESS Within 30 days of replacement. If not, replaced component/s will be charge as its cost/s.

This limited warranty is for the original owner and not transferable. The original owner agrees by using pedicure spa the obligation of EMPRESS shall not extend to indirect or contingent damage or injury. Furthermore, the obligations of EMPRESS are limited to those set forth herein. The limited warranty is the exclusive remedy and is in lieu of all other warranties, express or limited, including but not limited to, any implied warranty of fitness or merchantability for a particular purpose. No distributor or other person has the right or authority to bind EMPRESS to changes to this limited warranty. Consequently, EMPRESS is not responsible for such warranties or representations.

Limitation of liability

TO THE EXTENT ALLOWED BY LOCAL LAW, EXCEPT FOR THE OBLIGATIONS SPECIFICALLY SET FORTH IN THIS WARRANTY STATEMENT, IN NO EVENT WILL EMPRESS OR ITS THIRD PARTY SUPPLIERS BE LIABLE FOR ANY DAMAGED CAUSED BY EMPRESS PEDICURE SPA OR THE FAILURE OF EMPRESS PEDICURE SPA INCLUDING ANY LOST PROFIT OR SAVINGS, BUSINESS INTERRUPTION, LOSS OF USE OR ANY OTHER COMMERCIAL OR ECONOMIC LOSS OF ANY KIND, OR SPECIAL, INCREMENTAL, OR CONSEQUENTIAL DAMAGES. THIS LIMITATION OF LIABILITY APPLIES WHETHER DAMAGES ARE SOUGHT, OR A CLAIM MADE, UNDER THIS LIMITED WARRANTY OR AS A TORT CLAIM, A CONTRACT CLAIM OR ANY OTHER CLAIM.

USER MAINTENANCE INSTRUCTIONS CLEANING AND DISINFECTING YOUR PEDICURE SPA

Note: Please be advised that it is responsibility of purchaser/user to adhere strictly to the following procedure. Any non-compliance will be considered negligence of the purchaser/user.

The Bureau of barbering and cosmetology requires that salons using whirlpool pedicure spas use the following disinfecting Procedures to ensure proper cleaning and maintenance of the equipment, and to prevent bacterial infection. For your clients safety, always use the regulations as a minimum standard for cleaning and disinfecting.

Chair maintenance: Please see chair manual for Do and Don't

A SPECIAL NOTE PERTAINING TO BLEACH

While bleach seems to be used extensively for cleaning and disinfecting of pedicure chair basins, it is **NOT** recommended nor is it effective. Moreover, excessive use of bleach may greatly reduce the longevity of your pedicure chair internal components (i.e. pumps, jet waste assembly, etc.). Excessive and repeated use of bleach may also void your warranty. As always, you are required to check with your state board for mandatory cleaning and disinfecting requirements and procedures.

At the end of the day:

1. Remove the intake suction screen, All debris trapped behind the screen of each pedicure spa must be removed. And the screen and the inlet shall be washed with soap or detergent and water
2. Before replacing the screen, Totally immersed the screen into an EPA- registered disinfectant with bactericidal, Fungicidal, and virucidal activity.
3. Finally, flush the whirlpool system with low-sudsing detergent and warm OR an EPA - registered cleanser for 10 minutes. Rinse with clean fresh water and drain.

Note:

Cleaning or sanitizing is NOT disinfecting. According to the CDC and EPA, disinfecting occurs only when there is a reduction of pathogenic microbes at 99.999%. Sanitizing is a only reduction of 99.9%. Cleaning of whirlpool pedicure spa requires surfactant and chelating detergents that are low foaming and have ability to remove body oils, organic oil additives, mineral oil, skin cell, nail clippings, etc.. That can accumulate both in the basin and the jets which may become fertile area for micro organism to grow.

Note:

The use of oil based products can build up in the whirlpool system causing clogging in the jet and build up onto the surface of the basin. Adherence to the above cleaning will minimize build up thus the manufacturer recommend not to use mineral oil based product.

Maintenance and Cleaning of PU Synthetic Leather

PU synthetic leather is made from polyurethane resin after coating, drying and curing. Compared with the genuine leather, PU synthetic leather is more resistant to acid, alkali, heat and sunshine. However, because of its own physical and chemical properties, it should not be put at the place where there is dust, high temperature, high humidity, low temperature or strong sunshine and the environment containing acid and alkali agent and solution. Otherwise, it will be easily cracked, quickly aging and hydrolyzed.

Cleaning methods of PU synthetic leather and precautions:

1. Organic agent, grease solution and compounds, especially the strong solvent, e.g. alcohol, turpentine, thinner can not be used for cleaning the PU surface and otherwise the PU surface will be easily corrosive.
2. Fresh water or washing powder can not be used for cleaning the PU surface or there will be cracks.
3. Environment-friendly detergent which is containing no abradant and with a PH value of 5-7 should be used for cleaning the PU surface.
4. For the quite dirty PU surface, use a soft cloth with egg white to wipe the dirt, brush should not be used for cleaning the surface.
5. The more popular detergents in the market are: Meipingwang leather detergent and protective agent; Amway leather detergent, etc.
6. For the best result for maintaining your PU synthetic leather please inquire Empress for **Spa Leather Cleaner**.
7. Fabric inside liner and fabric padding MUST be check quarterly for the best result. In case of warn out please contact service department for replacement.(Worn and tear is not covered under warranty)

Maintenance methods of PU synthetic leather and precautions:

1. Good room ventilation should be ensured because too dry or too wet environment will fasten the aging of leather.
2. Leather sofa should avoid direct exposure to sunshine or air-conditioner wind; otherwise the leather surface will become hard. Direct exposure to sunshine will make the leather with color faded.
3. There is more sweat on body during the summer the hole of the leather will absorb the sweat. The organic matter in the sweat and the leather will have a chemical reaction during high temperature and wet environment, and there will be peculiar smell. For this, wettish soft cloth should be used for wiping frequently.
4. While wiping the sofa, the alkali cleaner should not be used because there is acid treatment during leather making and the alkali will decrease the pliability of the leather and there will be crack if the alkali cleaner is used for wiping the sofa.

RESIN BOWL Care and Cleaning

Note:

Please be advised that it is responsibility of purchaser/user to adhere strictly to the following procedure. Any non-compliance will be considered negligence of the purchaser/user.

The Bureau of barbering and cosmetology requires that salons using whirlpool pedicure spas use the following disinfecting procedures to ensure proper cleaning and maintenance of the equipment, and to prevent bacterial infection. For your client's safety, always use the regulations as a minimum, standard for cleaning and disinfecting.

EXCLUSIVE WRITTEN WARRANTY

LIMITED ONE - YEAR WARRANTY

Maintenance (resin bowl)

At the end of the day:

1. Remove the intake suction screen, all debris trapped behind the screen of each pedicure spa must be removed. And the screen and the inlet shall be washed with soap or detergent and water.
2. Before replacing the screen, totally immersed the screen into an EPA-registered disinfectant with bacterial, Fungicidal and virucidal activity.
3. Finally, flush the whirlpool system with low-suding detergent and warm OR and EPA-registered cleanser for 10 minutes. Rinse with clean fresh water and drain.
4. Wipe with clean towel.

Don't

1. Do not use abrasive material to clean.
2. Do not use acetone to clean or as stain remover.
3. **Do not use harsh or harmful chemical on the surface.**
4. Do not use concentrate Chlorine as disinfectant agent.

Do

1. Remove stain - use small amount of alcohol on clean towel.


Note:

Cleaning or sanitizing is NOT disinfecting. According to the CDC and EPA, disinfecting occurs only when there is a reduction of pathogenic microbes at 99.999%. Sanitizing is a only reduction of 99.9%. Cleaning of whirlpool pedicure spa requires surfactant and chelating detergents that are low foaming and have ability to remove body oils, organic oil additives, mineral oil, skin cell, nail clippings, etc.. That can accumulate both in the basin and the jets which may become fertile area for micro organism to grow.


Note:

The use of oil based products can build up in the whirlpool system causing clogging in the jet and build up onto the surface of the basin. Adherence to the above cleaning will minimize build up thus the manufacturer recommend not to use mineral oil based product.

Empress LE/SE/RTX: Specification

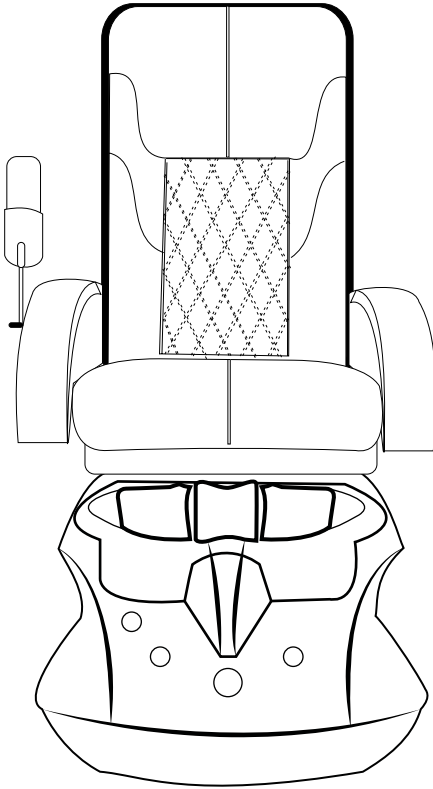

Empress SE

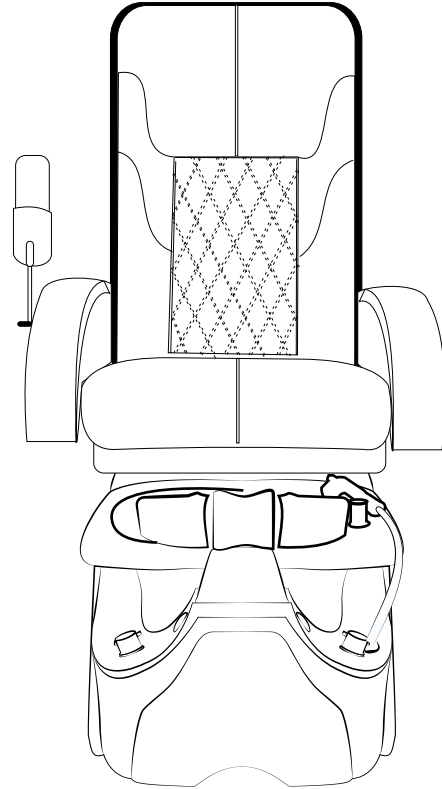

Empress LE

**Dimension & Weight
(Shipping)**

Empress SE/RTX
Empress LE/RTX

37"W x 66"L x 40"H
37"W x 66"L x 40"H

260lbs
260lbs

Capacity of Tub

4.5 US Gallon

Switch

On/Off Air Activated Switch

Power Source

Dedicated 15Amp Wall Outlet Require
Pipe-less Whirlpool Motor
Discharge Pump (Optional)
Massage System

120Vac, 0.4 Amp, 60Hz
120Vac, 60Hz
Input: 100-240V 50-60 Hz 1.6A
Output: 24V 2.5A

Plumbing

Hot Water
Cold Water
Drain

0.5inches (Fitting Provided)
0.5inches (Fitting Provided)
1.5inches (See Plumbing Instruction)

Warranty


See detail in warranty page.

Installation Specifications Summary

WARNING: Failure to comply with federal, state or local codes and ordinances will result in warranty being null and void.


As stated, the pedicure spa installation must comply with all **plumbing and electrical codes**. A **licensed plumber and licensed electrician MUST** complete the applicable connections of the pedicure spa.

Location and support: Select a level location. The floor structure beneath the pedicure spa must be capable of supporting the occupied pedicure spa.

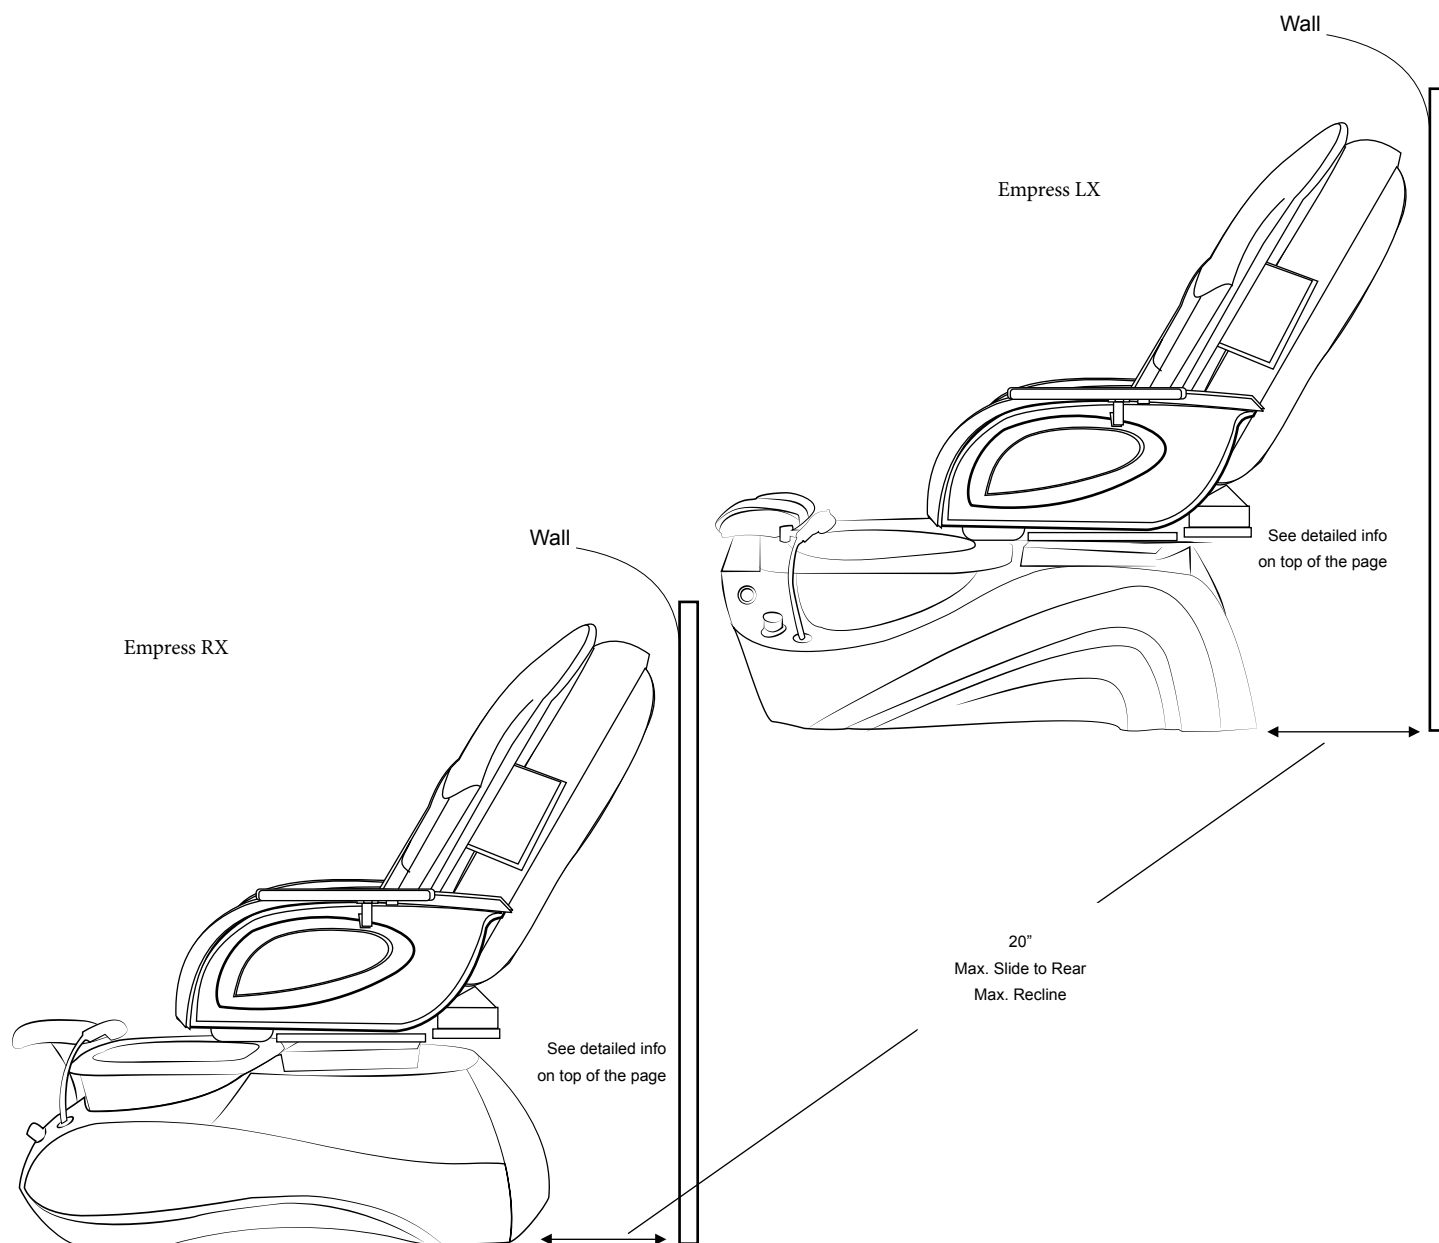


*****Due to continuous improvements on all our products, specification, characteristics, packing, color, designs are subject to change without notice.***


Empress SE/RTX: Identification

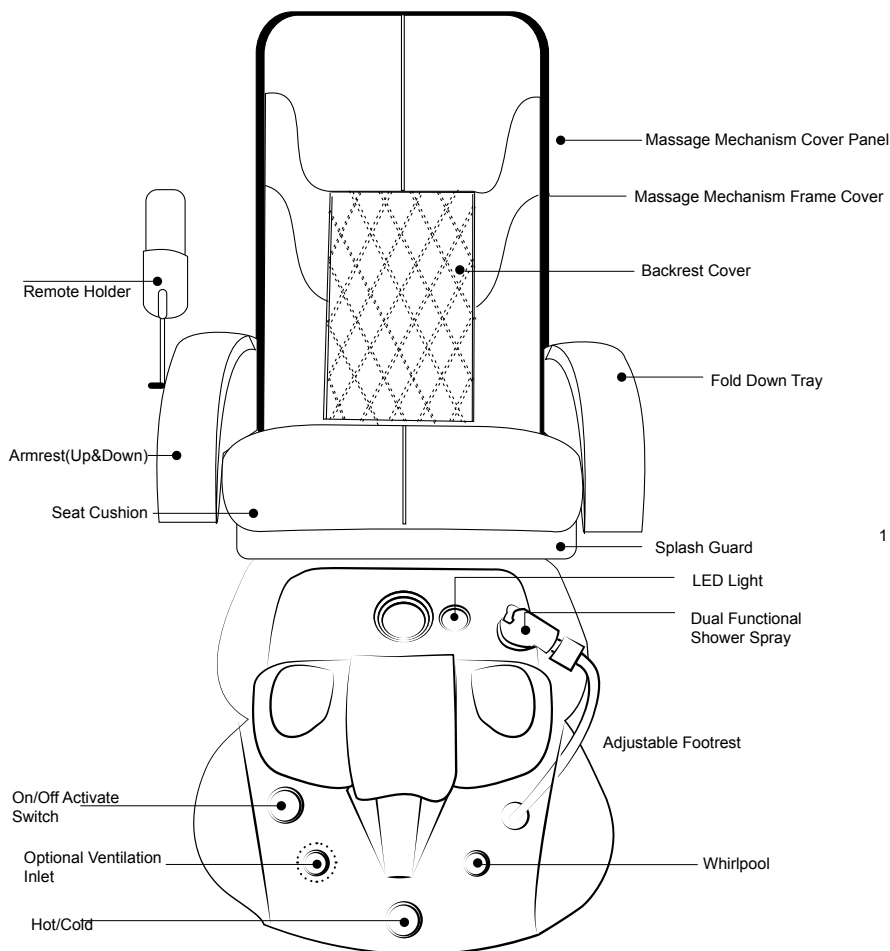


Rear View

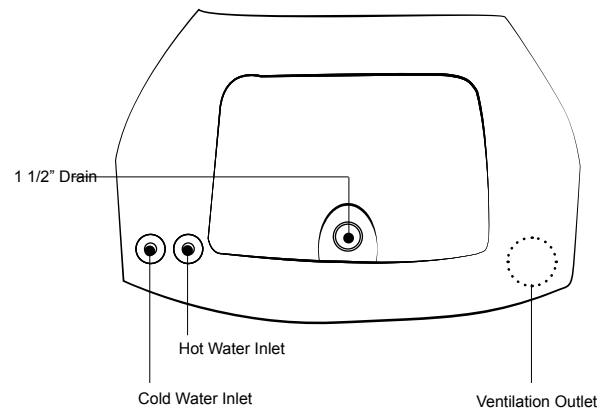


BASIN

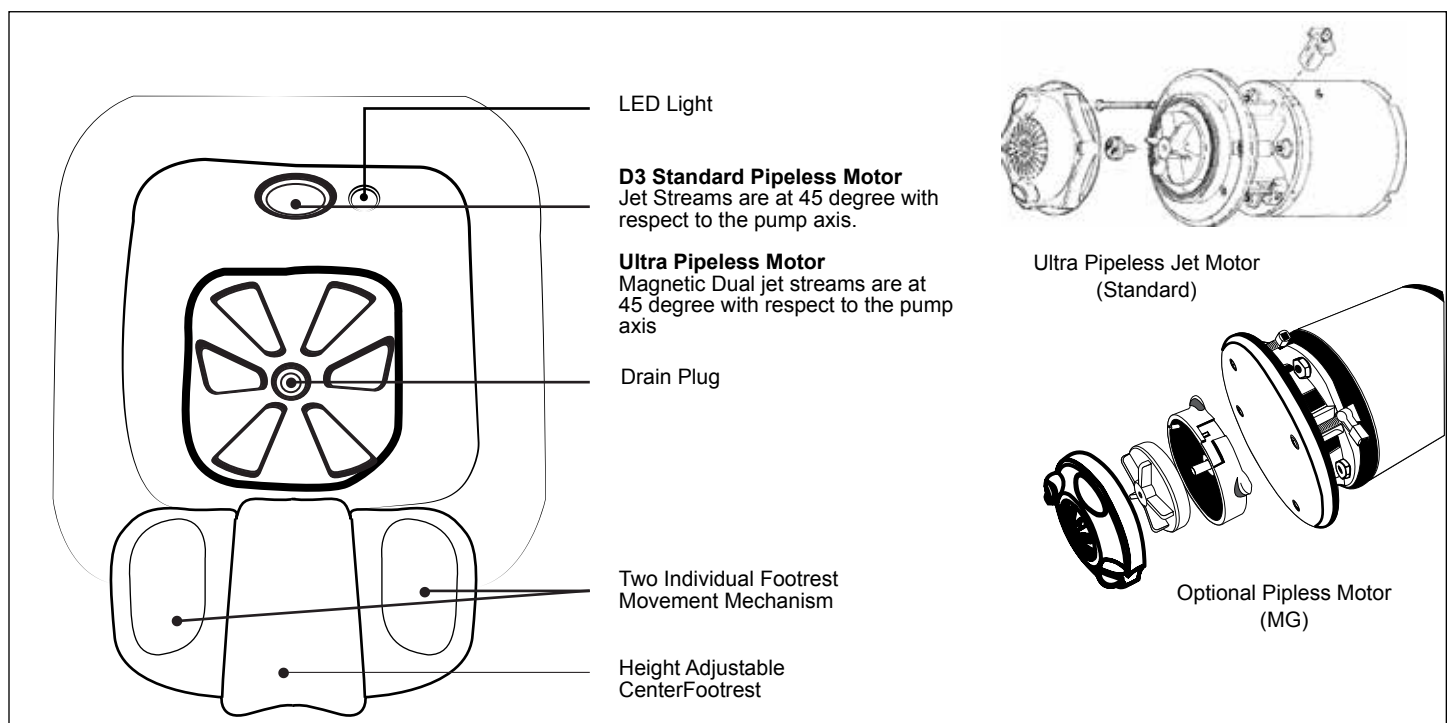


Empress LE/RTX: Identification

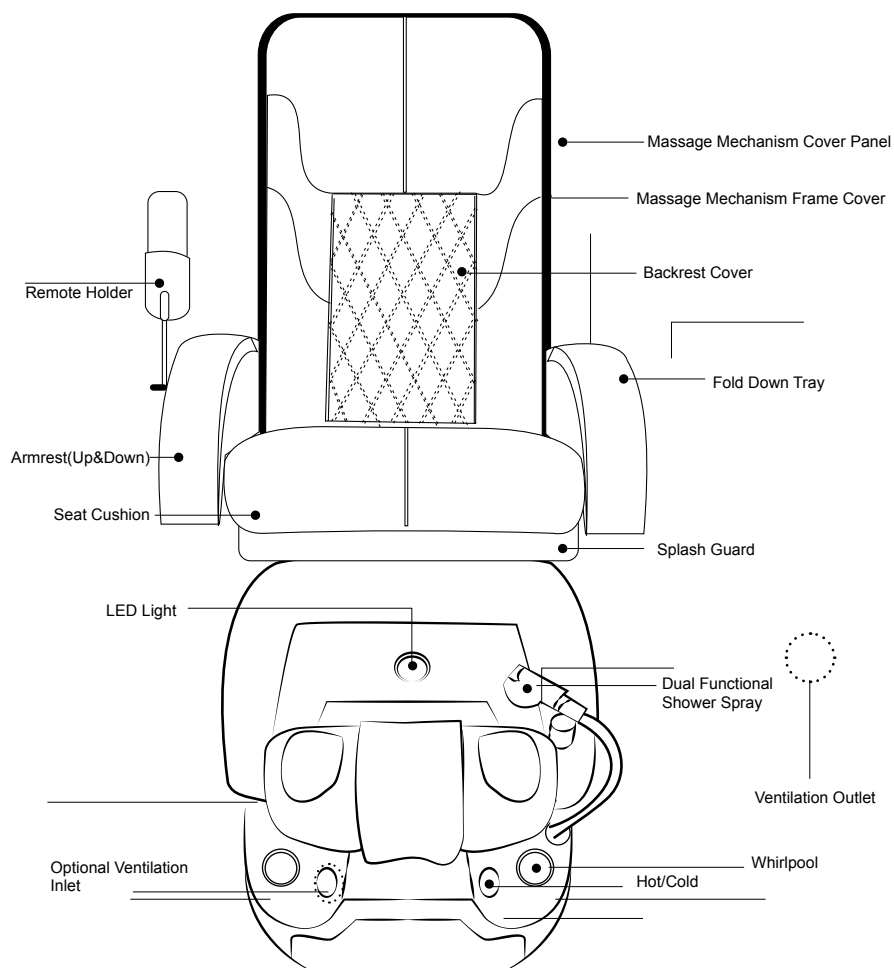

Rear View

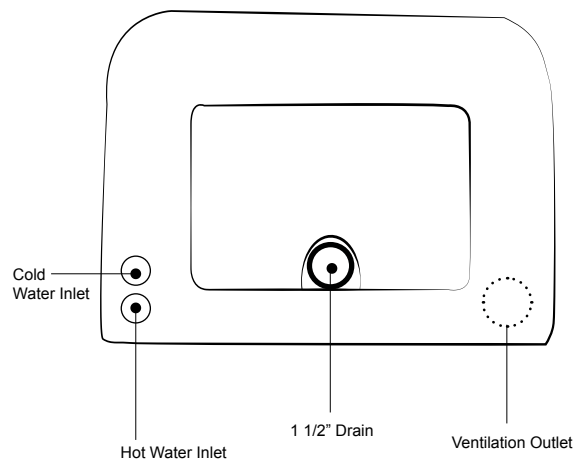




BASIN

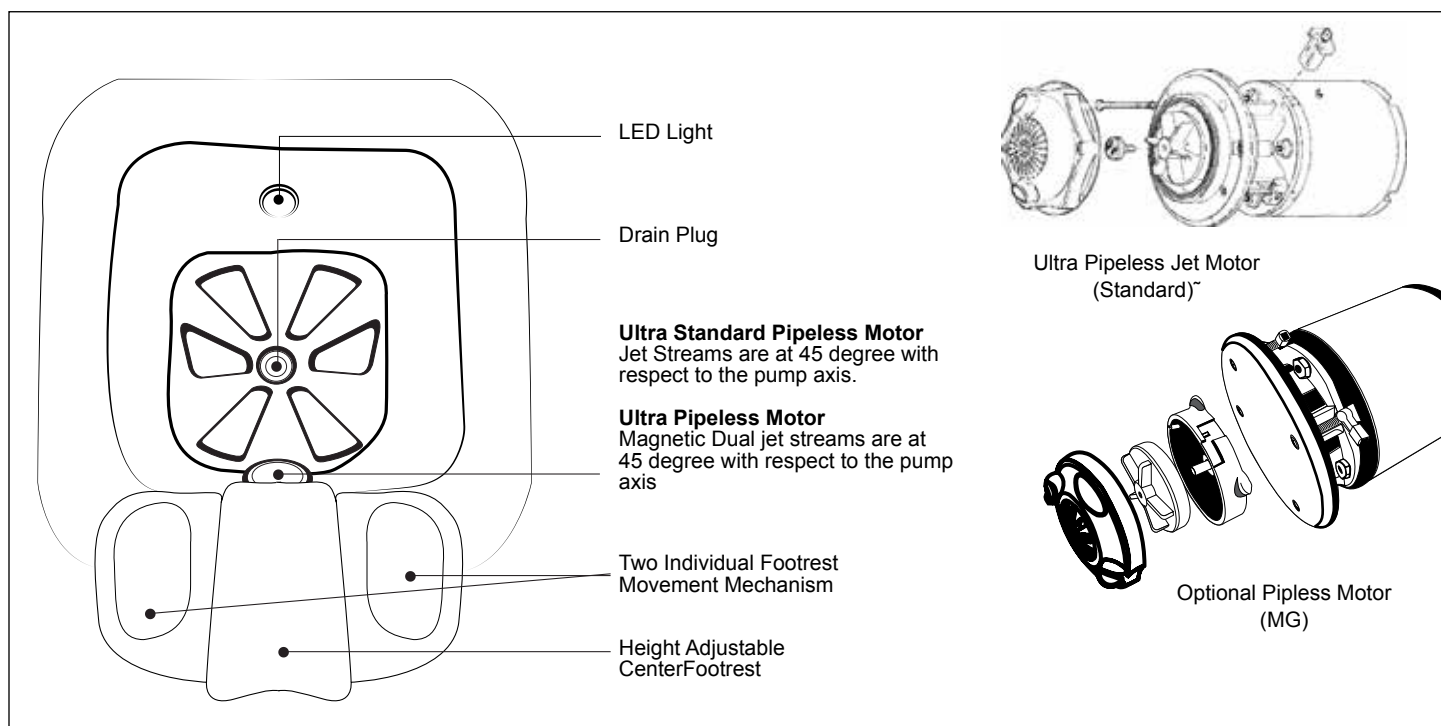


Empress SE/RTX: Dimension

Rear View

Wall drain outlet (1 1/2" PVC) Location/
Hot & Cold Inlet (1/2") Location

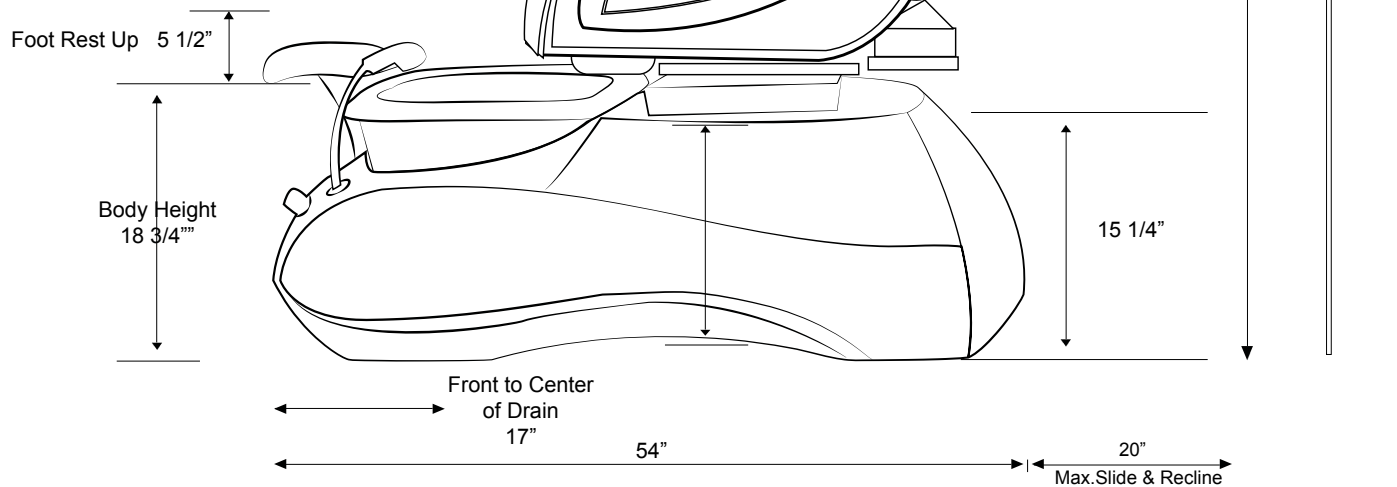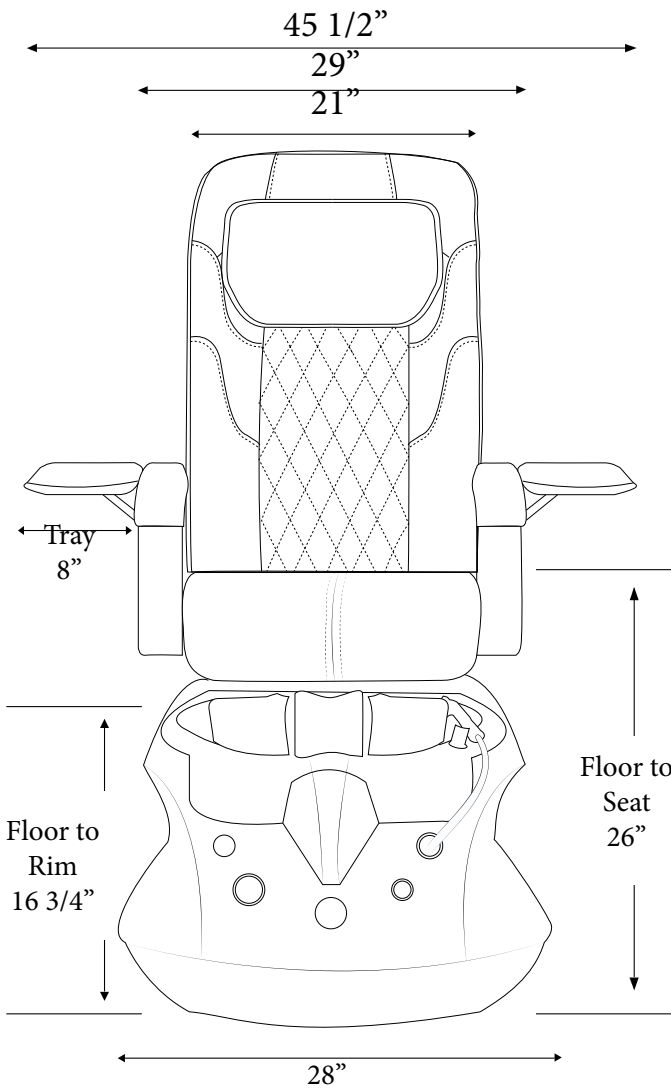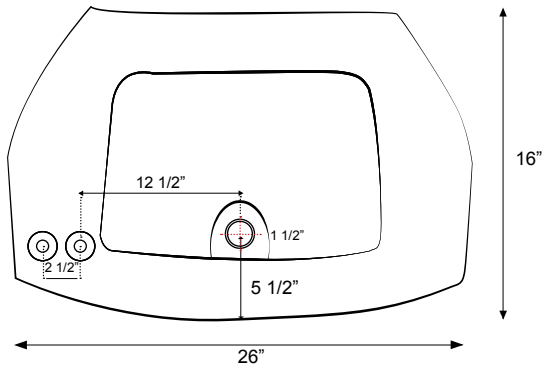


Empress LE/RTX: Dimension

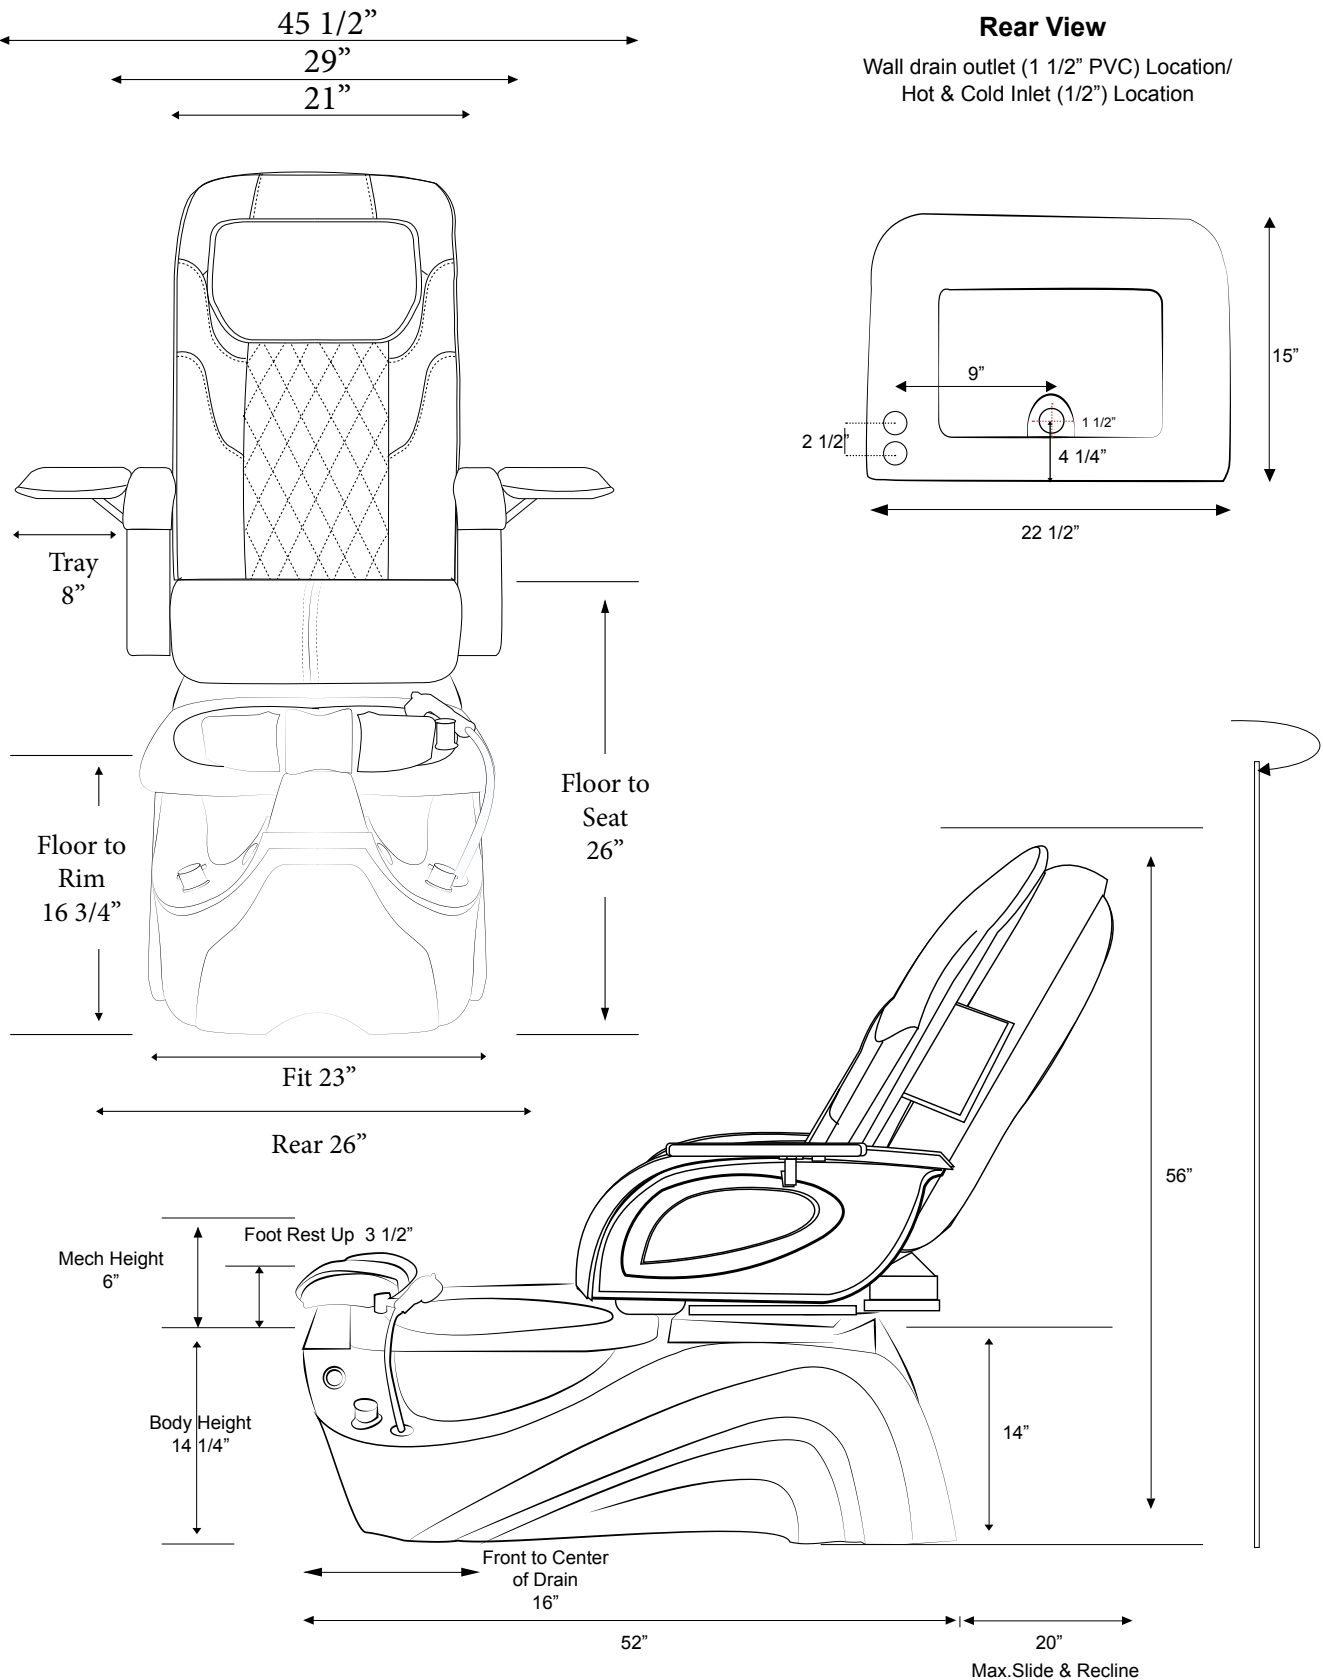


Empress SE/RTX: Drain


Wall Drain

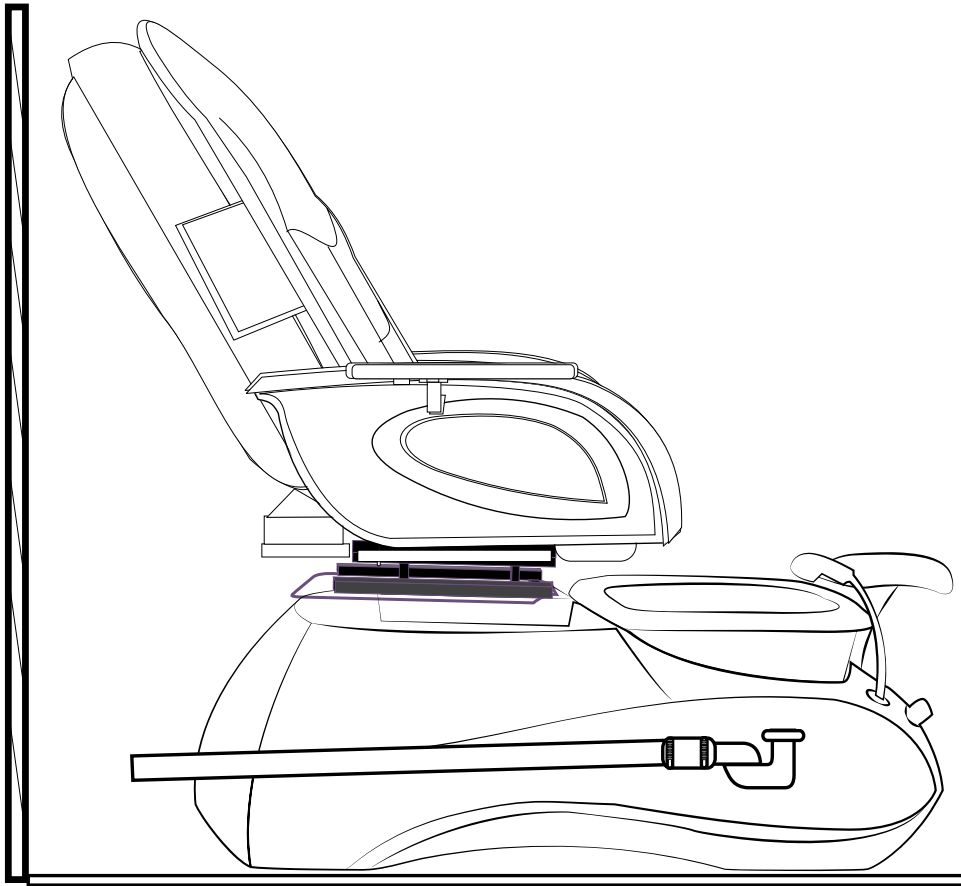

Power Drain
(See detailed power drain pump)

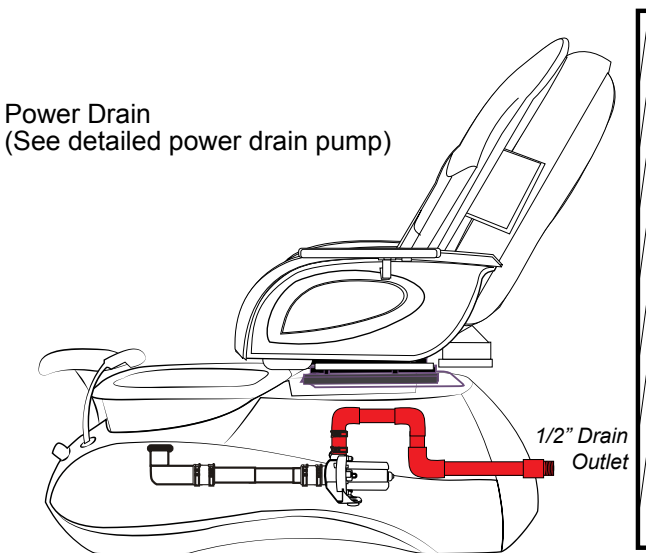


Basement Connection
(NOT recommended
on floor drain)

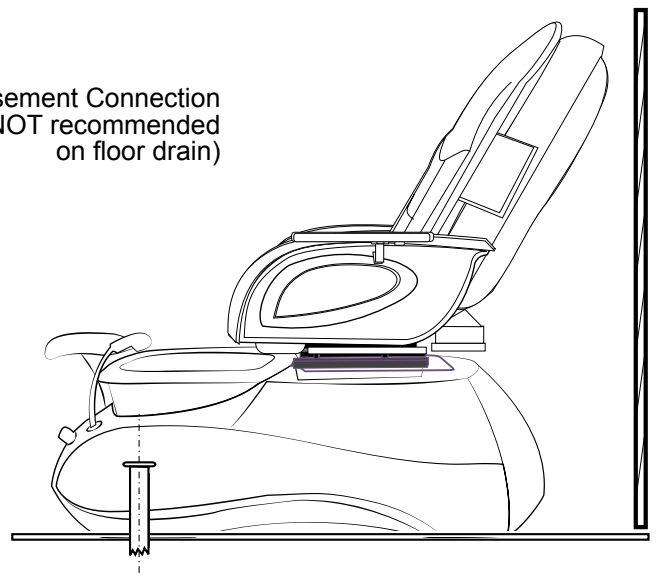


Empress LE/RTX: Drain

Wall Drain

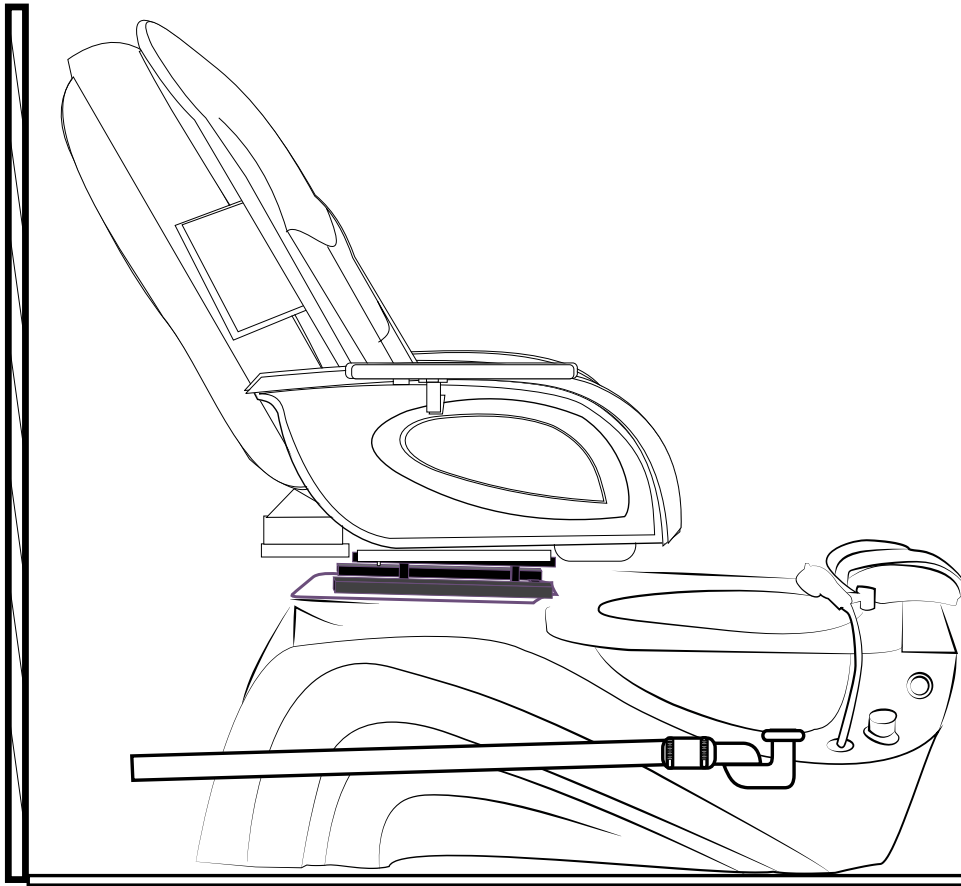


Power Drain
(See detailed power drain pump)

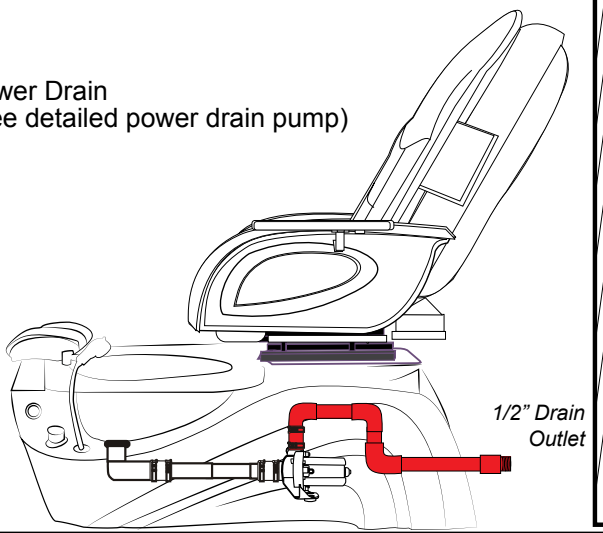

1/2" Drain
Outlet

Basement Connection
(NOT recommended
on floor drain)

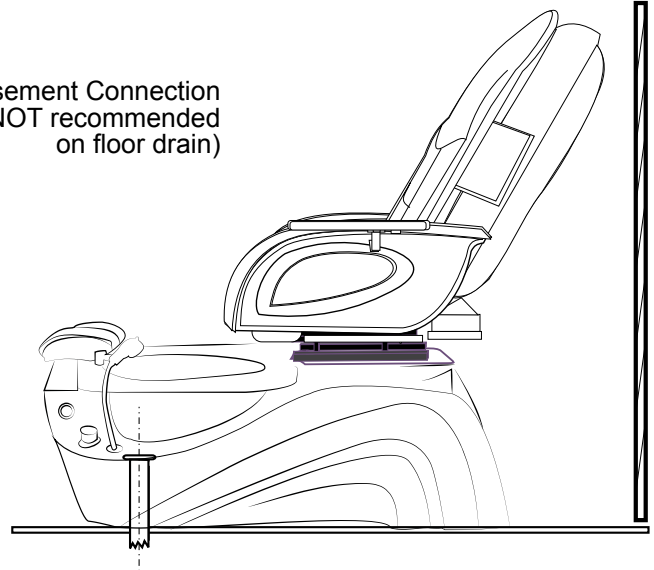

Empress SE/RTX: Discharge Pump (Optional)

Up to 4ft @ +/- 39 sec. with 1/2" Connection to main drain


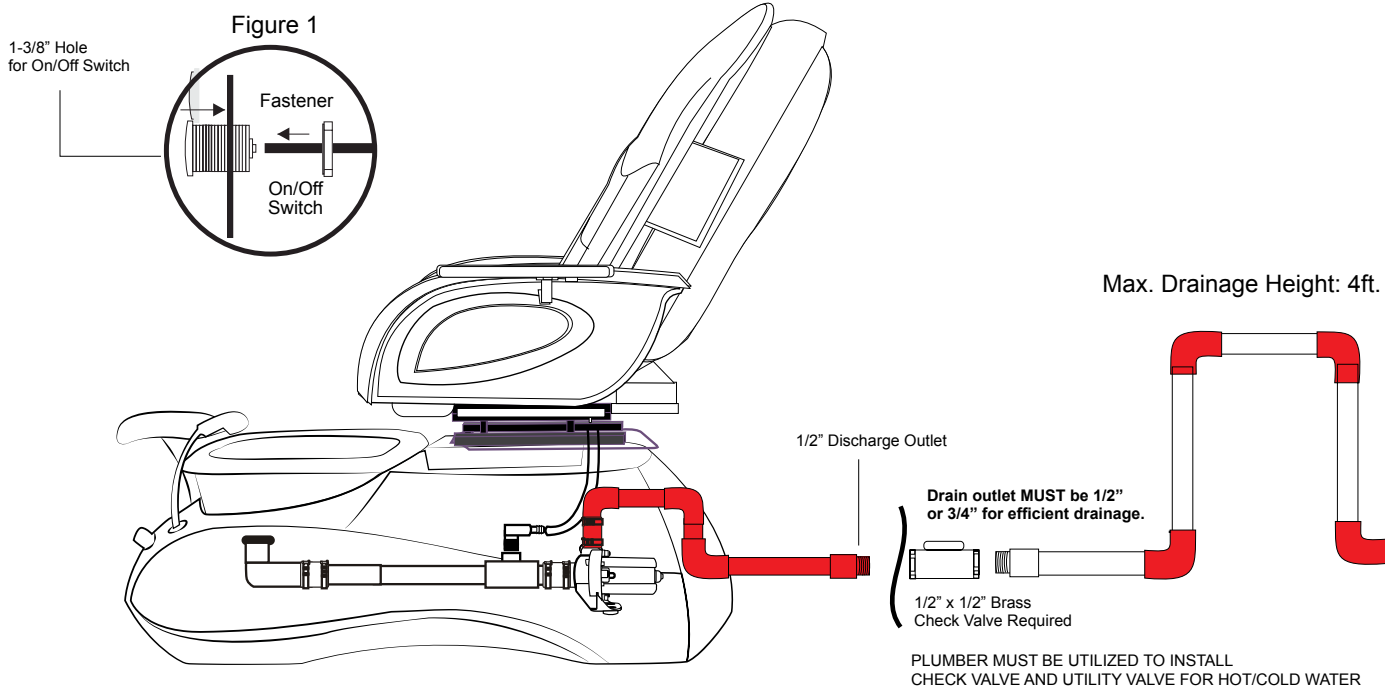


Figure 2

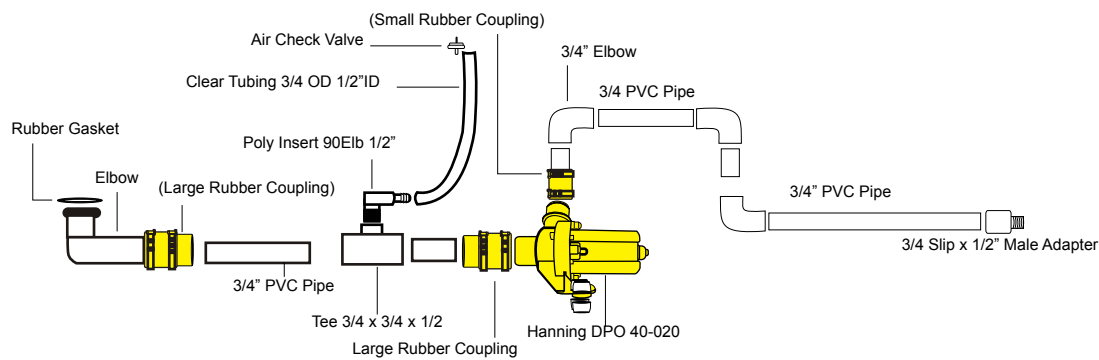


Installation Instruction:

1. Make a hole (size 1-3/8") for the On/Off switch as shown (see fig 1). Pre-drill required.
2. Placed a 1/8" clear hose into the rear of the switch and on/off switch into the hole.
3. The discharge pump kit is made to fit onto the pedicure unit. (See fig 2)
4. Connect E-Z connector onto the drain elbow.
5. Plug discharge pump outlet into the two minute timer outlet
6. Plug two minute timer into the wall outlet.
7. It is very important that tip of the clear tub remain above the water Level with one loop as shown.

Operation Instruction:

Warning ! DO NOT RUN DRY

1. Turn to open drain plug. 3 to 5 second for air to release from the pipe
2. Press On/Off switch to activate timer.
3. At any time, water drain completely from the basin. Press On/Off switch to stop or built in two minute timer.

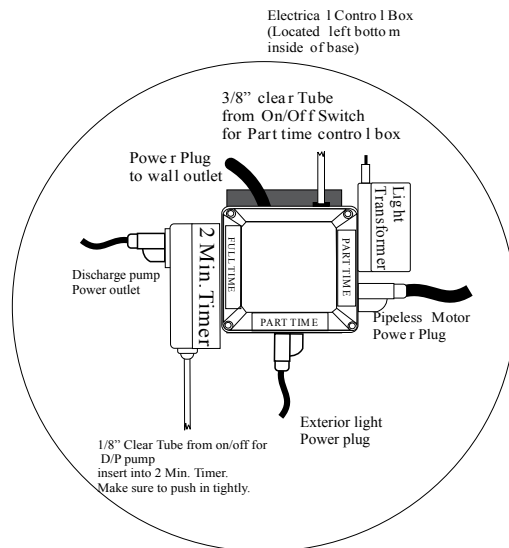

Empress LE/RTX: Discharge Pump (Optional)

Up to 4ft @ +/- 39 sec. with 1/2" Connection to main drain


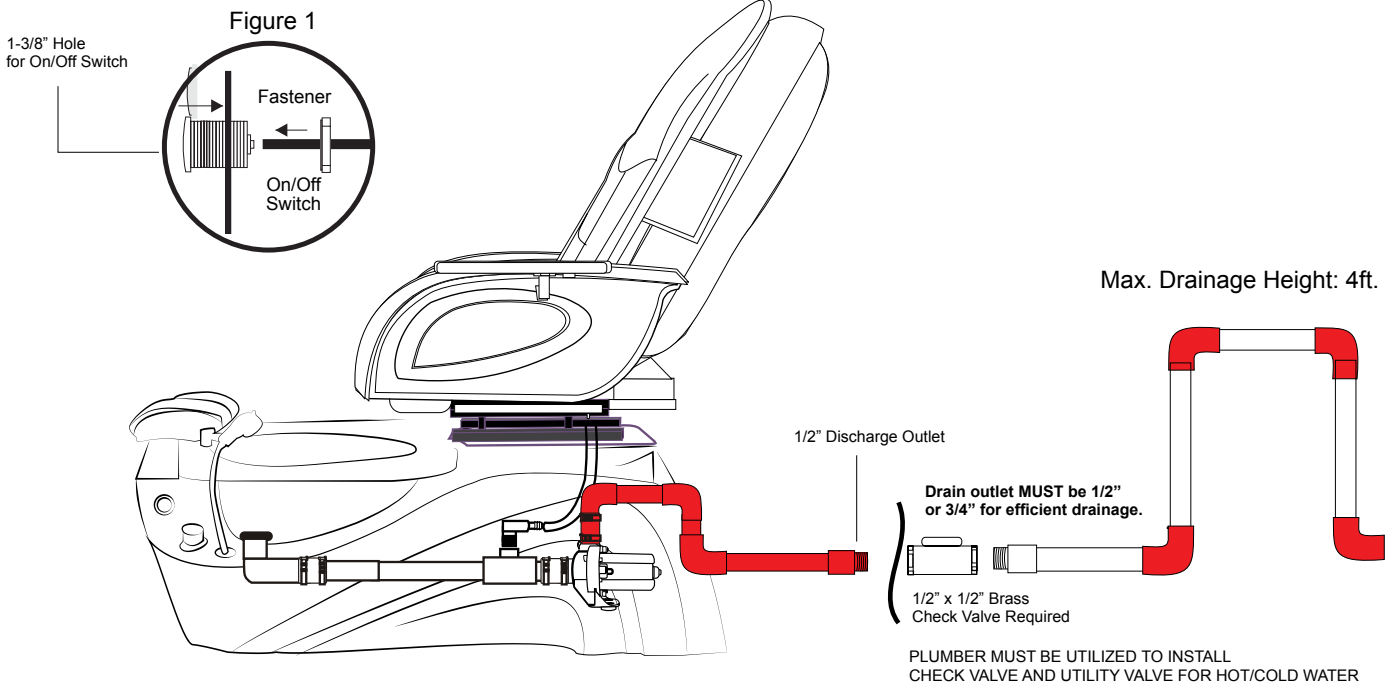


Figure 2

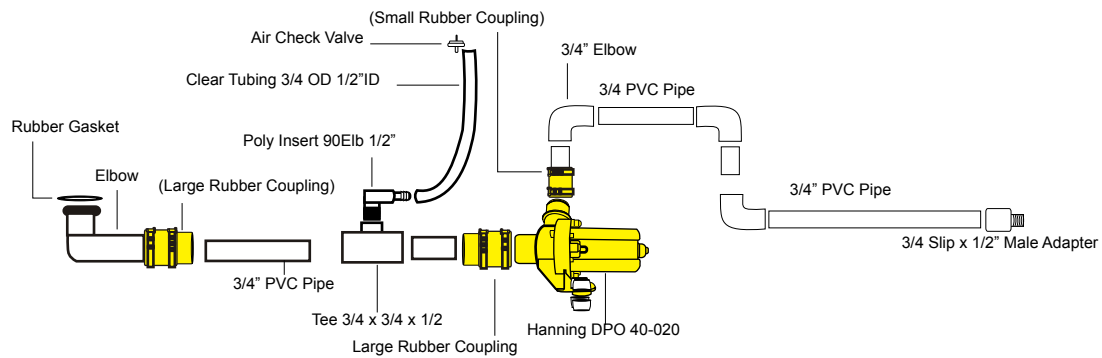


Installation Instruction:

1. Make a hole (size 1-3/8") for the On/Off switch as shown (see fig 1). Pre-drill required.
2. Placed a 1/8" clear hose into the rear of the switch and on/off switch into the hole.
3. The discharge pump kit is made to fit onto the pedicure unit. (See fig 2)
4. Connect E-Z connector onto the drain elbow.
5. Plug discharge pump outlet into the two minute timer outlet
6. Plug two minute timer into the wall outlet.
7. It is very important that tip of the clear tub remain above the water Level with one loop as shown.

Operation Instruction:

Warning ! DO NOT RUN DRY

1. Turn to open drain plug. 3 to 5 second for air to release from the pipe
2. Press On/Off switch to activate timer.
3. At any time, water drain completely from the basin. Press On/Off switch to stop or built in two minute timer.

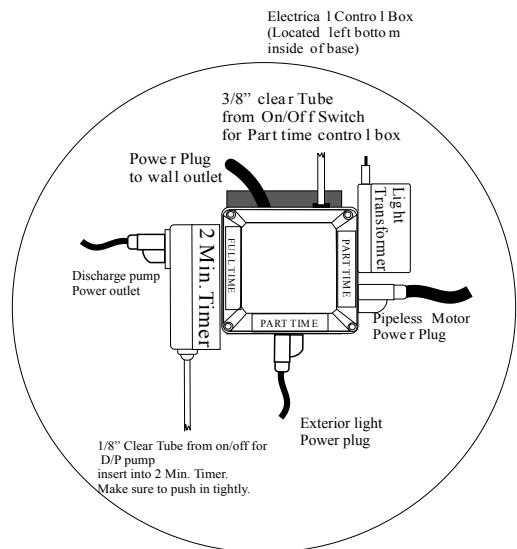


Ultra Jet Whirlpool Motor

Safety Instructions:



When using electrical equipment, basic safety precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons, including the following:

1. Read and follow all instructions before using the equipment.
2. Keep the cord out of heavy traffic area. To avoid fire hazard NEVER put the cord under the rugs, near heat generating devices.
3. Always turn off the equipment before servicing.
4. Do not drop or insert any object into any openings.
5. Do not operate any equipment with a damage parts.
6. Any other use not recommended by the manufacturer may electrical shock or injury to persons.
7. Never use outdoors
8. Do not attempt to repair or adjust any electrical or mechanical functions on the unit.

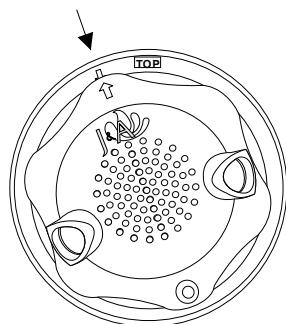

Close Jet Cover

1. Align an arrow line
2. Turn to right (Top indicated)

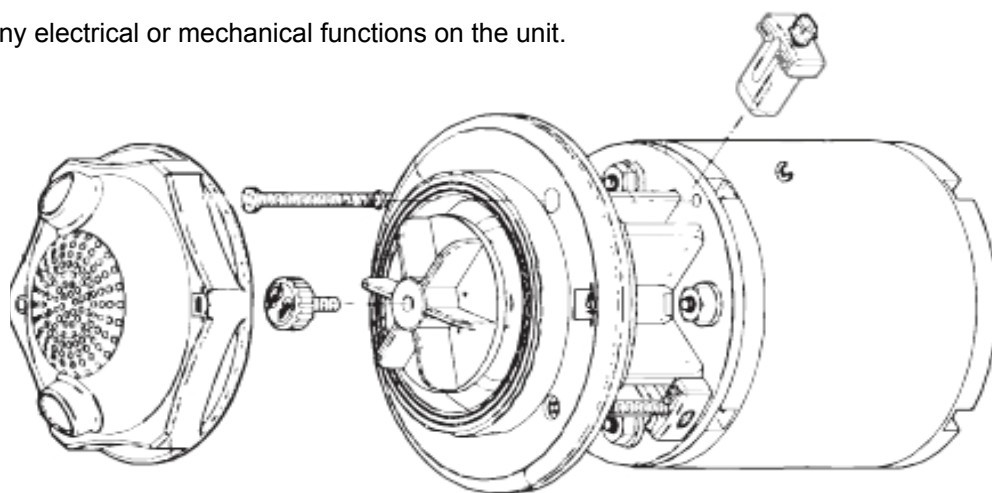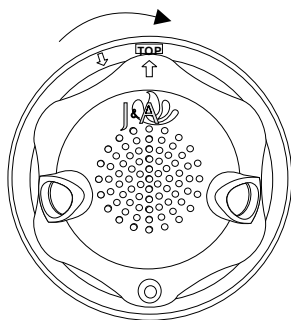

Features:

1. Dual powerful massage jet-streams
2. Jet assembly can be attached from the pump for quick cleaning and sanitizing.
3. Thermally Protected
4. AC motor (long life)
5. Extremely low power consumption .

Cleaning Instruction:

1. Turn the unit off and wait until the motor is fully stops.
2. Remove the front jet cover and notice the locking screw in the center
3. Remove the locking center screw (Indicated an Arrow) and pull out impeller from housing.
4. Use Anti-Bacterial solution (EPA Registered) to clean all part/s.
5. After sanitation, place impeller onto the motor shaft and fasten with center locking screw (Opposite arrow)

Ultra Pipeless Jet Whirlpool Motor Specifications:

Model: CS-0216A-MT

Rating: 120VAC / 60Hz, 0.4A - thermally Protected

Pump: Dual whirlpool Jet Flow

Mounting: Single 3.5" hole Diameter


Auto tighten Mounting screws(4)

Magna-Jet (Optional)

Safety Instructions:

When using electrical equipment, Basic safety precautions must be followed to reduce the risk of fire, electrical shock, and injury to Persons.

1. Read and follow all instructions before using the equipment.
2. Keep electrical cord out of heavy traffic area. To avoid fire hazard NEVER place electrical cord under the rug, near heat Generating devices.
3. Always turn power off the equipment before service.
4. Do not drop or insert any object into any openings.
5. Do not operate any equipment with damaged parts.
6. Any other use not recommended by the manufacturer may cause electrical shock or cause injury to person/s.
7. Never use it outdoors
8. Do not attempt to repair or adjust any electrical or mechanical.

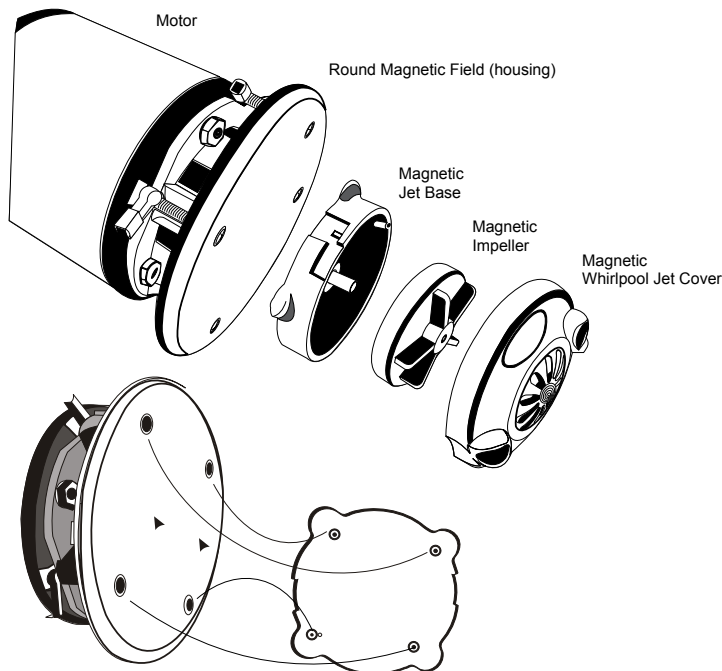

MAGNA JET Features:

1. Hydro dual massage jet stream
2. Magnetic whirlpool jet cover can be remove for quick cleaning and sanitizing.
3. Built-In electronic sensor for pump control.
4. AC Whirlpool motor (long life)
5. Very low power consumption (27W)
6. Manufactured in USA.

Cleaning Instruction:

1. Turn off the unit and wait until the motor is fully stops.
2. Hold hydro whirlpool jet cover firmly and pull to separate from the round magnetic field.
3. Turn hydro whirlpool jet cover to left to open and pull out impeller.
4. Use Anti - Bacterial solution (EPA Registered) to clean all parts.
5. After sanitize all parts, place impeller and close hydro whirlpool jet cover to turn right to lock
6. Hold firmly the whirlpool cover jet and gently place it onto the round magnetic field. Do not release the hydro whirlpool jet cover until jet cover is on the round magnetic housing.

MAGNA-JET Specifications:

Model:MAGNA-JET-120 VAC, 60HZ, 1.0Amp

Pump: Hydro-Massage Dual Air Jet Flow

Mounting: Single 3.5" Hole Diameter Auto Tighten Mounting Screws(4)

How to USE Magnetic Jet!

WARNING: DO NOT RUN DRY, BASIN MUST FILLED WITH WATER TO LEVEL INDICATOR.


CAUTION: MAGNETIC JET COVER ASSEMBLY MUST ALIGN WITH DISCHARGE PORT POSITIONED AT 3/9 O'CLOCK.

When Ready to use, **MAKE** sure jet cover is positioned at 3/9 O'clock for proper whirlpool action in the basin. If jet cover is not align at 3/9 O'clock, water will splash outside of the basin.



Proper way to use Magnetic Jet System:


1. Fill the water to water level indicator.
2. Hold Magnetic Jet firmly to bring closer to the round magnetic filed and do not release the Magnetic Jet prematurely or this will cause impacts on the jet cover and the round magnetic field(housing) shortening the life expectancy of the jet cover. When the jet cover nears the round magnetic field, place jet cover onto the four dimple area (see diagram). The jet cover must align with discharge ports positioned at 3/9 O'clock.
3. When finished with client, DO NOT remove Magnetic Jet until motor is fully stopped.
4. When motor is fully stopped, remove Magnetic Jet cover from the motor and remove jet cover and impeller for sanitation.

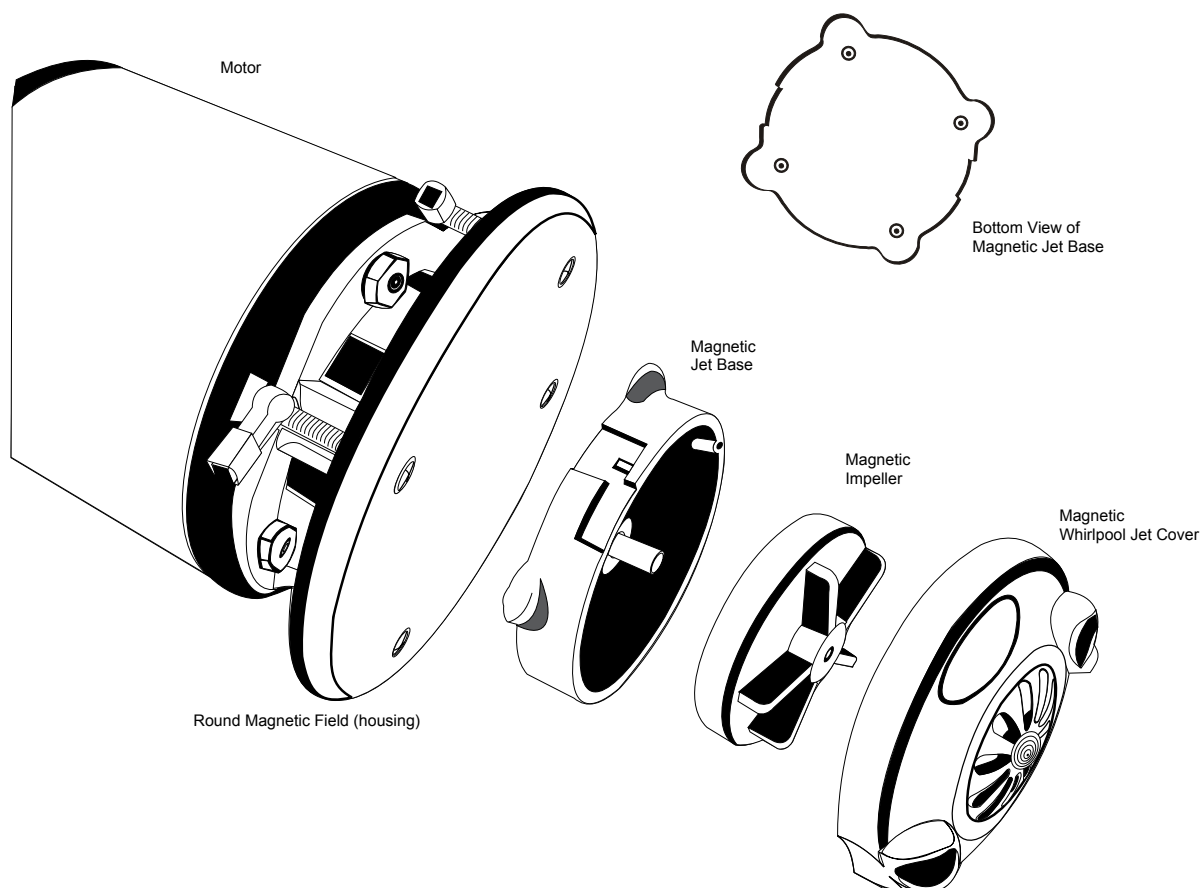




Auto Fill System (Optional)

Feature & Operation


- Automatic spa fills with intelligent and reliable level sensor.
- Can be used with disposable liners
- Time delay setting
- Dual switched outlets/ Control box
- Dual continuous outlets
- Single drain pump controlled outlet with 3 minute timer (If drain pump requested as an option)
- Heavy duty water valve
- Operated in automatic or manual mode
- Built in LED light power supply
- Audible overflow warning in manual fill mode

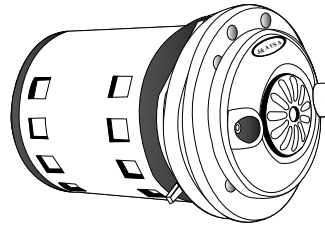


Magna Jet Built-in Electrodes Water Sensor

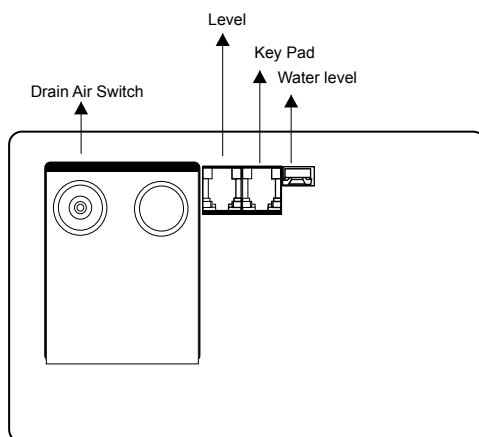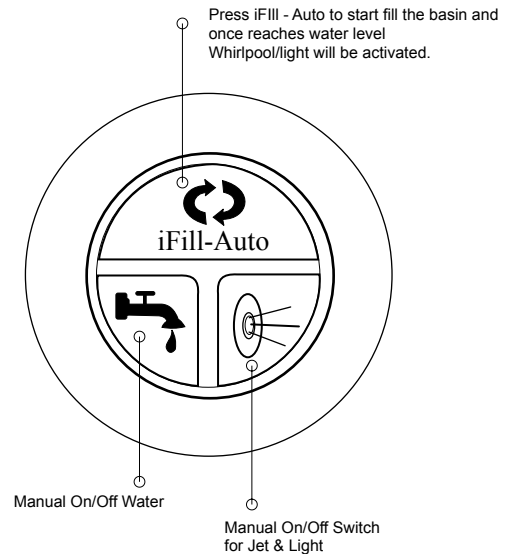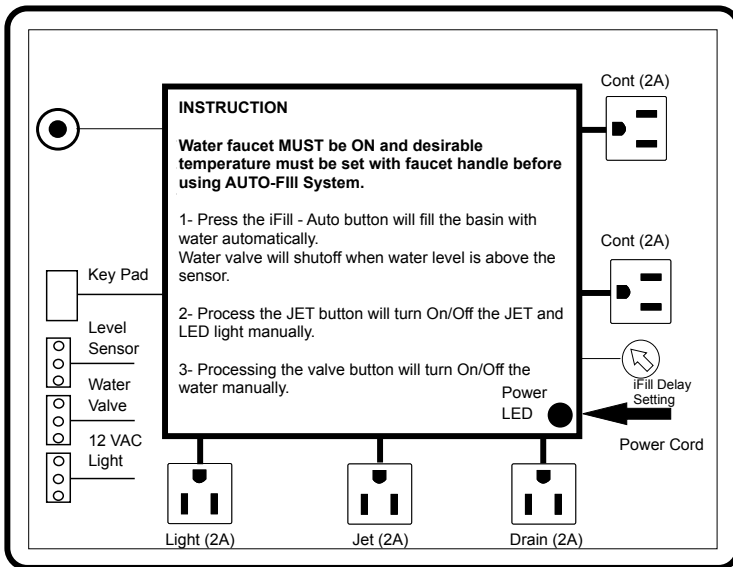

ALL WIRES ARE INDICATED AS IT SHOWN

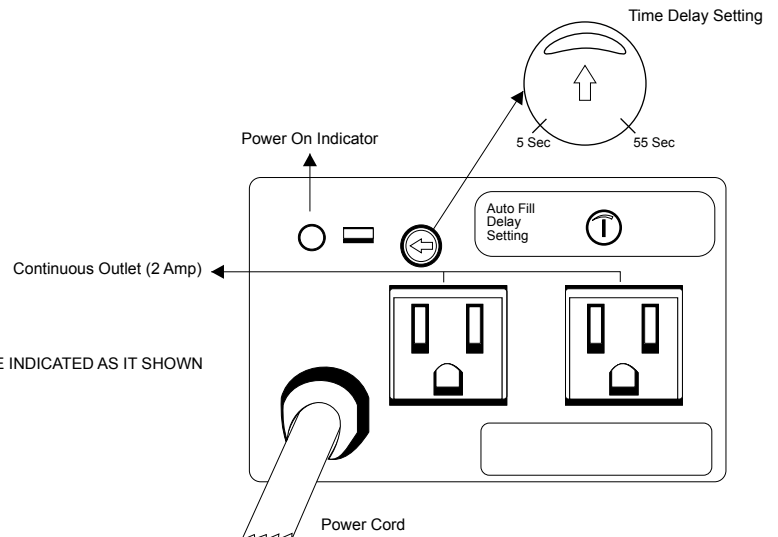

Empress LE/SE: Remote Control Functions

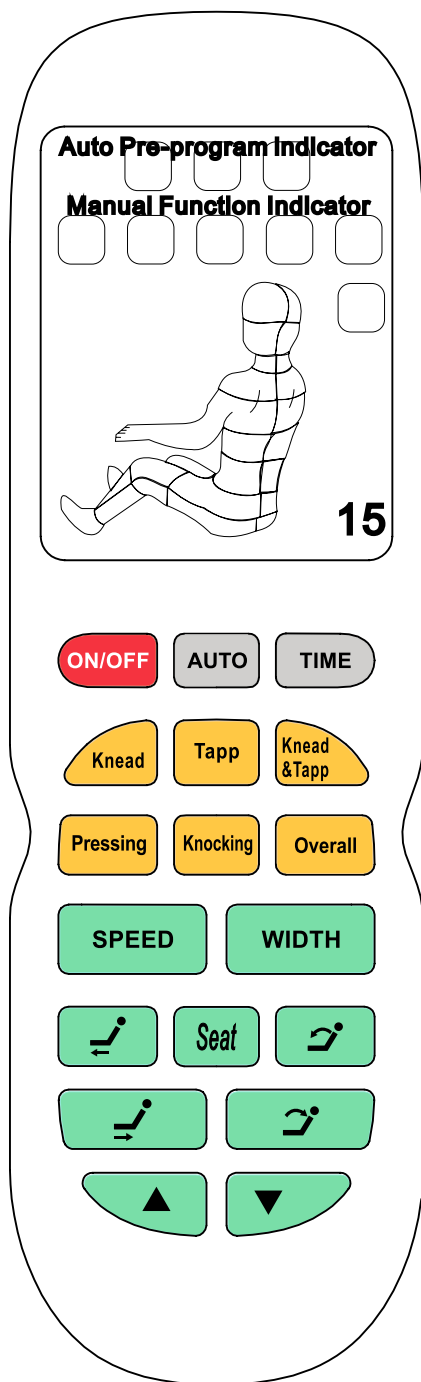

ON/OFF

Press this button to switch on /off in turn.

When power on, Automatic icon and Massage Method icon on the LCD screen will be lit up; when power off, STOP icon on the LCD screen will be lit up.

AUTO

Press this button, the massage machine enters or exits the automatic control state. There are three modes under the automatic state, each time press the button, followed by the back massage - shoulder massage - waist massage - automatically stop, the corresponding image on LCD screen is flashing.

In auto mode, seat pressure or vibration massage function is opened automatically.

TIME

The default display is 20mins, each time press the time key, the time display is followed by 10 → 20 → 30mins. After time is set ok, the display time decrements every minute until to 00, then the machine will shut down.

Knead

In manual state, you can manually open and close a variety of massage techniques. Press this button, massage machine starts kneading, the corresponding light-emitting diode lights on and the kneading image is flashing on the LCD screen.

Tapp

Press this button, massage machine starts tapping, the corresponding light-emitting diode lights on and the tapping image is flashing on the LCD screen.

Knead & Tapp

Press this button, the massage turns into knead + tapp mode, the corresponding diode lights up and the image of knead + tapp on the LED screen is flashing.

Pressing

Press this button, the massage turns into pressing mode, the corresponding diode lights up and the image of pressing on the LED screen is flashing.

Knocking

Press this button, the massage turns into knocking mode, the corresponding diode lights up and the image of knocking on the LED screen is flashing.

Overall

Press this button, the massage machine enters the whole work state, the corresponding light-emitting diode is bright; The corresponding image on the LCD screen is flashing. (In automatic state, this key is invalid.)

SPEED

In manual mode, the working state of the massage machine is kneading, tapping, knead+Tap, knocking and shiatsu, press this key to adjust the speed by turns, 1→2→3→4→5. The corresponding display speed bar on the LCD screen is gradually increasing.

WIDTH

In manual mode, if the working state of the massage machine is tapping, shiatsu and knocking, press this button, width can be adjusted to narrow→middle→wide by turns. The corresponding image is displayed on the LCD screen.



Keep pressing this button for a while, seat slides forward; release the key, seat stops moving.



Keep pressing this button for a while, seat slides backward; release the key, seat stops moving.



Keep pressing this button for a while, back-rest raises up; release the key, back-rest stops moving.



Keep pressing this button for a while, back-rest moves down; release the key, back-rest stops moving.

Seat

Press this button, the corresponding indicator light will be on, vibration function or air massage on the seat will start to work and the corresponding seat icons on the LCD screen starts to flash.






In manual state, press this button for a long time, massage machine will go up; Press this button for a long time, massage machine will go down.




In automatic state, these two buttons are invalid.

Massage Mechanism Exposed View

EXPOSED VIEW

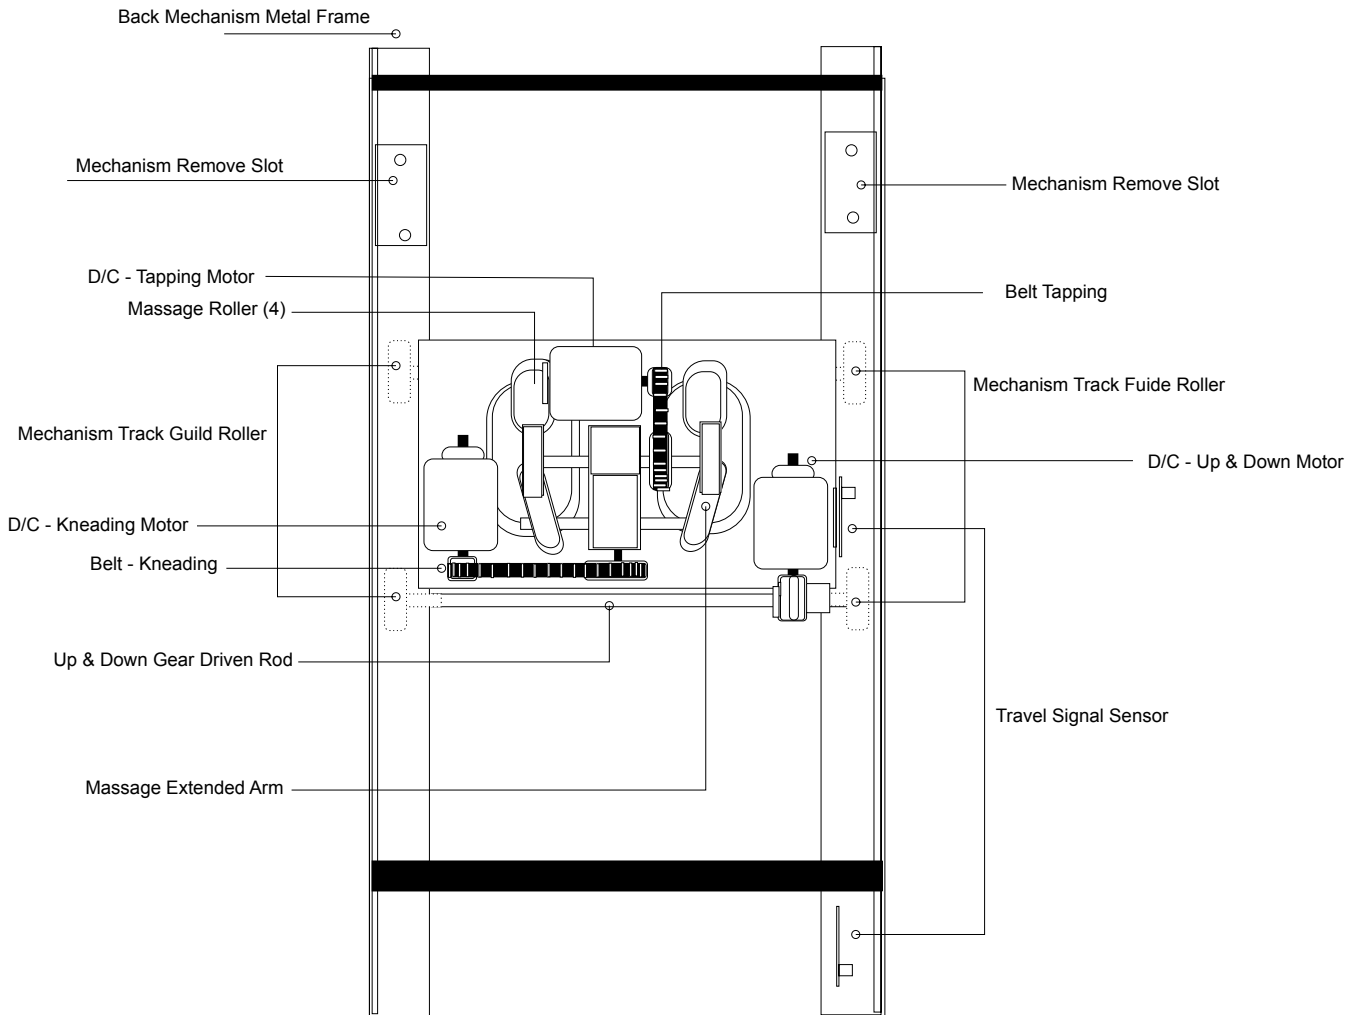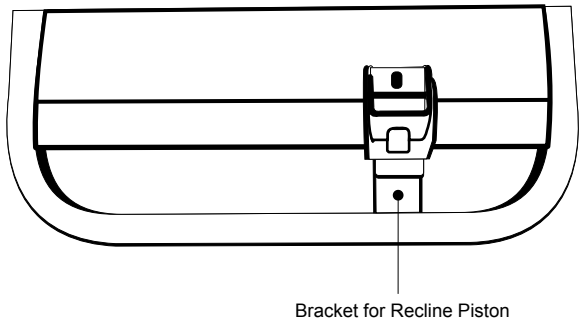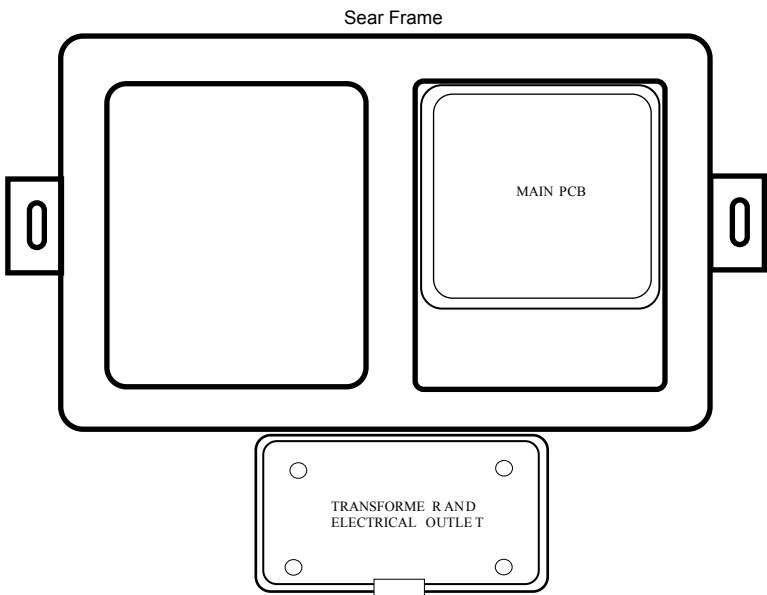


Placing Backrest in Correct Position

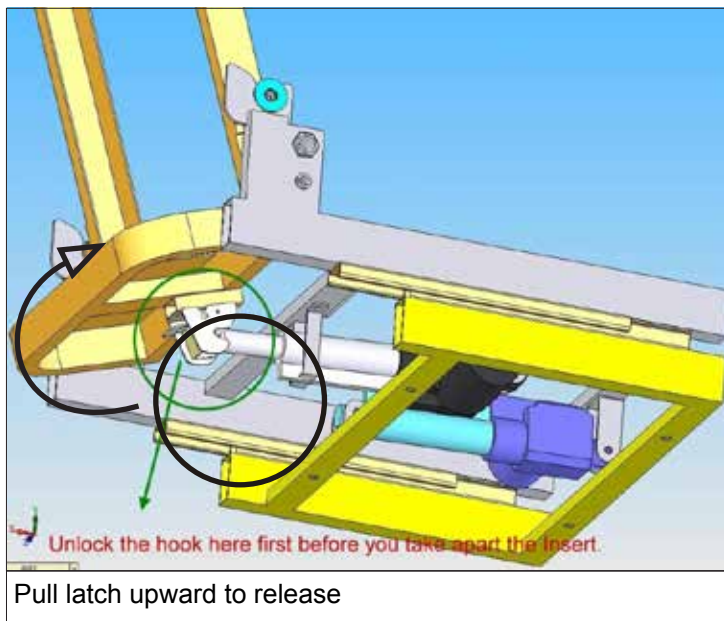


Detachment of Backrest

- Pull latch lever upward to release from recliner piston.
- As arrow indicates, bring backrest to fold onto the seat.
- Disconnect all cables (recliner, slider).

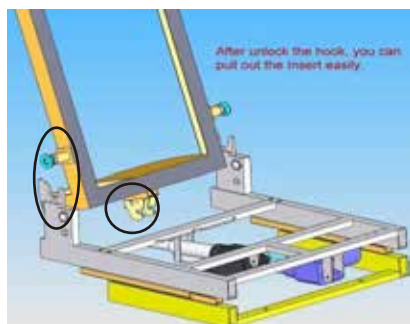

Attachment of Backrest

- On the lower portion of both side of the backrest, there are pivots.
- Align both pivots correctly so they rest perfectly onto the "U" pivot frame.
- Once both pivots sit snugly on the "U" pivot frame, align the release latch with the recliner piston and snap close.

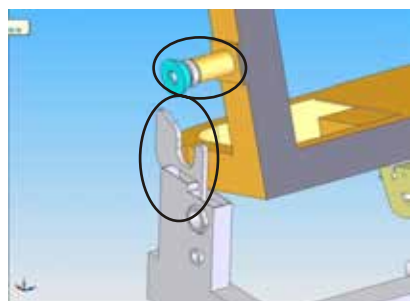


Before operating the chair upon attachment, check following items to ensure proper operation

Figure 1: Shows pivot and "U" pivot frame at correct alignment/ be sure to clear wire

Figure 2: Close-up view of pivot and "U" pivot frame.

Figure 3: Shows correct pivot alignment.

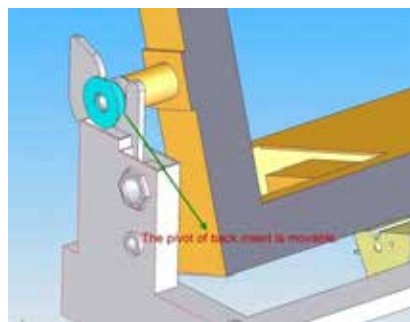

The pivot of back insert is removable

Operation - Caution

WARNING: To avoid damage to the chair

1. User's maximum weight is 264lbs; weight excess may cause damage to massage machine or permanent damage to other parts.
2. Please don't crush or drop the control set. Don't pull control cable or electric wire. Be careful not to clamp the cable between armrest and back of the chair.
3. Please don't touch cloth material of the chair with sharp object, and be careful not to drop cigarette, ash or lighters on the chair. Chair exposure in the direct sunlight may fade the cloth material.
4. If there is abnormal function in the chair, please shut off power and contact an authorized dealer and / or J&A service.
5. Don't repeat pressing any keys in very short time in case of any abnormal functions.
6. Noise coming from inside when it is turned on is normal; it's the chair's internal structure.
7. Make sure there are no obstacles behind the chair before adjusting the chair's position. The maximum adjust range is 0-5.25". Please lower the chair slowly and gradually to avoid touching the wall or other object that can make the chair function improperly.
8. Each time when finish the massage, please turn off the power and unplug the chair.

Grounding instruction

- To reduce the risk of electric shock, proper grounding is required for the chair. The chair power plug **MUST** be connected to GFCI (Protected Ground Circuit) outlet. Please refer to grounding instructions. And the power plug should be accessible after installation.
- If you have any questions regards to the chair Please consult with licensed electrician and /or J&A Service for specification or requirement of chair.
- Do not modified or altered without an authorized distributor or J&A USA.
- All expressed or implied warranties will be null and void.
- Please don't use a plug adapter (Multi Outlet).

Troubleshooting Guide

If there is still a problem after trying the solutions given in the troubleshooting guide, stop using the product immediately so as to prevent accident or injury and unplug the product from the wall outlet. For technical service, please contact J&A technical support at 631-243-5300 with any issue that cannot be resolved using troubleshooting guide.

<ul style="list-style-type: none"> • No water movement • On/Off button - No click sound • On/Off button - Click sound 	<ol style="list-style-type: none"> 1-Verify unit is plugged in to live wall outlet. 2- Press reset button on the wall outlet. 3- Verify air activated tube is plugged in to black control box. 4- Ensure that the magnetic jet assembly is properly and securely attached to the basin.
<ul style="list-style-type: none"> • Water not Draining • Not Draining properly • Not Draining properly with PDP (Power Discharge Pump) 	<ol style="list-style-type: none"> 1- Be sure Drain plug is set high enough to allow water to pass through (Gravity Drain) 2- Check for plugged drain and clear if clog is found. 3- If pump is heard, Check for plugged drain and clear if clog is found. 4- If pump is heard , Check for air lock (see PDP in manual) follow instruction. 5- If pump is not heard, verify discharge pump is properly connected to two minute timer and to black control box. 6- If pump is not heard, verify two minute timer.
<ul style="list-style-type: none"> • Water Pressure is low and/ or not coming out. • The water sprayer is not working or very little water comes out of the sprayer. 	<ol style="list-style-type: none"> 1- Verify if water utility valve is on. 2- Check for loose water connections under the basin and at the rear of the basin 3- Check if sprayer screen is clear. 4- Verify if water supply braided hoses are snug and not twisted on the faucet.
<ul style="list-style-type: none"> • Losing water • The basin continually loses water either quickly or slowly 	<ol style="list-style-type: none"> 1- Check drain plug for tears in rubber gasket 2- Check drain plug height is correct and bolt below plug is tight. 3- Verify drain strainer is tight. 4- Verify if water level is correct.
The chair can't be operated at all	<ul style="list-style-type: none"> •Electric wire has been taken off. •Power key is still on OFF mode. •Massage roller is on the way of storage .It will work after the roller comes to the storage position. Electric wire or plug is broken. It should be replaced by manufacturer, appointed repairman, or qualified technicians. •Fuse is broken. Please replace it with a new one of same specification. •For internal circuit troubles, please send it to appointed repair place for check.
No water movement On/Off button - No click sound On/Off button - Click sound	<ol style="list-style-type: none"> 1-Verify unit is plugged in to live wall outlet. 2- Press reset button on the wall outlet. 3- Verify air activated tube is plugged in to black control box. 4- Ensure that the magnetic jet assembly is properly and securely attached to the basin.
Water not Draining Not Draining properly Not Draining properly with PDP (Power Discharge Pump)	<ol style="list-style-type: none"> 1- Be sure Drain plug is set high enough to allow water to pass through (Gravity Drain) 2- Check for plugged drain and clear if clog is found. 3- If pump is heard, Check for plugged drain and clear if clog is found. 4- If pump is heard , Check for air lock (see PDP in manual) follow instruction. 5- If pump is not heard, verify discharge pump is properly connected to two minute timer And to black control box. 6- If pump is not heard, verify two minute timer
Water Pressure is low and/ or not coming out. The water sprayer is not working or very little water comes out of the sprayer.	<ol style="list-style-type: none"> 1- Verify if water utility valve is on. 2- Check for loose water connections under the basin and at the rear of the basin 3- Check if sprayer screen is clear. 4- Verify if water supply braided hoses are snug and not twisted on the faucet. 5- Verify if clogged in Hot and / or Cold water braided hose
Losing water The basin continually loses water either quickly or slowly	<ol style="list-style-type: none"> 1- Check drain plug for tears in rubber gasket 2- Check drain plug height is correct and bolt below plug is tight. 3- Verify drain strainer is tight. 4- Verify if water level is correct.



Back Flow Protection Device (Dual Check Valve)

May.1.2014

In accordance with applicable Local or State regulations,
Empress, The manufacturer of the pedicure whirlpool spa certifies that all models are
equipped with factory installed Dual Check Valve back flow protection:

**EMPRESS

The specification of the installed device is as follows:

DEVICE NAME	DUAL CHECK VALVE BACKFLOW PROTECTION
DEVICE MANUFACTURER	NEOPERL INC. Waterbury CT.
DEVICE MODEL	Dual Check Valve 1/2" x 1/2"NPT
DEVICE SPECIFICATION	TESTED AND CERTIFIED TO MEET NSF/ASSI 61 Complies with ANSI/ASME A112.18.3M, A112.18.1M AND CSA B125
DEVICE PRESSURE	MAXIMUM PRESSURE: 150 PSI (10 BAR) SERVICE PRESSURE : 80 PSI
DEVICE TEMPERATURE	MAXIMUM TEMPERATURE : 150F SERVICE TEMPERATURE : 90F

ALL MODELS OF PEDICURE SPA MENTIONED ABOVE ARE EQUIPPED WITH THE SUBJECT DEVICE
AS STANDARD FEATURE. As for your information, indicated State requires Vacuum Breaker.

** Effective April 01 2005:

ARIZONA, CALIFORNIA, NEBRASKA, NEVADA, OREGON,
TEXAS AND WASHINGTON

** Effective June 15 2005:

ILLINOIS, MINNESOTA, WISCONSIN, MICHIGAN

** Effective May 01 2007:

CONNECTICUT

For additional information, Please contact us at 631-243-5300

Very Truly yours,

Technical Support

EMPRESS

335 Crooked Hill Road
Brentwood, NY 11717
Tel: 631.243.3336
Fax: 631.243.3339

empresspedichair.com

Limited Warranty Registration From

Important

To validate the limited warranty, The Limited Warranty Registration Form MUST be filled out completely and return to EMPRESS within 30 days of original purchased date. This Limited Warranty is valid if EMPRESS received registration from.

[illegible]

Completed Warranty Registration Form to:

EMPRESS Mail: 335 Crooked Hill Road, Brentwood N.Y 11717
 Fax: 631.243.3339
 Email: Info@empresspedichair.com

Questionnaires (We value your voice!)

- | | | | | | |
|--|---|--------------------------|--------|--------------------------|--|
| 1. Are you satisfy with Pedicure Spa received? | Yes: | <input type="checkbox"/> | No: | <input type="checkbox"/> | |
| 2. Are you currently using EMPRESS product/s? If so, How long? | Yes: | <input type="checkbox"/> | No: | <input type="checkbox"/> | <input type="text"/> <input type="text"/> Year/s |
| 3. If not, What other product? | | | | | |
| 4. What is the most important features in choosing pedicure Spa? | Brand | <input type="checkbox"/> | Design | <input type="checkbox"/> | Function <input type="checkbox"/> |
| | Service | <input type="checkbox"/> | Price | <input type="checkbox"/> | Other <input type="checkbox"/> |
| 5. How long in business? | <input type="text"/> <input type="text"/> | Year/s | | | |
| 6. How often are you remodel you Salon? | <input type="text"/> <input type="text"/> | Year/s | | | |
| 7. Would you purchase EMPRESS product in the future? | Yes: | <input type="checkbox"/> | No: | <input type="checkbox"/> | |
| 8. Do you want to receive a promotion by email? | Yes: | <input type="checkbox"/> | No: | <input type="checkbox"/> | |
| 9. Any suggestion or Comment | | | | | |



*Copyright 2018 by Empress
Printed in USA*

EMPRESS

335 CROOKED HILL RD., BRENTWOOD, NY 11717
1.631.243.3336 WWW.EMPRESSPEDICHAIR.COM

SERVICE & ORDER PARTS

1.631.243.5300 WWW.PEDISPAFIX.COM