




1-800-477-6655
buyritebeauty.com


ONYX BARBER CHAIR CHM-2265 INSTRUCTION MANUAL

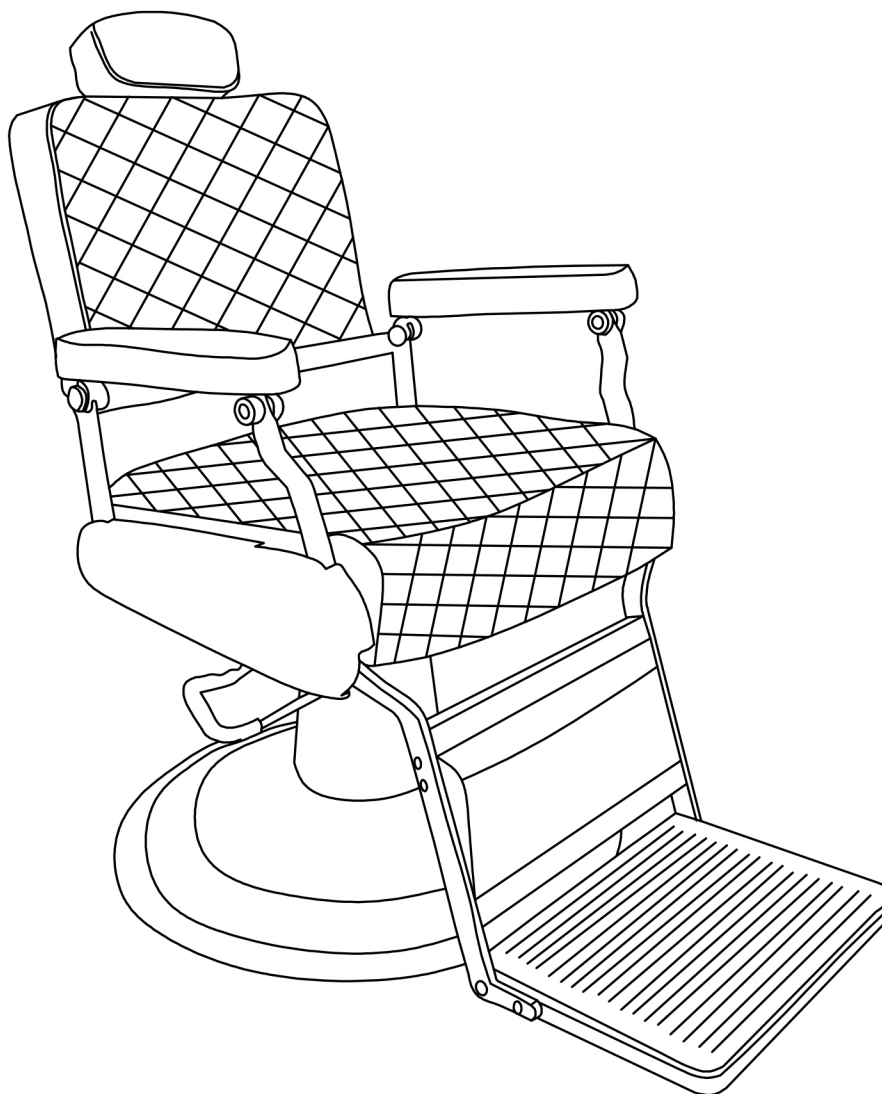



List of Parts & Tools




Chair

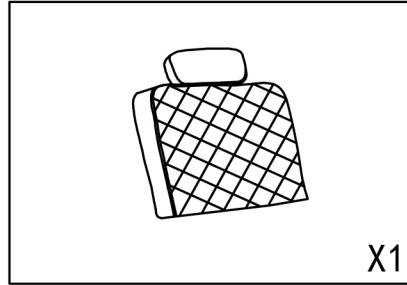


Backrest

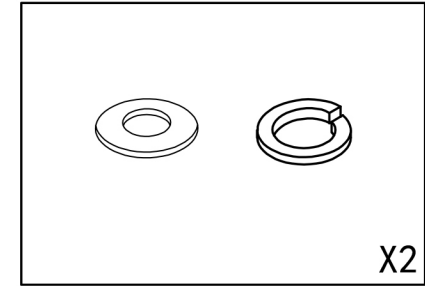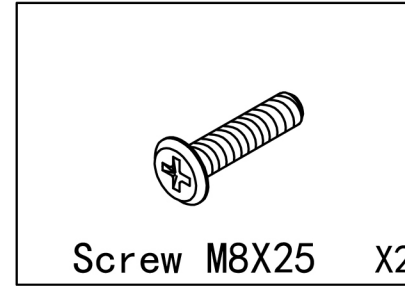

Washer M8

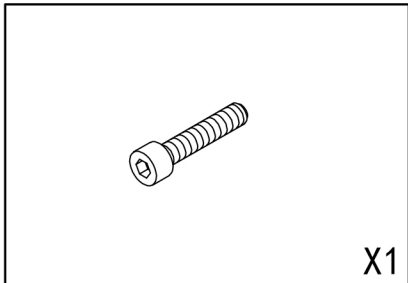

Screw M8X25

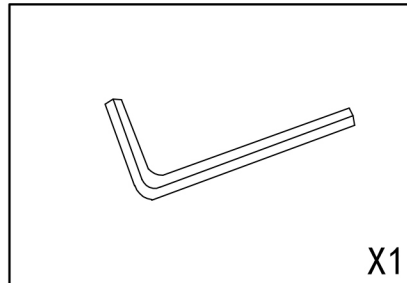




Wrench

Step 1



1. Locate the two screws, one on each side of the footrest. Use the wrench that came with your chair to remove both screws.
2. Align the holes in footrest with the corresponding holes in the metal calf rest bars. Take one screw and insert it through the calf rest into the hole on the footrest. Begin threading it by hand, turning it clockwise just a couple of turns is enough for now. Repeat the process on the other side.
3. Once both screws are hand threaded and aligned, switch to the provided wrench and tighten each screw just enough to hold securely. Do not overtighten, to avoid stripping or binding.

Step 2

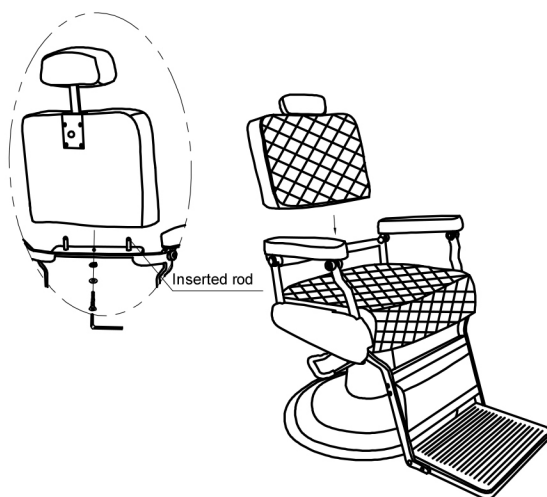

1. Find the mounting holes on the underside of the backrest. Line up the holes with the vertical posts already installed on the chair.
2. Carefully slide the backrest down onto the posts until it sits flush.
3. From underneath the chair, hand-thread the washers and nut through the chair frame located in the center.
4. Once hand-tightened, use a wrench to firmly secure the connection. Apply steady pressure with the wrench until the parts are snug. Avoid overtightening, as this can strip the bolt or damage the frame.

Product care




Brush away excess hair



Clean surface with damp cloth or use simple soap & water solution.



Avoid using corrosive cleaning agents such as bleaches.

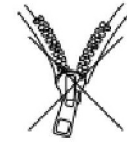

Do not remove upholstery for cleaning

Product Information

1. Enjoy your new chair!
2. Remember to always keep the hydraulic base in the upright position and never stand solely on the footrest as it will tip.
3. After assembly and before use, we suggest pumping the hydraulic to full height and back down several times to prime the hydraulic fluid. This will keep the pump smooth and responsive.
4. Note that short quick pumping is more effective for adjustments than pressing the lever all the way down each time.
5. If you have any questions or concerns, please contact our customer experience team at 912-335-4445.