

To Remove Drawer
Pull the drawer fully open so levers are visible.
Push "down" on the right lever(shown), and "up" on the left lever.
Holding levers in place, pull drawer toward you.


### To Reinsert Drawer

Bring ball retainer fully forward and <u>carefully</u> reinsert drawer member slide into the cabinet member slide, guiding the drawer member raceway between the ball bearings. Completely close drawer.

Open and close drawer to ensure the slide is fully engaged into the ball bearing track.

# THIS UNIT SHIPS FULLY ASSEMBLED

For safe operation, please use the included 3" wood screws to attach the cabinet to a framed wall. To conceal the screw heads you may place the screws behind the breadboard / drawers. See the illustration in the upper left corner for proper removal/reinsertion procedure for the drawer slides.

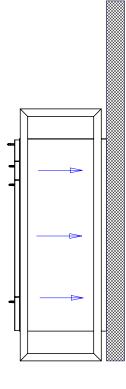

## Quantity -

# Finish Schedule - 963-18

Face Color -

Top Color -

Toe Color -

Reveal / Accent Color -


Hardware - Enova


Interior -

Other (Specify) -

# **General Notes:**

- 1. All counter tops are to be made removable wherever possible.
- 2. Items must be broken into managable sections For Shipping. Mark For Ease Of Reassembly.
- 3. Install Shipping Cleats Wherever Possible To Prevent Shipping Damage.
- 4. Purchased items Must Be Trial Fit Before Shipping.

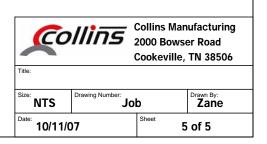

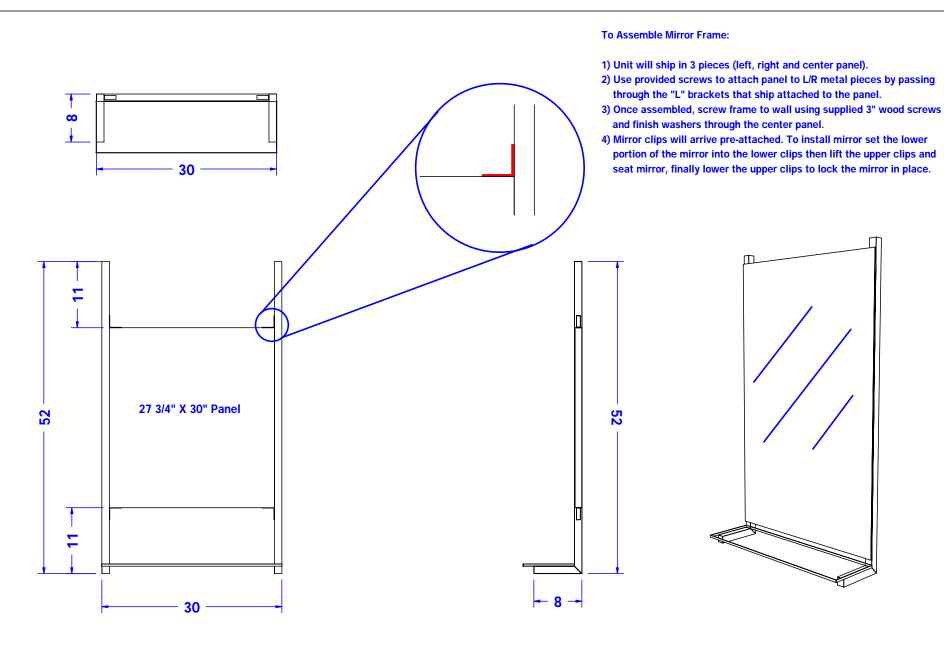

### Finish Schedule -

Face Color -

Top Color -

Toe Color -

Reveal / Accent Color -

Hardware -

Interior -

Other (Specify) -

# **General Notes:**

- 1. All counter tops are to be made removable wherever possible.
- 2. Items must be broken into managable sections For Shipping. Mark For Ease Of Reassembly.
- 3. Install Shipping Cleats Wherever Possible To Prevent Shipping Damage.
- 4. Purchased items Must Be Trial Fit Before Shipping.



Collins Manufacturing 2000 Bowser Road Cookeville, TN 38506

962-30 Installation

Size: Drawing Number: Drawn By:

Date: Sheet