



Attaching TS Bowl To Lexus

1. The bowl will already have the tilting mechanism (black round metal unit with rubber collar around it) attached to it. Please see Picture A1 and Picture A2.
2. Locate the “side studs” underneath the bowl that are sticking out of the black metal tilting mechanism attached to the bottom of the bowl. The “side studs” are the studs sticking out of the black metal tilting mechanism on the right and left side of the bowl. **Please note, the “side studs” are NOT those studs with the metal spring wrapped around it. Those are the “tension studs”.** Please refer to attached Picture B1 and B2 for help locating these “side studs”.
3. Locate the “front and back studs”. The “front stud” is the one located closest to the neck portion of the bowl and the “back stud” is the one located closest to the fixture and hose. Please refer to attached Picture B1 and B2 for help locating these “side studs” and “front and back studs”.
4. Unscrew all nuts that are screwed into the two “side studs” that are sticking out of the black metal tilting mechanism that is already attached to the bottom of the bowl. There will be 4 nuts located on each “side stud” (2 “standard nuts” and 2 “over-sized nuts”) when taking the bowl out of the box. The “standard nuts” will be smaller than “over-sized nuts”. Refer to Pictures B1 and B2.
5. Re-attach 1 of the “standard nuts” on each “side stud” as shown in attached Picture C1.
6. Lift bowl and place into proper hole slot locations on the back base of the chair as shown in attached pictured in Picture D1 and D2.
7. Using the other 2 provided standard nuts, screw the nuts onto the “front and back studs” sticking out of the bottom of the bowl. Please refer to attached picture E1 and E2

Picture A1



Picture A2




Picture B1



Picture B2




Picture C1

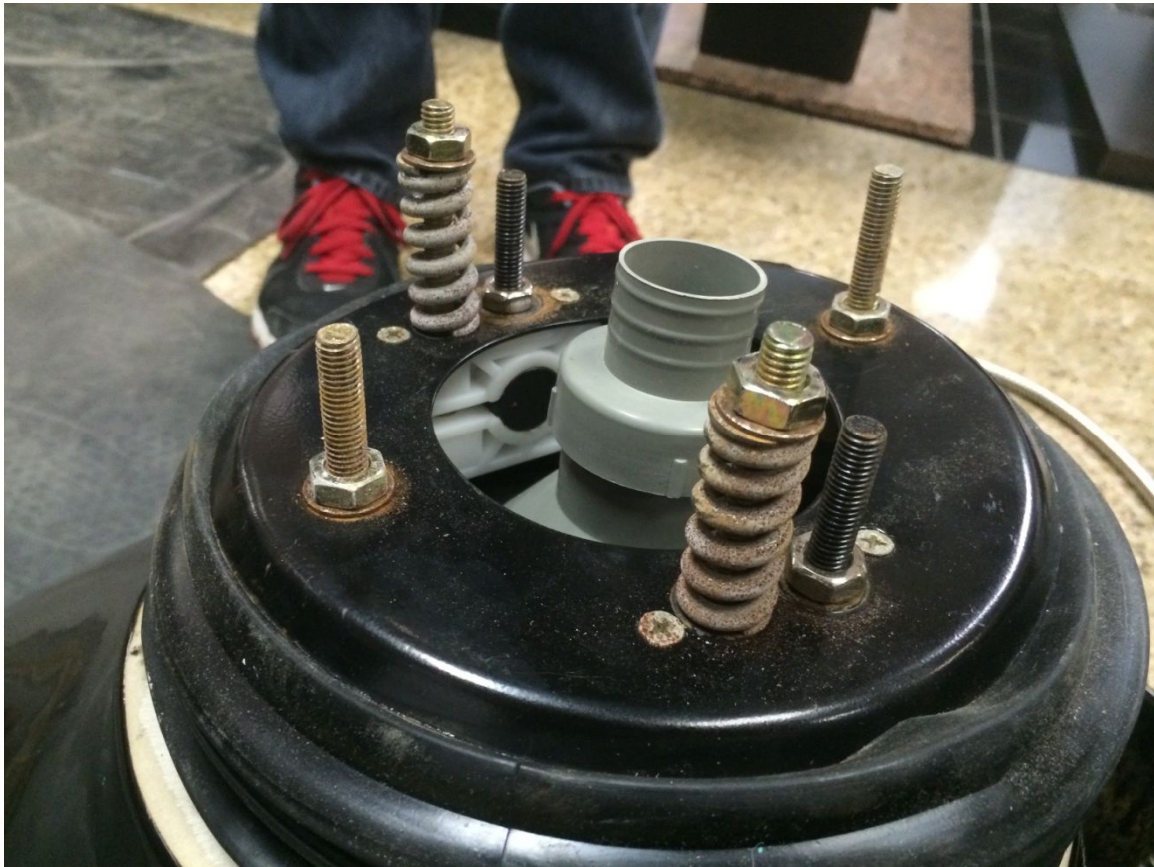


Picture D1



Picture D2

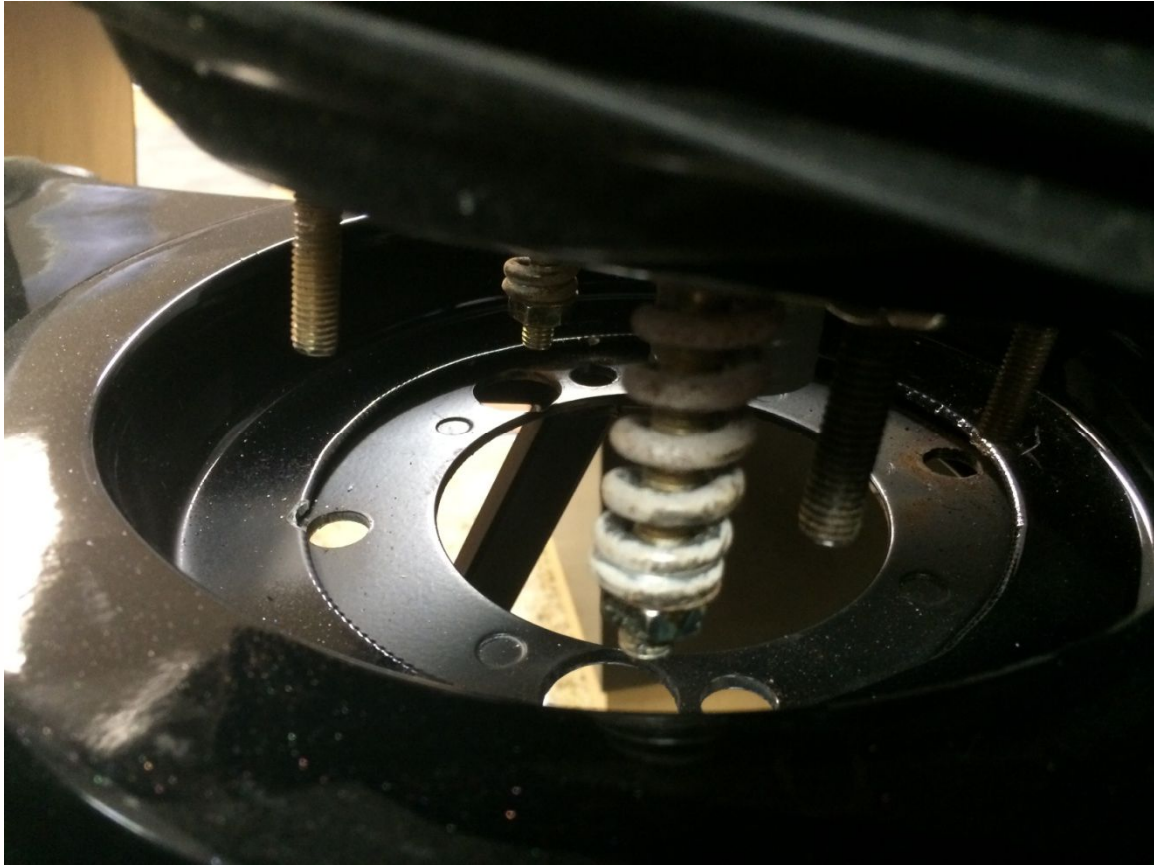

Picture E1

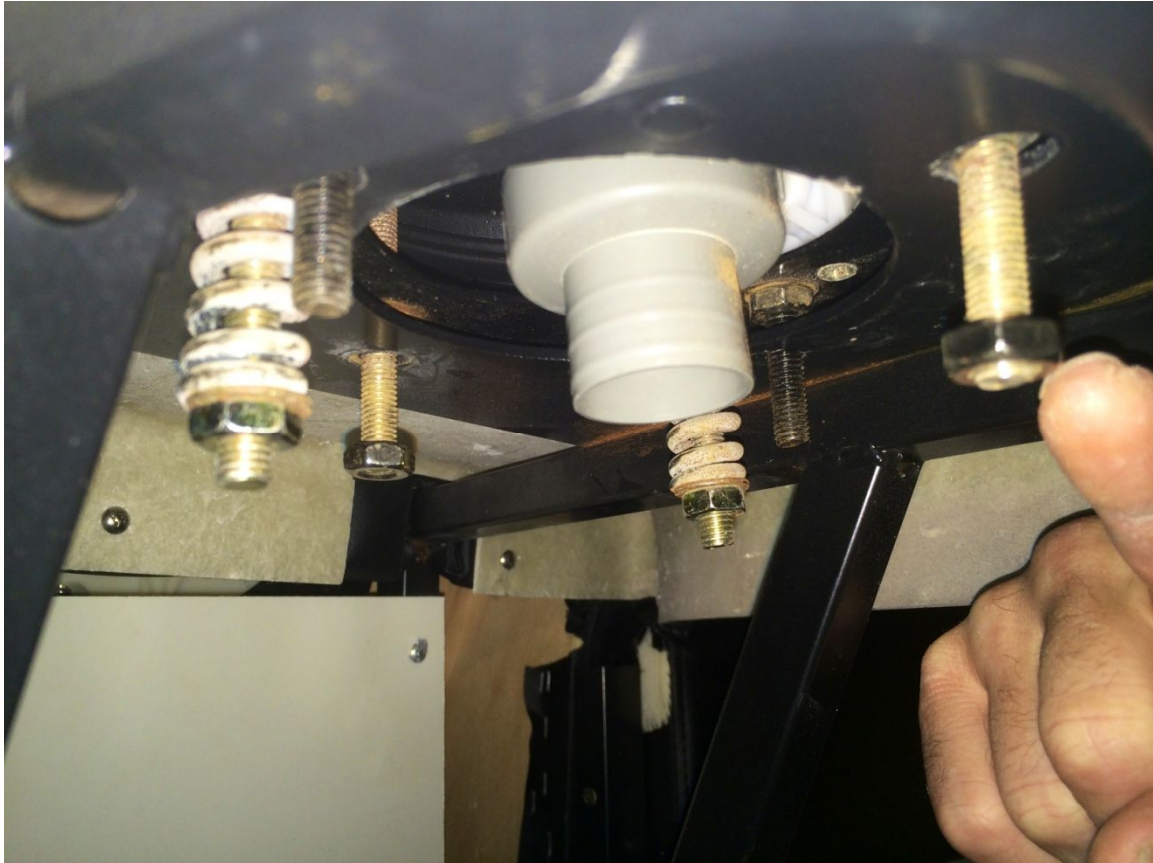

Picture E2

