




1-800-477-6655
buyritebeauty.com


CAESAR GOLD BARBER CHAIR

YLG-8779-GOLD

INSTRUCTION MANUAL

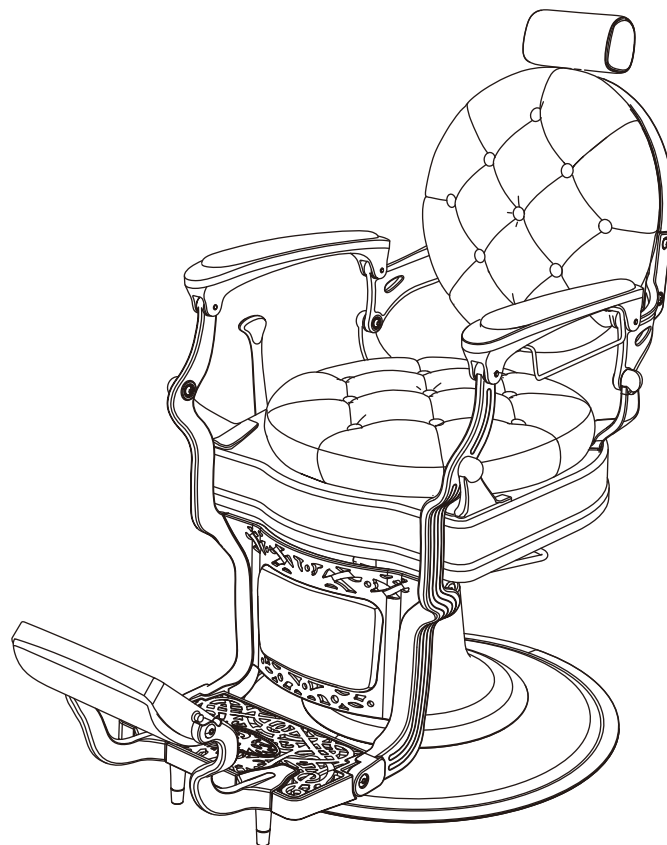


List of Parts & Tools

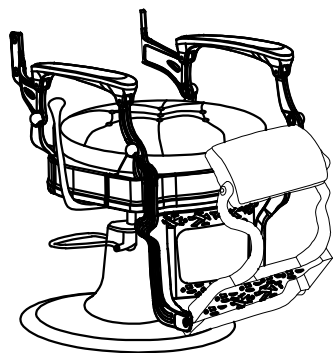


X1

Chair

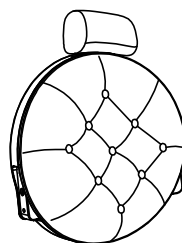


X1

Backrest & Headrest

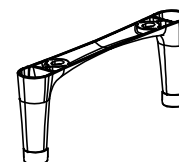


X1

Foot Peg

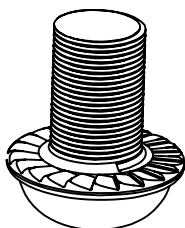


X2

M8 x 16mm
Pre-Installed

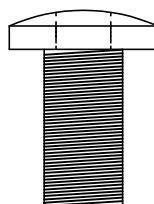

X4



M10 x 20mm
Pre-Installed

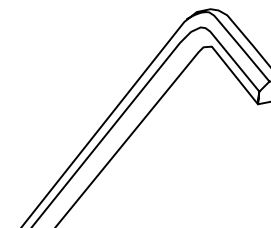



X1

6mm

Step 1

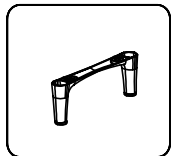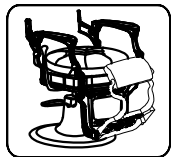


M8x2

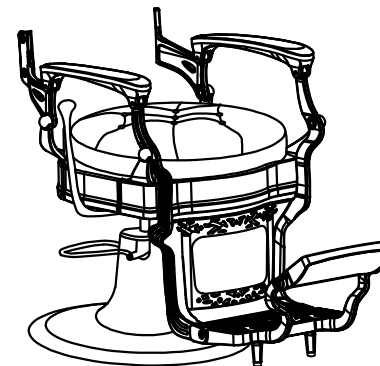
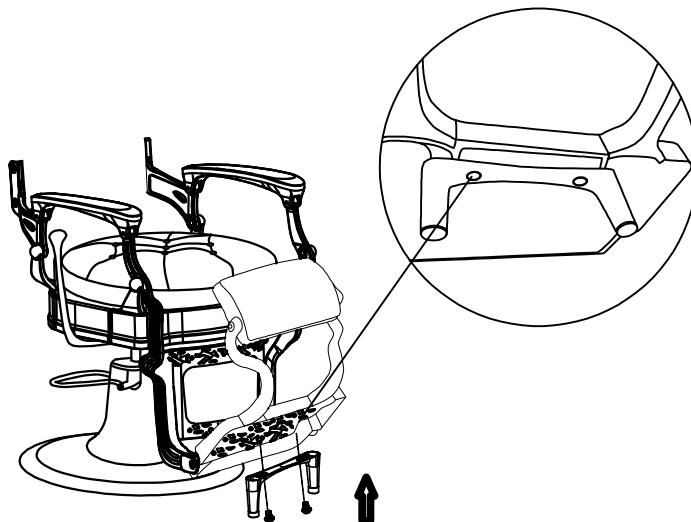


1. Remove the two M8 screws from the underside of the metal footrest and set them aside.
2. Align the holes in the foot peg with the matching holes on the footrest.
3. Reinsert the M8 screws and hand-tighten to hold the foot peg in place.
4. Use the provided wrench to fully tighten the screws. Do not overtighten, as this may damage the threads or mounting surface.

Step 2

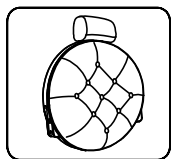

M10x4

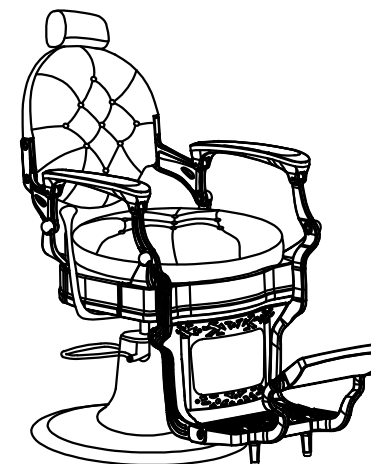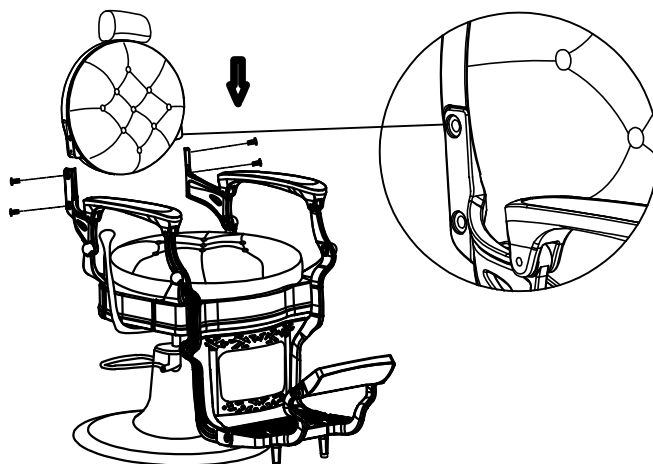

1. Remove the four M10 screws from the left and right sides of the backrest and set them aside.
2. Align the backrest so that its mounting holes match the holes on the chair frame.
3. Insert one screw through the top hole on each side of the frame and into the backrest. Repeat for the bottom holes. Do not fully tighten yet.
4. After all four screws are in place, use the provided wrench to tighten them gradually. Start each screw evenly to maintain proper alignment. Do not overtighten, as this may damage the threads or the chair frame.


Product care




Brush away excess hair



Clean surface with damp cloth or use simple soap & water solution.

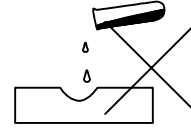

Avoid using corrosive cleaning agents such as bleaches.

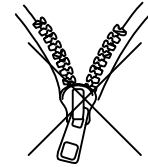

Do not remove upholstery for cleaning

Product Information

1. Enjoy your new chair!
2. Remember to always keep the hydraulic base in the upright position and never stand solely on the footrest as it will tip.
3. After assembly and before use, we suggest pumping the hydraulic to full height and back down several times to prime the hydraulic fluid. This will keep the pump smooth and responsive.
4. Note that short quick pumping is more effective for adjustments than pressing the lever all the way down each time.
5. If you have any questions or concerns, please contact our customer experience team at 912-335-4445.